

MHC-300

SERVICE MANUAL

US Model

- MHC-300 is composed of following models. As for the service manual it is issued for each component model, then, please refer to it.

COMPONENT MODEL NAME FOR MHC-300

AMPLIFIER, CD, TUNER	HCD-H300
SPEAKER SYSTEM	SS-H1600L

SPECIFICATIONS

Power requirements 120V AC, 60Hz
Power consumption 80 watts
Dimensions Approx. 225 × 125 × 265 mm
(w/h/d)
(8 ⁷/₈ × 5 × 10 ¹/₂ inches)
Weight Approx. 4.5kg (9 lb 15 oz)
Design and specifications subject to change
without notice.

Note

This appliance conforms with EEC Directive
87/308/EEC regarding interference
suppression.

MINI HI-FI
COMPONENT SYSTEM
SONY®

ACCESSORY & PACKING MATERIAL

<u>Ref.No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
	I-465-707-11	REMOTE COMMANDER (RM-S160)	
	I-501-374-11	ANTENNA, LOOP	
	3-707-584-11	COVER, BATTERY (REMOTE COMMANDER)	
	4-943-847-01	CUSHION, UPPER (HCD-H300)	
	4-943-848-01	CUSHION, LOWER (HCD-H300)	
	* 4-950-318-01	INDIVIDUAL CARTON	
	I-559-984-11	CORD, SPEAKER CONNECTION	
	⚠ I-575-706-11	CORD, POWER	
	3-754-599-21	MANUAL, INSTRUCTION (ENGLISH)	
	* 4-944-059-01	CUSHION (SS-HI600L)	
	* 4-920-151-02	SHEET, PROTECTION (SS-HI600L)	

• Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

Note: The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

HCD-H300

SERVICE MANUAL

US Model

This set is the tuner, CDP and amplifier section in MHC-300.

- HCD-H300 is a model which has been designed based on the HCD-H1600. The major different points of them are the mechanical parts.
- The electrical specifications of this model are almost identical to those of HCD-H1600.
This manual contains only the points which differ from HCD-H1600.
- Refer to the HCD-H1600 Service Manual for related information not contained in this manual.

SPECIFICATIONS

Tuner Section (HCD-H300)

System FM stereo, FM/AM
superheterodyne tuner

FM tuner section

Tuning range 87.5 — 108 MHz
Antenna terminals 75 ohms unbalanced
Intermediate frequency 10.7 MHz

AM tuner section

Tuning range 530 — 1,710 kHz
(with the AM tuning interval
set at 10 kHz)
531 — 1,710 kHz
(with the AM tuning interval
set at 9 kHz)
Antenna AM loop antenna
External antenna terminals
Intermediate frequency 450 kHz

Amplifier Section (HCD-H300)

Continuous RMS power output 30 + 30 watts (6 ohms at 1
kHz, 5% THD)
Inputs MIX MIC (minijack):
sensitivity 1 mV,
impedance 600 ohms
DAT IN:
sensitivity 450 mV,
impedance 47 kilohms
VIDEO/AUX (phono jacks):
sensitivity 450 mV,
impedance 47 kilohms

Model Name Using Slimar Mechanism	HCD-H1700
CD Mechanism Name	CDM13B-5BD4A
Base Unit Name	BU-5BD4A

Outputs HEADPHONES
(stereo minijack):
accepts headphones of 8
ohms or more
SPEAKER:
accepts speakers of 6 to 16
ohms

Compact Disc Player Section (HCD-H300)

System Compact disc digital audio
system
Laser Semiconductor laser
($\lambda = 780 \text{ nm}$)
Emission duration continuous
Signal to noise ratio More than 90 dB
Dynamic range More than 90 dB
Harmonic distortion Less than 0.05% (at 1 kHz)
Channel separation More than 90 dB

MINI HI-FI
COMPONENT SYSTEM
SONY®

EXPLODED VIEWS

PAGE	HCD-H1600	HCD-H300
	No. Part No. Description	Part No. Description
32	1 X-4941-581-1 PANEL ASSY, FRONT 7 * A-4341-660-A PANEL BOARD, COMPLETE 13 * 4-944-211-11 PANEL BACK	X-4942-291-1 PANEL ASSY, FRONT * A-4347-418-A PANEL BOARD, COMPLETE * 4-944-211-31 PANEL BACK
32	56 * A-4345-819-A MAIN BOARD, COMPLETE	* A-4347-419-A MAIN BOARD, COMPLETE
34	102 A-4604-752-A HOLDER (MG) ASSY	A-4604-752-B HOLDER (MG) ASSY
35	155 * A-4617-759-A BD BOARD, COMPLETE	* A-4617-936-A BD BOARD COMPLETE

ELECTRICAL PARTS LIST

40	CN101 1-566-859-11 SOCKET, CONNECTOR 15P IC305 8-759-154-82 IC UPD78134GF-033-3B9	not used 8-759-061-49 IC UPD78134GF-043-3B9
44	F951 1-532-783-21 FUSE, MICRO 5A 125V F952 1-532-783-21 FUSE, MICRO 5A 125V	not used not used

SS-H1600L

SERVICE MANUAL

US Model

- SS-H1600L are the **SPEAKER SYSTEM** in MHC-300.

- SS-H1600L is almost the same as the model SS-H1600 (US Model) previously product.
- This model contains only the points which differ from SS-H1600 (US Model).


SS-H1600 SERVICE MANUAL Page 3

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
1	X-4942-267-1	PANEL ASSY, FRONT
SP1	1-544-445-11	SPEAKER (12CM)

SS-H1600

SERVICE MANUAL

*US Model
Canadian Model
AEP Model
E Model*

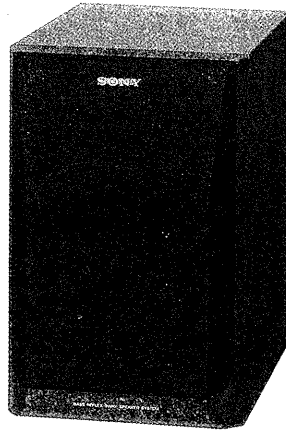


SPECIFICATIONS

Speaker system	(US model) 2-way (Canadian, AEP, E models) 3-way
Speaker units	(US model) Woofer: 13cm(5 ¹ / ₈ in.) cone type Tweeter: 5cm(2 in.) cone type (Canadian, AEP, E models) Woofer: 13cm(5 ¹ / ₈ in.) cone type Tweeter: 5cm(2 in.) cone type Super Tweeter: 2cm(1 ³ / ₁₆ in.) dome type
Power handling capacity	(US model) Maximum input power 50W (Canadian, AEP, E models) Maximum input power 60W
Sensitivity	88dB/W/m
Effective frequency range	65-20,000 Hz
Rated impedance	6 ohms
Dimensions	Approx. 165x250x230mm(w/h/d) (6 ¹ / ₂ x 9 ⁷ / ₈ x 9 ¹ / ₈ in.)
Weight	Approx. 2.6 kg per speaker (5 lb 12 oz)

Design and specifications subject to change without notice.


1. FRONT PANEL REMOVAL

Note : Be careful not to scratch the cabinet.

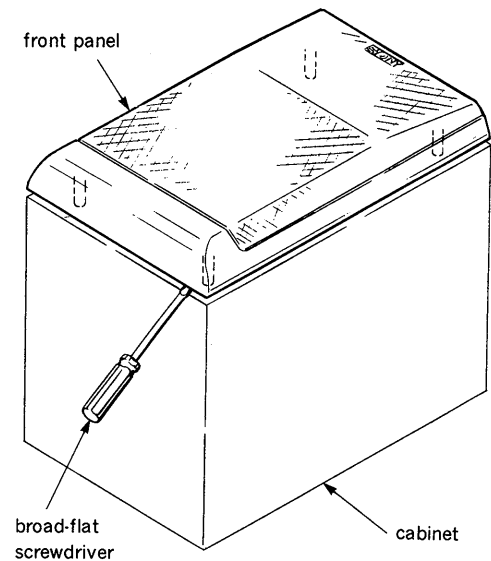


SPEAKER SYSTEM
SONY®

2. WIRING DIAGRAM
(US model)

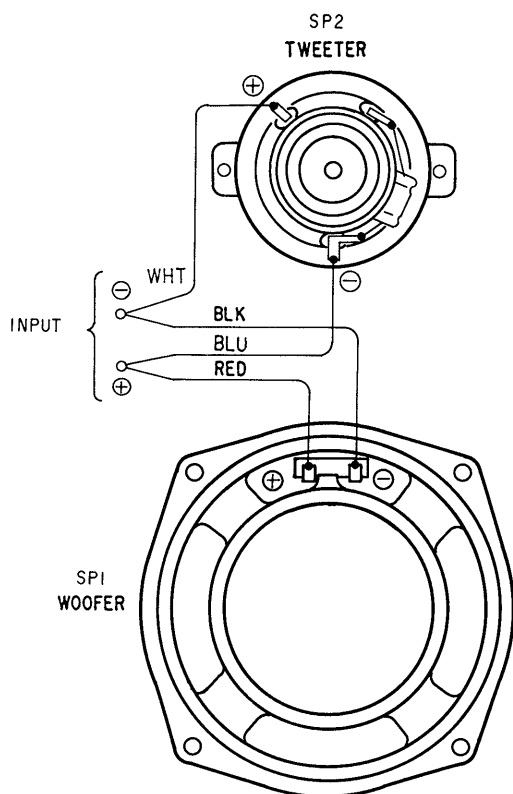

(Canadian, AEP, E models)

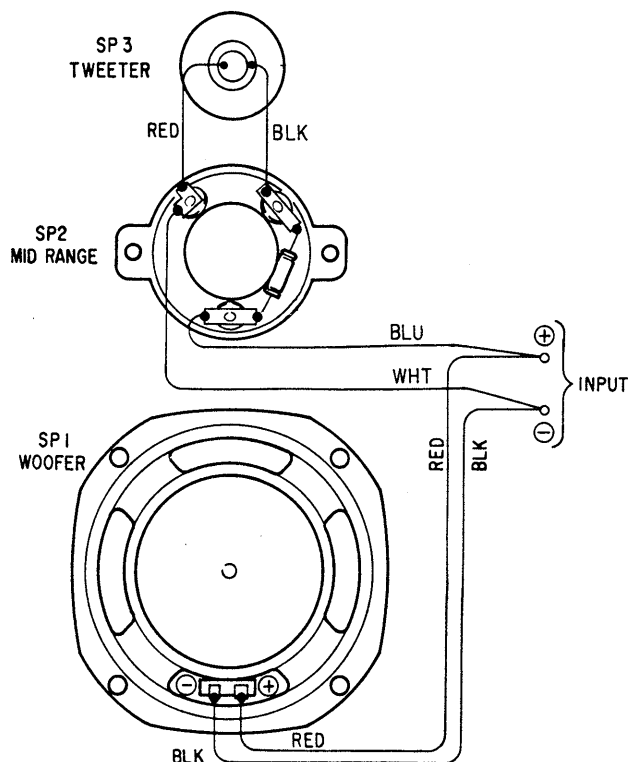


3. EXPLODED VIEW AND PARTS LIST

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Color Indication of Appearance Parts
Example:
KNOB, BALANCE (WHITE)...(RED)
Parts Color Cabinet's Color

(US model)

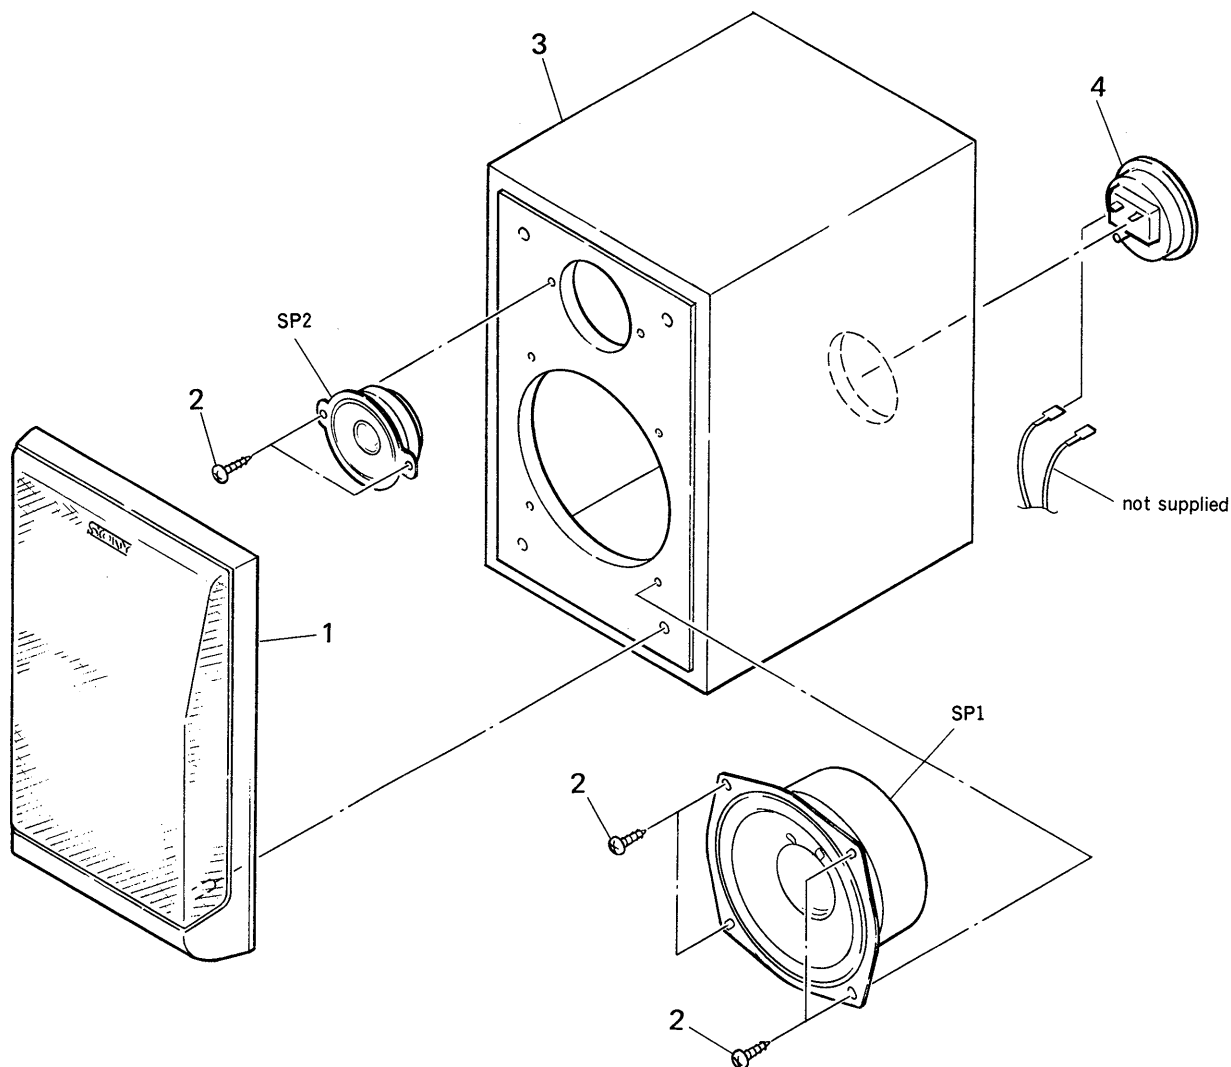


Ref.No	Part No.	Description	Remarks	Ref.No	Part No.	Description	Remarks
1	X-4941-290-1	PANEL ASSY, FRONT		4	1-537-145-11	TERMINAL BOARD (SPEAKER)	
2	4-874-614-11	SCREW (4) (3.5×14), TAPPING		SP1	1-544-428-11	SPEAKER (12CM)	
3	X-4941-289-1	CABINET ASSY, SPEAKER		SP2	1-544-262-11	SPEAKER (5CM)	
ACCESSORY & PACKING MATERIALS							*****
					4-920-151-01	SHEET, PROTECTION	
					*4-944-059-01	CUSHION	

3. EXPLODED VIEW AND PARTS LIST

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Color Indication of Appearance Parts
Example:
KNOB, BALANCE (WHITE)...(RED)
Parts Color Cabinet's Color

(Canadian, AEP, E models)

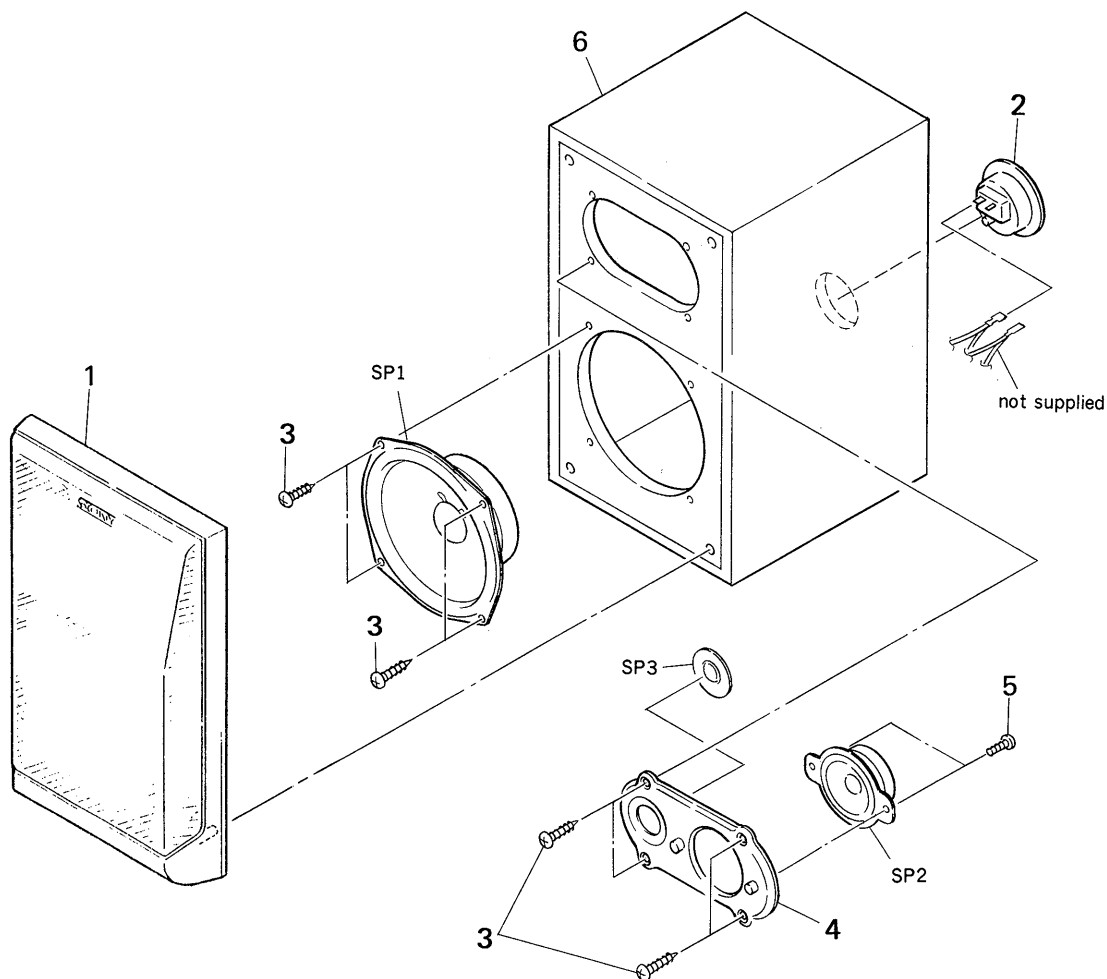

Ref.No	Part No.	Description	Remarks	Ref.No	Part No.	Description	Remarks
1	X-4941-312-2	PANEL ASSY, FRONT		6	X-4941-313-2	CABINET ASSY, SPEAKER (Canadian, AEP, E)	
2	1-537-145-11	TERMINAL BOARD (SPEAKER)		6	X-4941-423-2	CABINET ASSY, SPEAKER (Germany)	
3	4-874-614-11	SCREW +BVTP3.5X14		SP1	1-544-445-11	SPEAKER (12CM)	
4	*X-4941-441-1	FRAME ASSY, TW		SP2	1-544-446-11	SPEAKER (5CM)	
5	7-685-646-79	SCREW +BVTP3X8 TYPE2 SLIT		SP3	1-544-235-11	SPEAKER (2CM)	
				ACCESSORY & PACKING MATERIALS			

				1-575-495-11	CORD, SPEAKER (AEP, Germany)		
				3-753-187-11	MANUAL, INSTRUCTION (AEP, Germany)		
				4-920-151-01	SHEET, PROTECTION		
				*4-944-059-01	CUSHION		

HCD-H1600

SERVICE MANUAL

*AEP Model
UK Model*



This set is the tuner, deck, CDP and amplifier section in MHC-1600.

SPECIFICATIONS

Tuner Section

System FM stereo, FM/AM
superheterodyne tuner

FM tuner section

Tuning range 87.5 — 108 MHz

Antenna terminals 75 ohms unbalanced

Intermediate frequency
10.7 MHz

AM tuner section

Tuning range For Europe and U.K.
(except Italy)
MW: 531 — 1,602 kHz
LW: 153 — 279 kHz
For Italy
MW: 522 — 1,611 kHz
LW: 144 — 288 kHz

Antenna AM loop antenna
External antenna terminals

Intermediate frequency
450 kHz

Amplifier Section

Continuous RMS power output
30 + 30 watts (6 ohms at 1
kHz, 5% THD)
25 + 25 watts (6 ohms, DIN,
1 kHz)

Music power output
(for the Europe and U.K. model)
45 watts

Peak music power output
(for the models other than Europe and U.K.)
280 watts (6 ohms)

Inputs MIX MIC (minijack):
sensitivity 1 mV,
impedance 600 ohms
DAT IN:
sensitivity 450 mV,
impedance 47 kilohms
For Europe and U.K.
PHONO (phono jacks):
sensitivity 5 mV,
impedance 47 kilohms

Model Name Using Similar Mechanism	CDP-H3600
CD Mechanism Name	CDM13BD4A
Base Unit Name	BU-5BD4A

Outputs HEADPHONES
(stereo minijack):
accepts headphones of 8
ohms or more.
SPEAKER:
accepts speakers of 6 to 16
ohms

Compact Disc Player Section

System Compact disc digital audio
system
Laser Semiconductor laser
($\lambda = 780 \text{ nm}$)
Laser output Emission duration continuous
Max. 44.6 μW
* This output is the value
measured at distance of
about 200 mm from the
objective lens surface on
the Optical Pick-up Block.
Signal to noise
ratio More than 90 dB
Dynamic range More than 90 dB
Harmonic distortion
Less than 0.05% (at 1 kHz)
Channel separation
More than 90 dB
Output level 2 V (at 50 kilohms)
Load impedance More than 10 kilohms

MINI HI-FI
COMPONENT SYSTEM
SONY®



TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
1.	GENERAL	3
2.	DISASSEMBLY	5
3.	ADJUSTMENTS	
	Electrical Adjustments	8
4.	DIAGRAMS	
4-1.	Blockdiagram	11
4-2.	Circuit Boards Location	13
4-3.	Semiconductor Lead Layouts	14
4-4.	Printed Wiring Boards	
—	Audio Section — (Former Type)	15
4-5.	Printed Wiring Boards	
—	Audio Section — (New Type)	20
4-6.	Schematic Diagram	
—	Audio Section —	25
4-7.	Printed Wiring Boards	
—	CD Section —	30
4-8.	Schematic Diagram	
—	CD Section —	32
4-9.	Waveforms	35
5.	EXPLODED VIEWS	
5-1.	Front Panel Section	36
5-2.	Chassis Section	37
5-3.	CD Mechanism Section-1	38
5-4.	CD Mechanism Section-2	39
6.	ELECTRICAL PARTS LIST	40

G: Germany

IT: Italian

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  OR DOTTED LINE WITH MARK  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.


This section is extracted from instruction manual.

Parts Identification

Refer to the pages indicated in ● for use of the buttons.

Tuner/Amplifier/CD player


- 1 Display window
- 2 MEMORY/NEXT button 20
- 3 TIMER SET button 106
- 4 TUNING PRESET/TIMER +/- buttons 20
- 5 PRESET/TUNING button and PRESET indicator 52
- 6 BAND button 48
- 7 Remote control sensor
- 8 SYSTEM POWER button 24
- 9 MIC (microphone) LEVEL control 111
- 10 MIX MIC (mixing microphone) input jack (minijack) 111
- 11 CLOCK SET button 20
- 12 TIMER SELECT button 110
- 13 HEADPHONES jack (stereo minijack) 22
- 14 PLAY MODE buttons
 - CONTINUE button 32
 - SHUFFLE button 32
 - PROGRAM button 38
- 15 CHECK button 40
- 16 EDIT/TIME FADE button 82
- 17 PRESET button and indicators 62
- 18 EQ (equalizer) ON/OFF button 62
- 19 FUNCTION button 16
- 20 VOLUME control 22
- 21 WAKE UP button 111
- 22 S-SUR (Simulated surround) button and indicator 22
- 23 DBFB (Dynamic Bass Feedback) button and indicator 22
- 24 CD operation buttons
 - ⏏ : OPEN/CLOSE 24
 - : Stop 24
 - ⏮⏭ : Play/pause 24
 - ⏮⏭⏮⏭⏮⏭⏭⏭⏭ : Manual search (when kept depressed)/Automatic Music Sensor (when pressed) 26
- 25 Disc tray 24

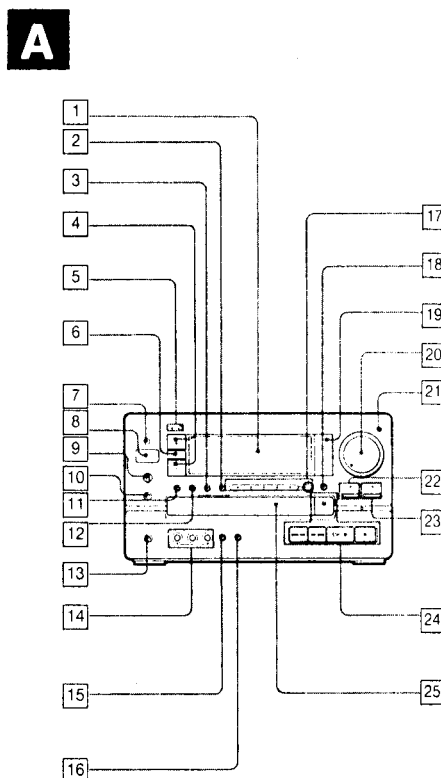

Parts Identification


Cassette Deck Section B

- 1 CD SYNCHRO (CD synchronized recording) button and indicator 88
- 2 NORMAL SPEED (normal-speed dubbing) button and indicator 76
- 3 HIGH SPEED (high-speed dubbing) button and indicator 76
- 4 Cassette holder (Deck A) 54
- 5 △ (eject) button (Deck A) 54
- 6 RESET button 56
- 7 DOLBY NR (Dolby Noise Reduction) button 56
- 8 DIRECTION MODE button 54
- 9 Cassette holder (Deck B) 70
- 10 Tape operation buttons (for Deck B only)
 - ⏏ : PAUSE 54
 - : REC (recording) 70
- 11 Tape operation buttons (for Deck A and B)
 - ⏮ ⏭ : Fast winding 56
 - : Stop 54
 - ⏭ : Forward play 54
 - ⏮ : Reverse play 54
- 12 △ (eject) button (Deck B) 70
- 13 DECK A/B selection button 54
- 14 Display window

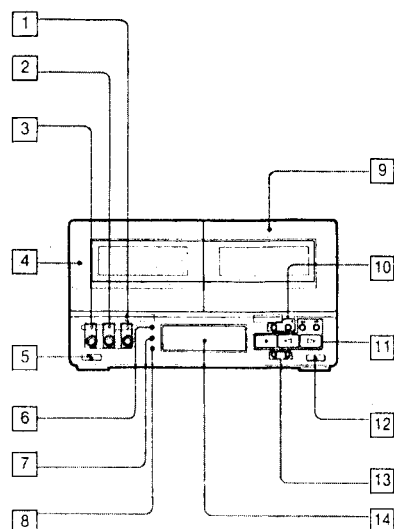B


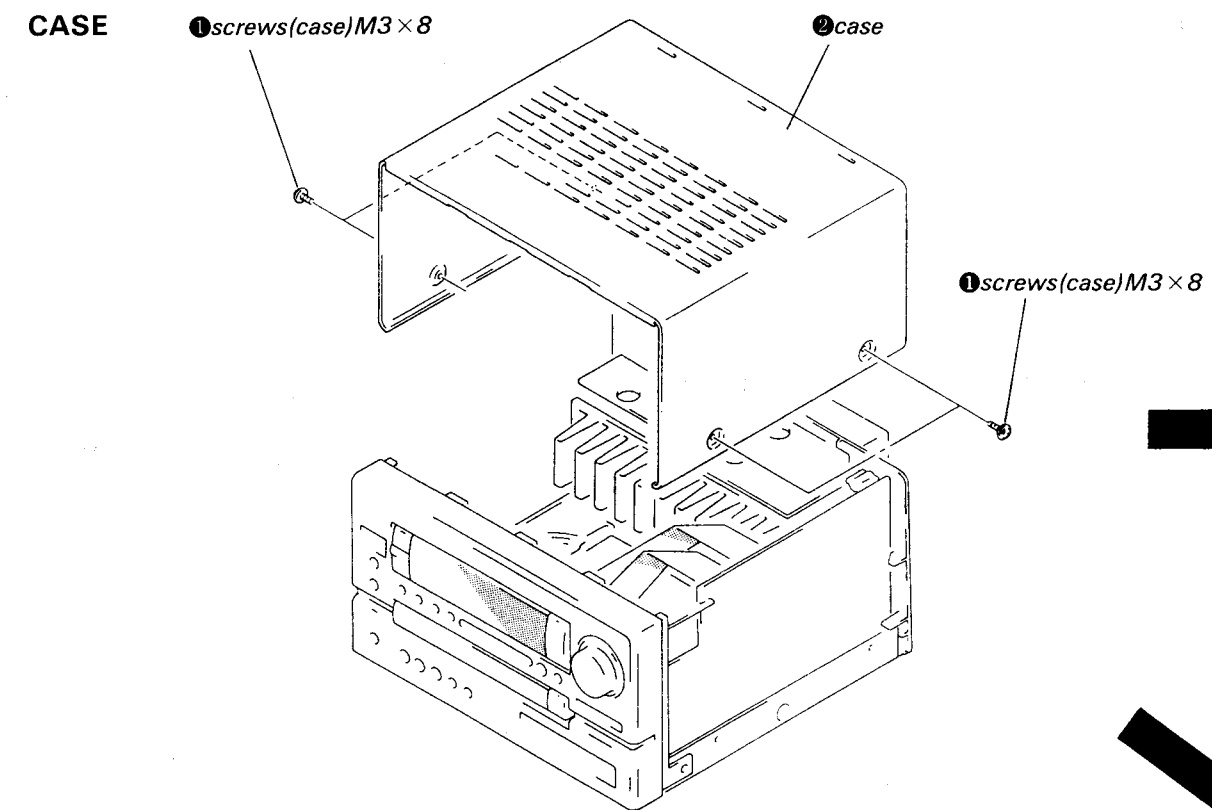
Remote Commander C

- 1 TIMER SELECT button 110
- 2 CLOCK DISPLAY button 20
- 3 Cassette deck select button
- 4 DECK A/B selector 54
- 5 CD player select button
- 6 CD player operation buttons 24
- 7 TUNER/EQ/CD selector 34
- 8 CHECK (CD player) 40
- 9 BAND (tuner) button 48
- 10 Tuner select button
- 11 PHONO select button 18
- 12 DAT select button 18
- 13 VIDEO select button 18
- 14 S-SUR button 22
- 15 DBFB button 22
- 16 SLEEP timer button 110
- 17 SYSTEM POWER button 24
- 18 Tape operation buttons 54 72
- 19 TIME button 28
- 20 PLAY MODE buttons 30
- 21 CLEAR button 36
- 22 TUNER/EQ/CD numeric buttons 34
- 23 MEMORY button 66
- 24 VOLUME +/- control buttons 22
- 25 EQ ON/OFF button 62
- 26 CURSOR CONTROL buttons 64

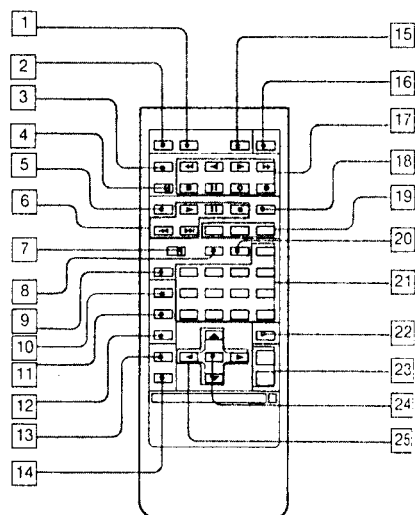
C


SECTION 2 DISASSEMBLY


Note: Follow the disassembly procedure in the numerical order given.




BACK PANEL

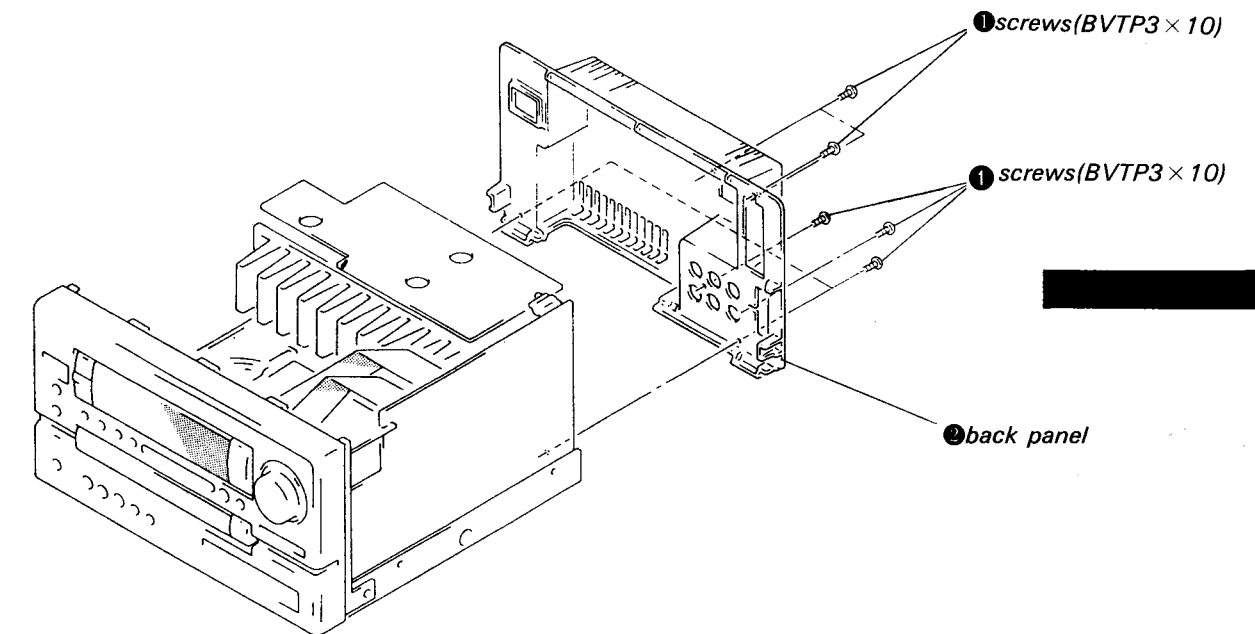


PANEL BOARD

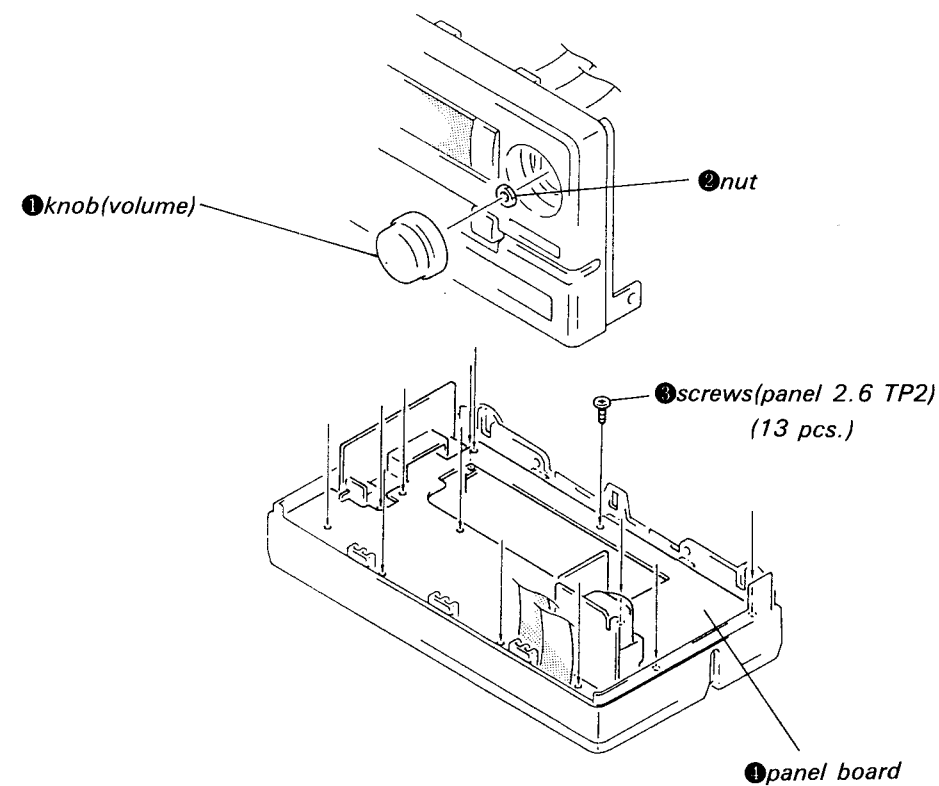


FRONT PANEL

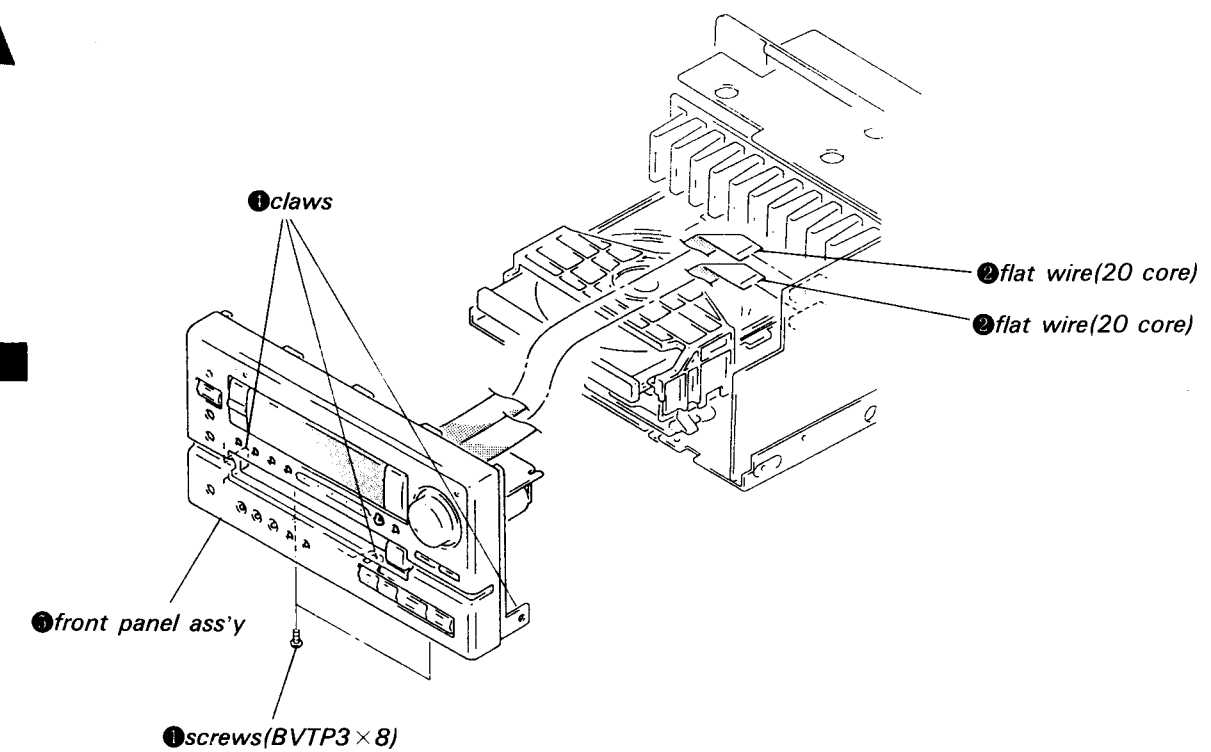


BACK PANEL

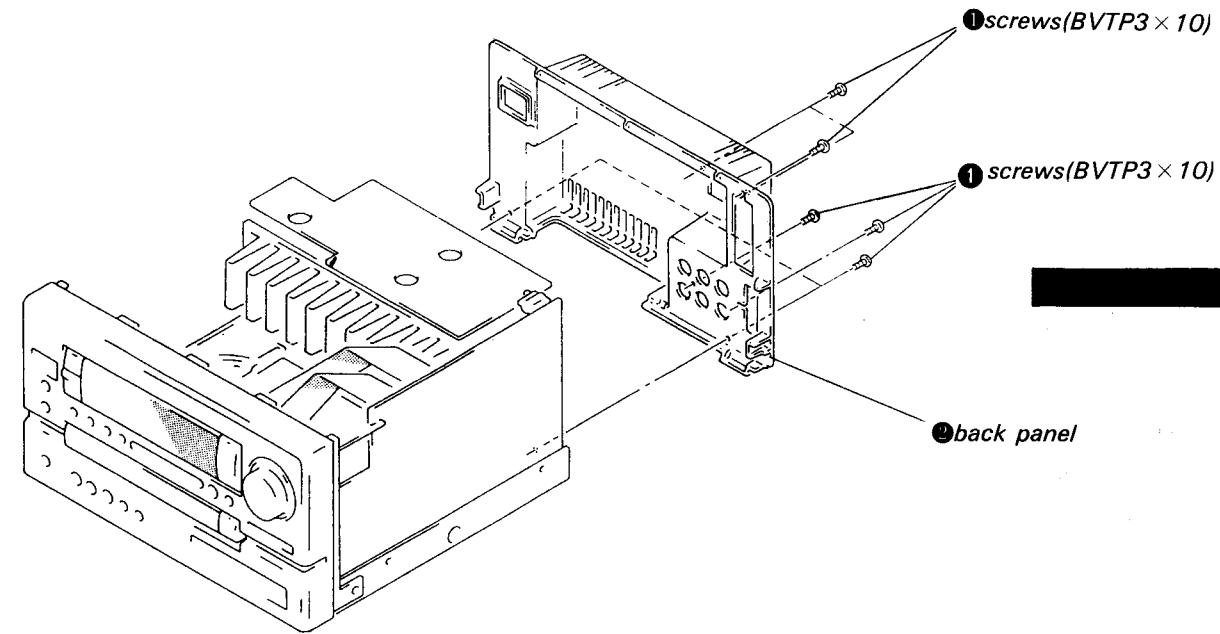


POWER BLOCK

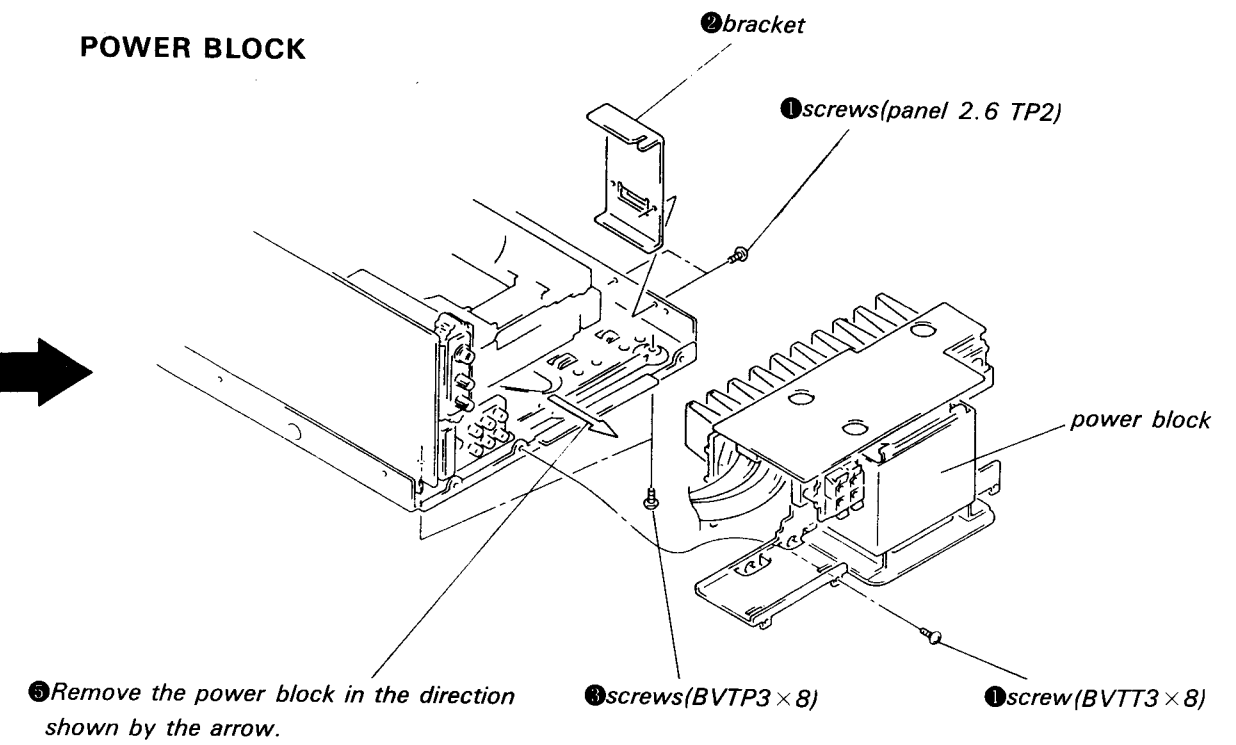

FRONT PANEL

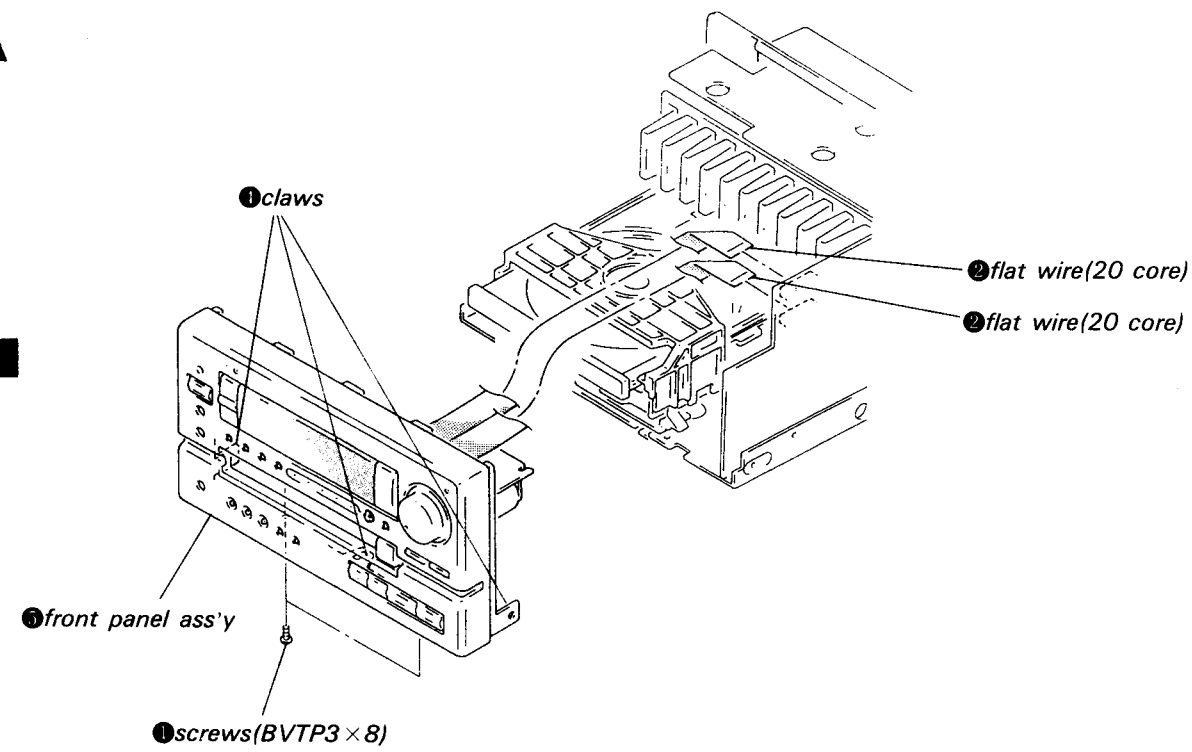

CD BLOCK

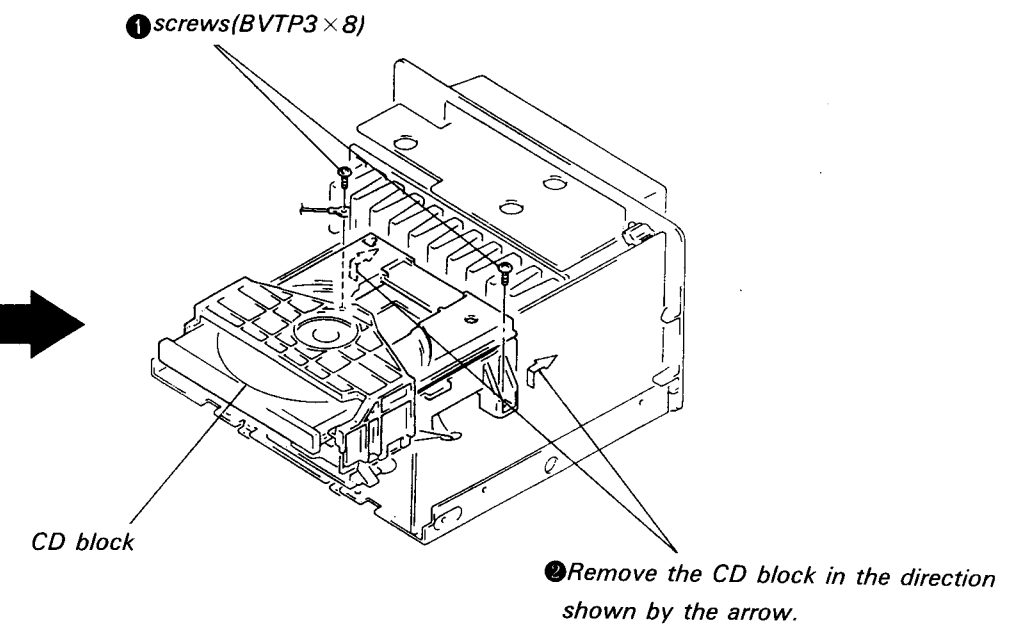


SECTION 3 ADJUSTMENTS ELECTRICAL ADJUSTMENTS

CD SECTION

Note :


1. CD Block basically constructed to operate without adjustment. Therefore, check each item in order given.
2. Use YEDS-18 disc (3-702-101-01) unless otherwise indicated.
3. Use the oscilloscope with more than $10M\Omega$ impedance.
4. Clean an object lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.

S Curve Check

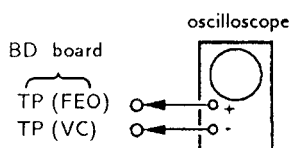

Procedure :

1. Connect oscilloscope to test point TP (FEO) on BD board.
2. Connect between test point TP (FES) and TP (VC) by lead wire.
3. Turned Power switch on and actuate the focus serch. (actuate the focus serch when disc table is moving in and out.)
4. Check the oscilloscope waveform (S curve) is symmetrical between A and B. And confirm peak to peak level within $3\pm 1V_{p-p}$.

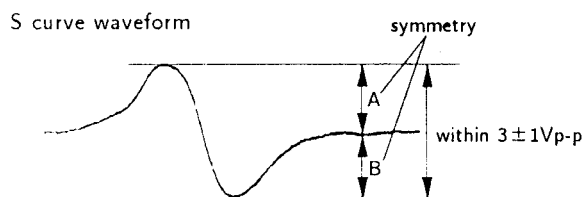


5. After check, remove the lead wire connected in step 2.

Note : • Try to measure several times to make sure that the ratio of A : B or B : A is more than 10 : 7.

• Take sweep time as long as possible and light up the brightness to obtain best waveform.

RF Level Check

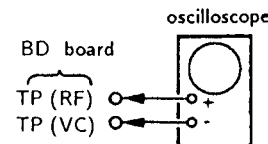


Procedure :

1. Connect oscilloscope to test point TP (RF) on BD board.
2. Turn Power switch on.
3. Put disc (YEDS-18) in and playback.
4. Confirm that oscilloscope waveform is clear and check RF signal level is correct or not.


Note :

Clear RF signal waveform means that the shape "◇" can be clearly distinguished at the center of the waveform.

RF signal waveform

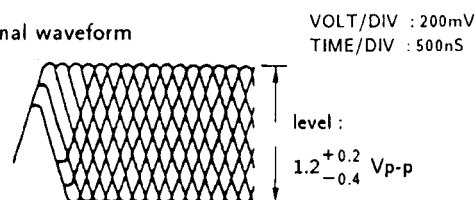

E-F Balance Check

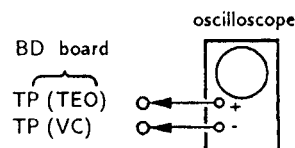

Procedure :

1. Connect test point TP (ADJ) to ground and TP (TES) to TP (VC) with lead wire.
2. Connect oscilloscope to test point TP (TEO) on BD board.
3. Turn Power switch on.
4. Put disc (YEDS-18) in and playback.
5. Confirm that the oscilloscope waveform is symmetrical on the top and bottom in relation to 0V, and check this level.

Traverse oscilloscope




6. Remove the lead wire connected in step 1.

TUNER SECTION

RF PLL Free-run Frequency Check

Procedure :

1. Connect frequency counter to test point (PCK) with lead wire.

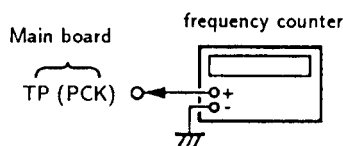

2. Turn Power switch on.
3. Confirm that reading on frequency counter is 4. 3218MHz.

Focus/Tracking Gain


This gain has a margin, so even if it is slightly off. There is no problem.

Therefore, do not perform, this adjustment.


Please note that it should be fixed to mechanical center position when you moved and do not know original position.

FM SECTION ADJUSTMENTS

Setting :

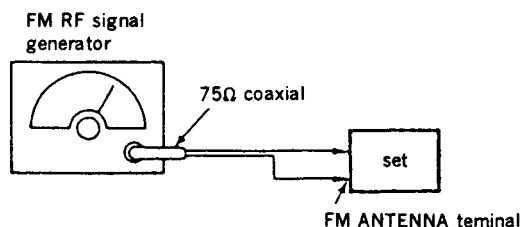

Carrier frequency : 98MHz
Modulation : 1kHz, 40kHz deviation (AEP, UK, G, IT)

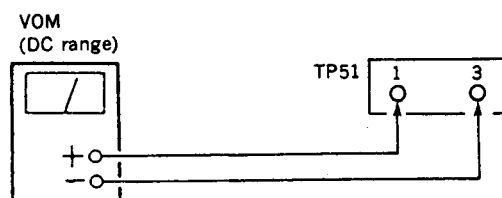

FM Discriminator Alignment (NULL Check)

Band : FM

Procedure :

1. Supply a 1mV (60dB μ) 98MHz signal from the ANTENNA terminal.
2. Tune the set to 98MHz.
3. Adjust IFT51 for 0V reading on the VOM

Note : FM tuned indication lighting level adjustment should be made after FM discriminator alignment.

FM Tuned Indication Lighting Level Adjustment

Band : FM


Procedure :

1. Supply a 22.5 μ V(27dB μ)(AEP,UK)or 12.5 μ V(22dB μ)(G,IT) 98 MHz signal from the ANTENNA terminal.
2. Tune the set to 98MHz.
3. Adjust RV52 so that the TUNED light up.

Adjustment Location: TCB011 board

AM SECTION ADJUSTMENTS

Setting :

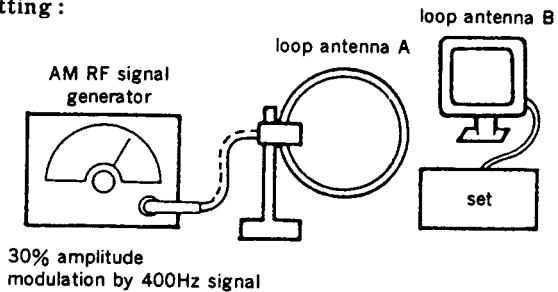

MW (AM) Tuned Indication Lighting Level Adjustment


Band : MW or AM

Procedure :

1. Set loop antenna A so that the loop antenna B input level becomes 0.25mV (48dB μ).
2. Tune the set to 1,404kHz.
3. Adjust the RV51 so that the **TUNED** light up.


Adjustment Location:

TCB011 BOARD (COMPONENT SIDE)

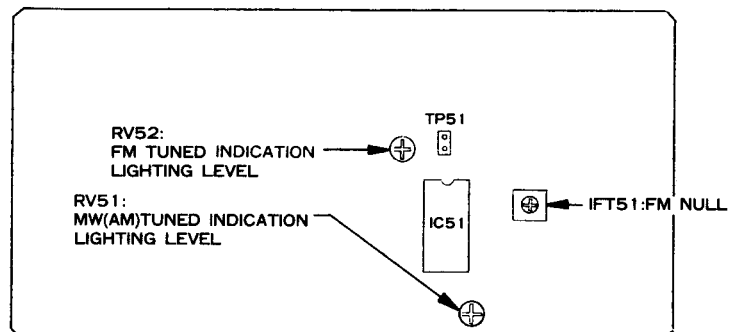


Adjustment Location:

BD BOARD (CONDUCTOR SIDE)

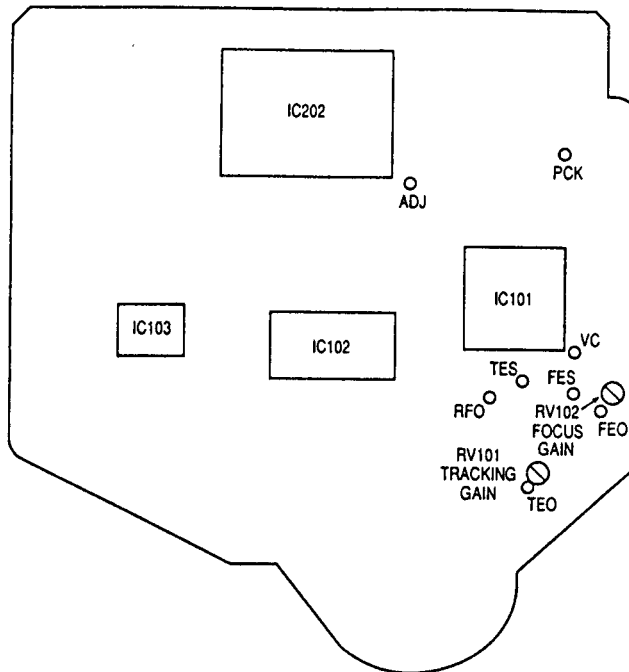


SECTION 4 DIAGRAMS

4-1. BLOCKDIAGRAM

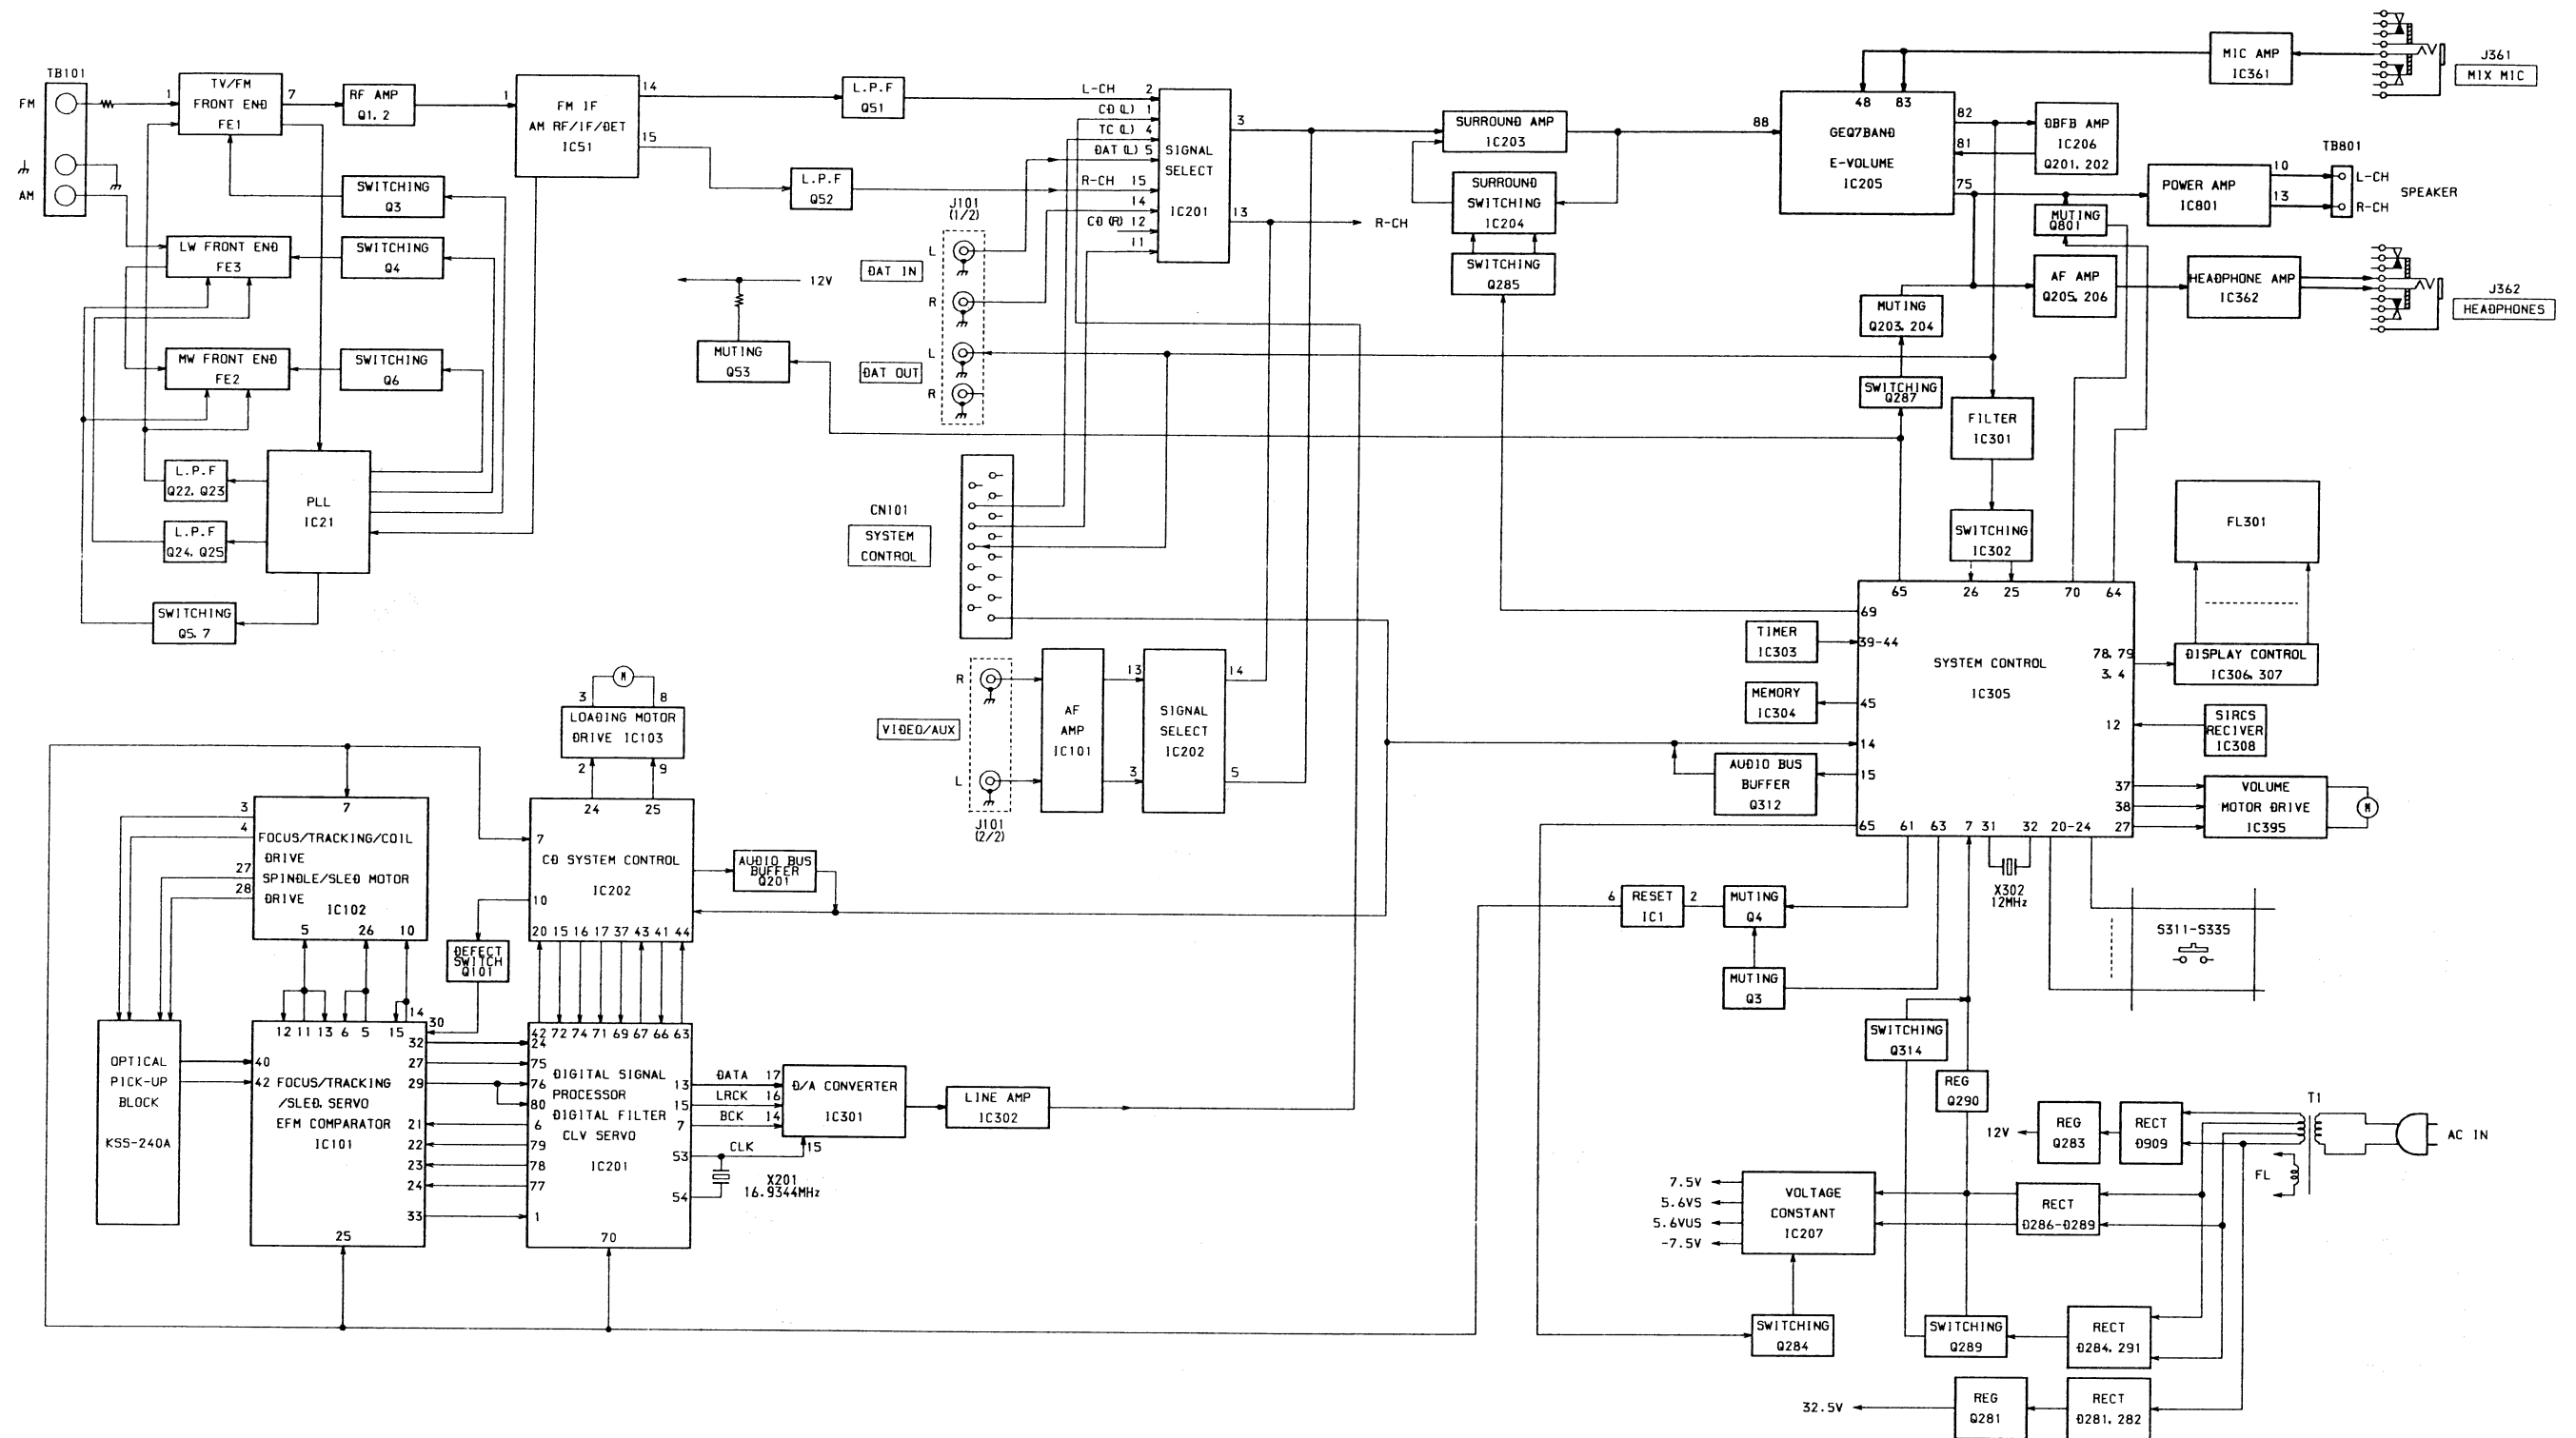


4-2. CIRCUIT BOARDS LOCATION

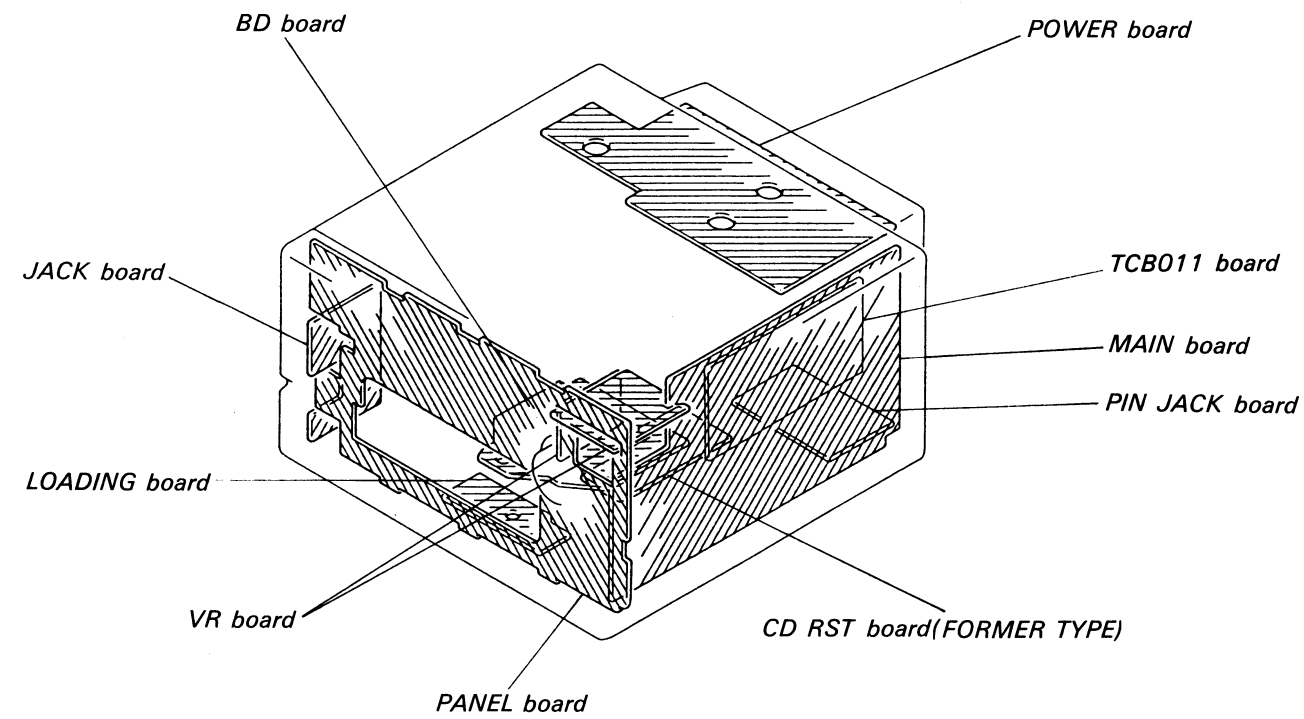


4-3. SEMICONDUCTOR LEAD LAYOUTS


CXA1372Q

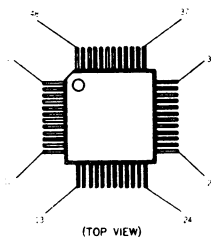

CXD2505Q
μPD78134GF-032-3B9

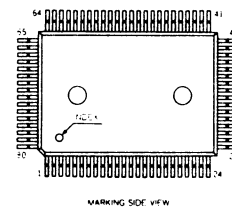


μPD75116GF-760-3BE

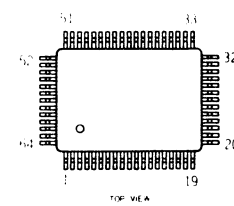


2SD2012




1SS355

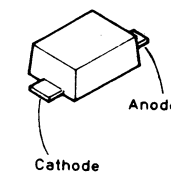


RBA-402



CXA1492Q

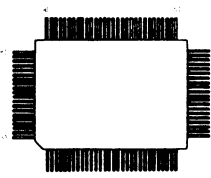


LA5603
STK4132MK2




2SA1115-EF
2SC2603-EF




1SS120



DTZ12B
DTZ3.9B
DTZ33B
DTZ4.7C
DTZ5.6B
DTZ6.2B

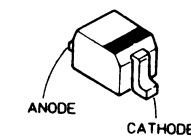


SEL2210S







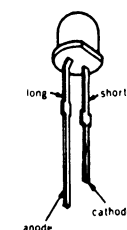




4-4. PRINTED WIRING BOARDS — Audio Section(FORMER TYPE) —

• Semiconductor Location(FORMER TYPE)

Ref. No.	Location	Ref. No.	Location
D1	H-29	IC207	F-7
D2	H-29	IC301	F-19
D3	K-29	IC302	F-20
D21	J-6	IC303	B-22
D51	K-3	IC304	C-21
D201	G-3	IC305	C-23
D202	D-7	IC306	B-27
D203	D-7	IC307	B-25
D205	C-10	IC308	B-29
D281	E-6	IC309	C-25
D282	E-5	IC361	G-14
D283	F-5	IC362	G-16
D284	E-8	IC395	B-16
D286	E-7	IC801	K-26
D287	E-7		
D288	E-7	Q1 (TCB011)	I-5
D289	E-7	Q1 (CD RST)	H-30
D290	F-6	Q2 (TCB011)	I-4
D291	E-8	Q2 (CD RST)	H-29
D292	E-9	Q3	I-5
D293	D-9	Q4	K-7
D294	D-9	Q5	J-8
D301	E-19	Q6	K-7
D302	F-19	Q7	K-9
D311	C-24	Q21	I-6
D312	D-19	Q22	J-7
D313	F-29	Q23	J-7
D314	C-22	Q24	J-8
D316	D-20	Q25	J-8
D317	D-18	Q51	J-3
D318	A-28	Q52	J-3
D319	D-25	Q53	I-4
D320	D-25	Q201	B-6
D321	D-24	Q202	C-6
D322	D-23	Q203	D-6
D323	D-23	Q204	D-6
D324	E-20	Q205	D-7
D325	E-20	Q206	D-6
D326	B-21	Q281	F-5
D327	C-22	Q283	F-6
D328	C-22	Q284	F-7
D329	E-20	Q286	B-10
D330	G-20	Q287	D-5
D331	D-19	Q289	E-8
D391	F-16	Q290	F-9
D801	J-27	Q311	C-26
D909	I-24	Q312	B-24
		Q313	D-20
IC1	J-30	Q314	B-22
IC2	I-29	Q801	J-28
IC21	J-6		
IC51	J-5		
IC101	J-16		
IC201	D-10		
IC202	E-10		
IC203	C-8		
IC204	C-9		
IC205	E-3		
IC206	C-7		

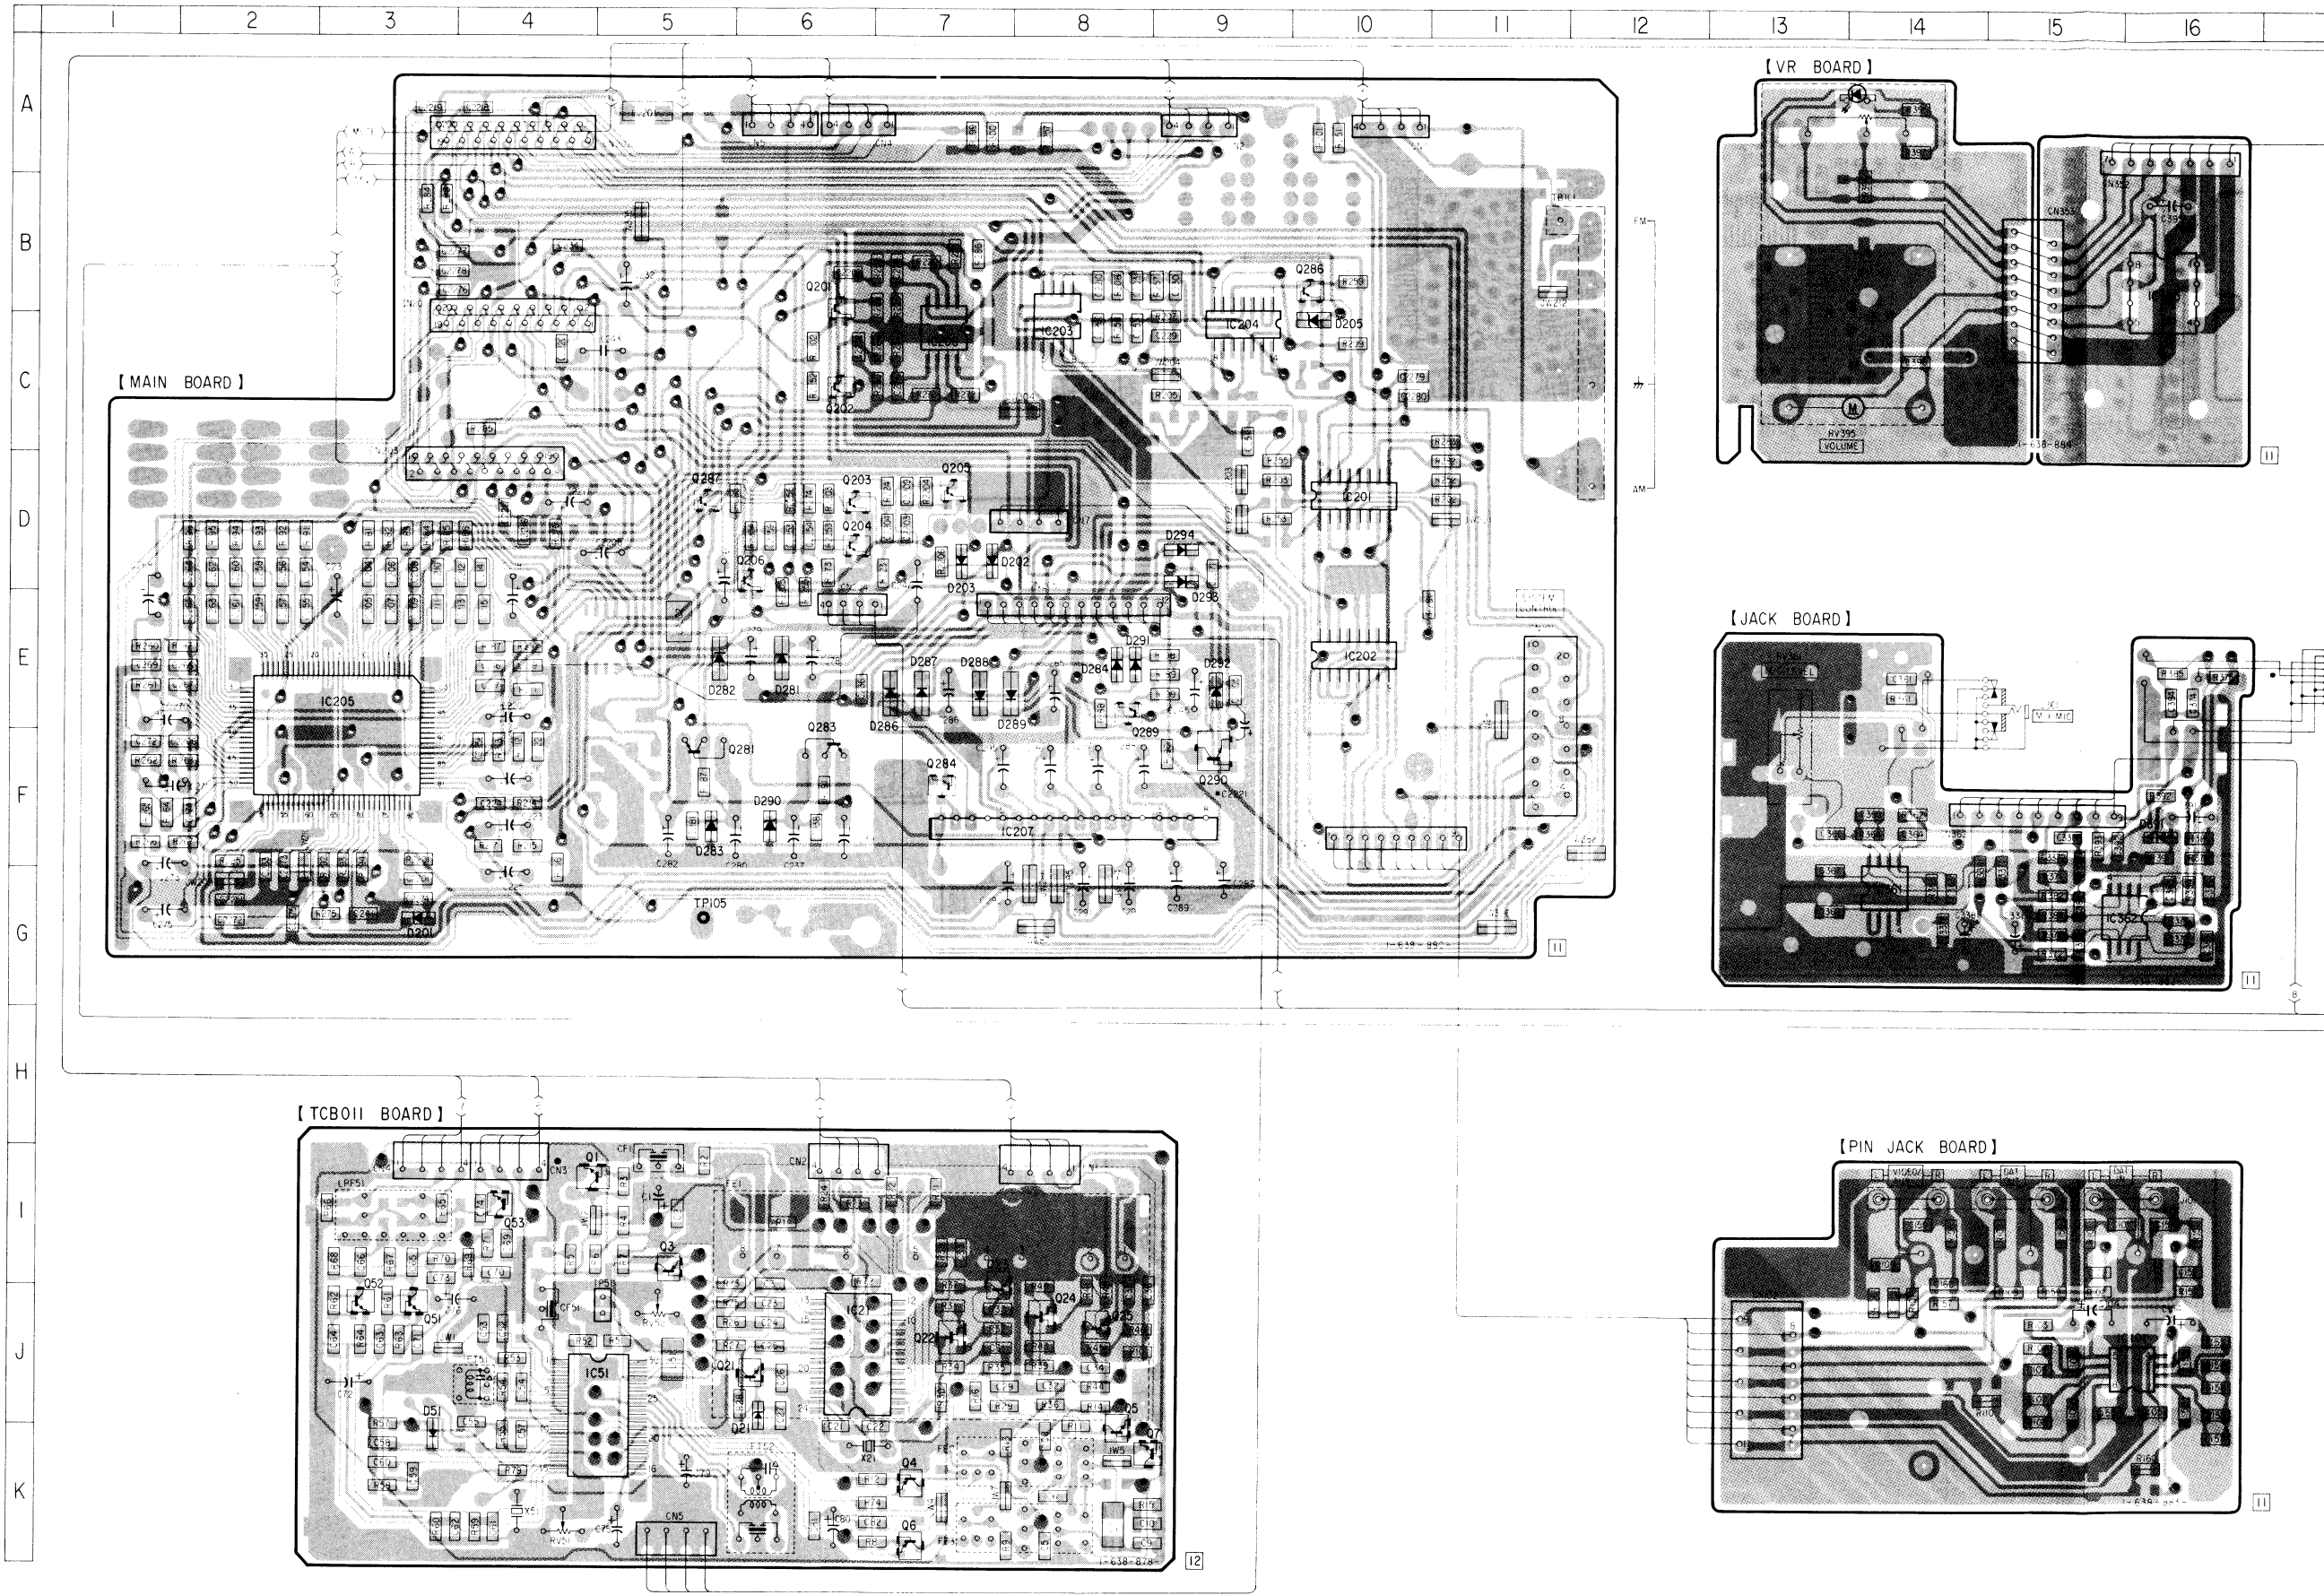

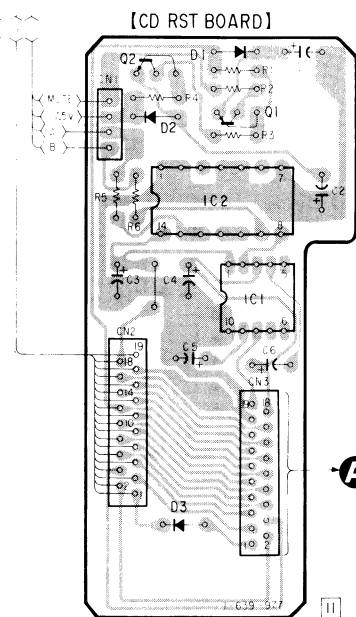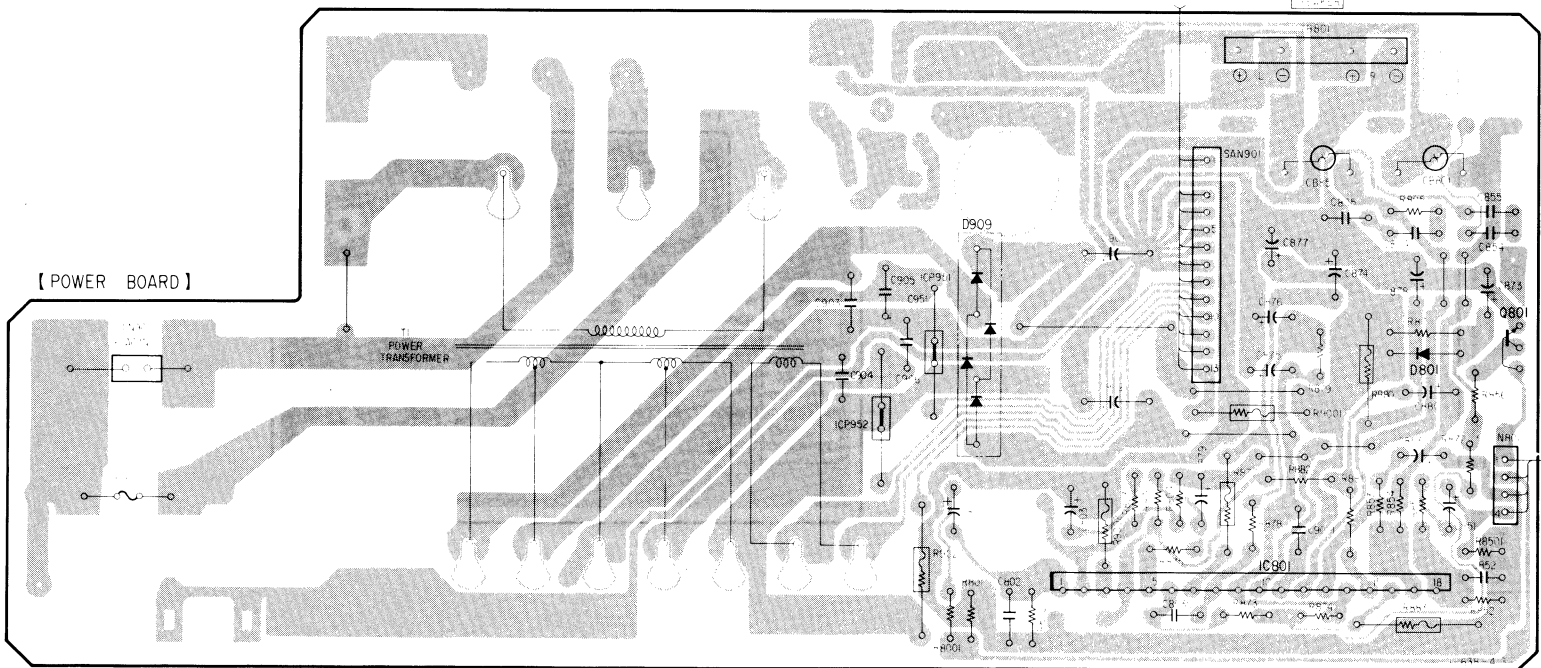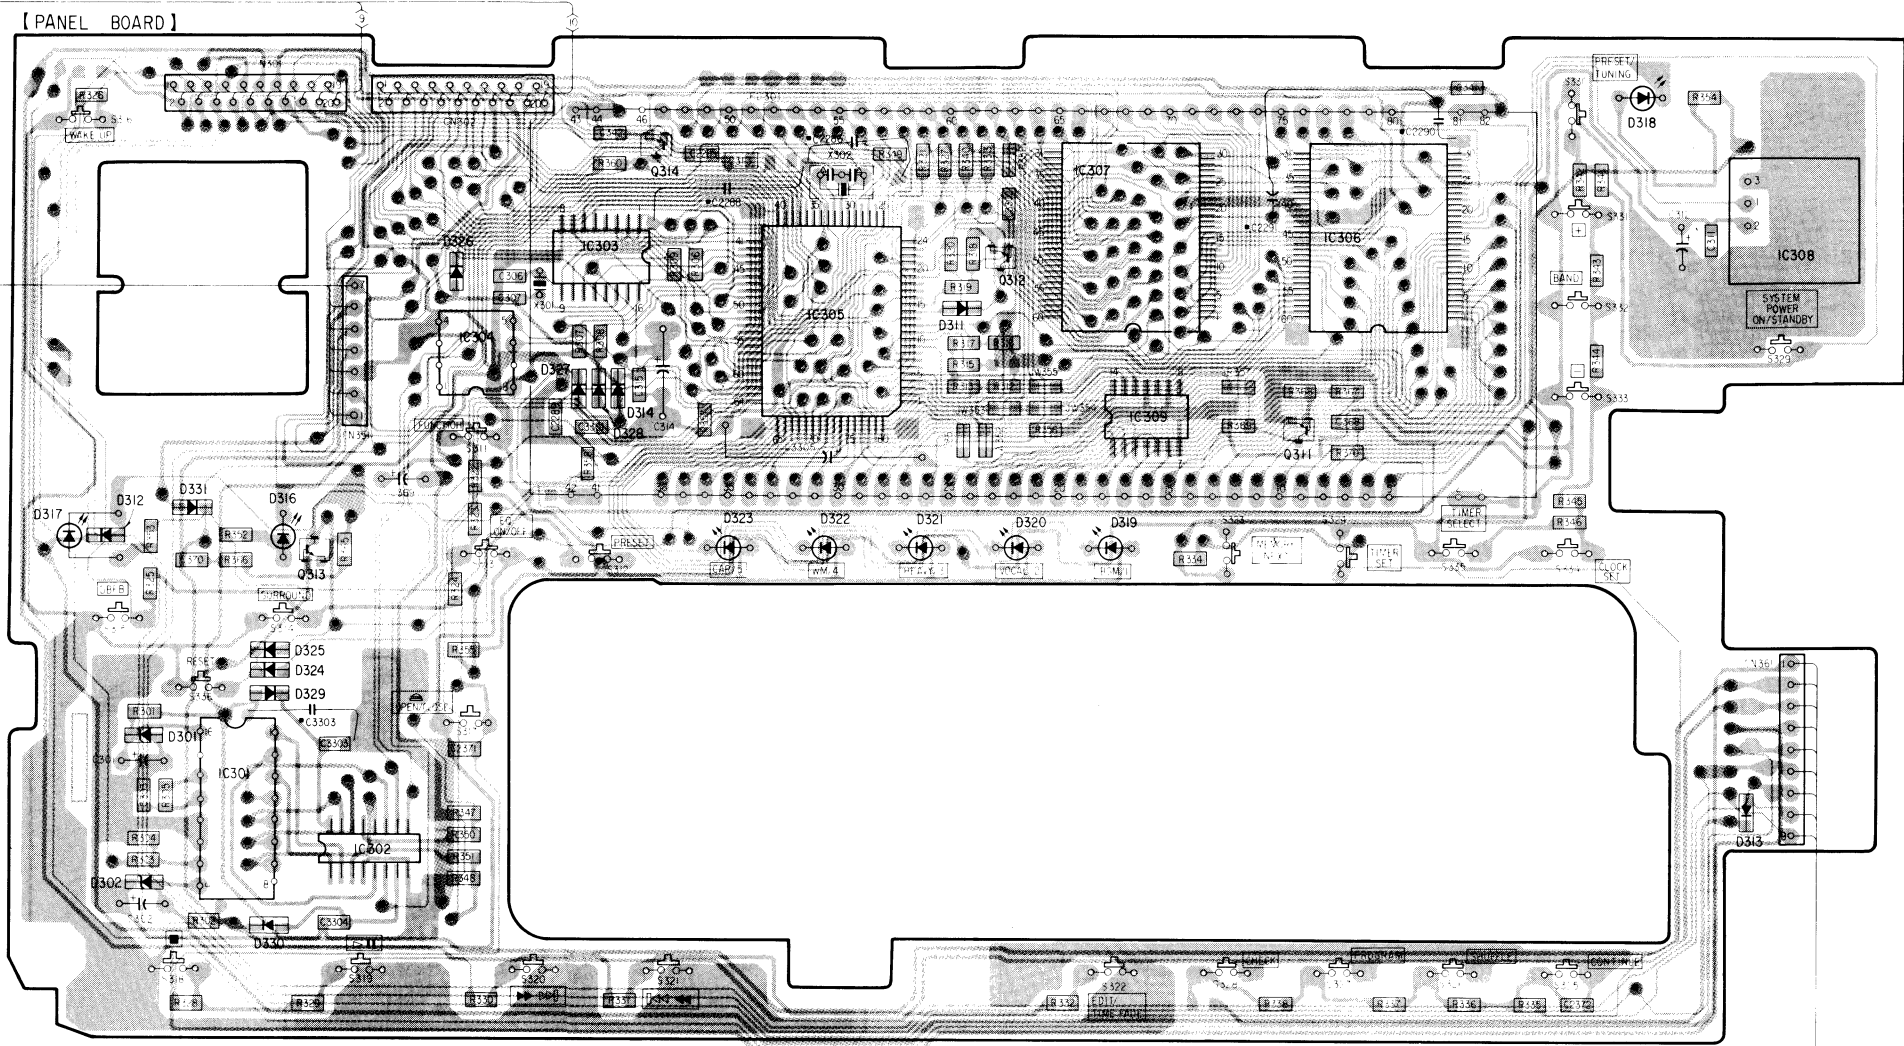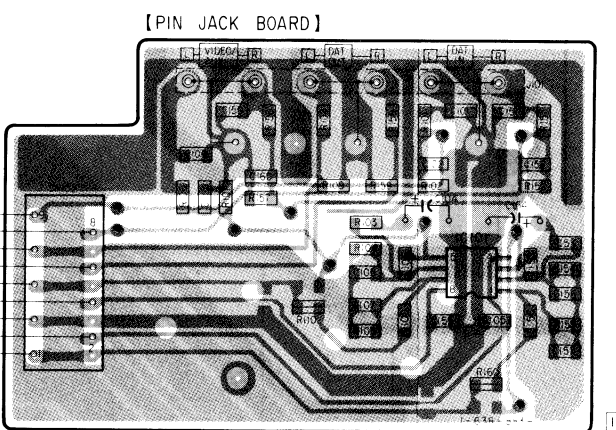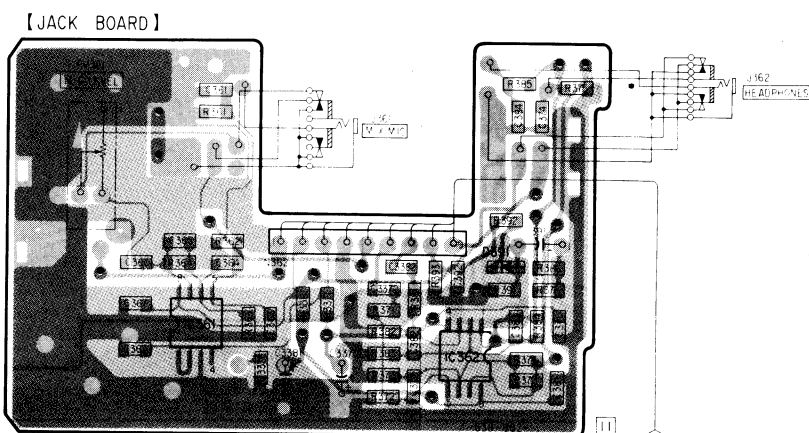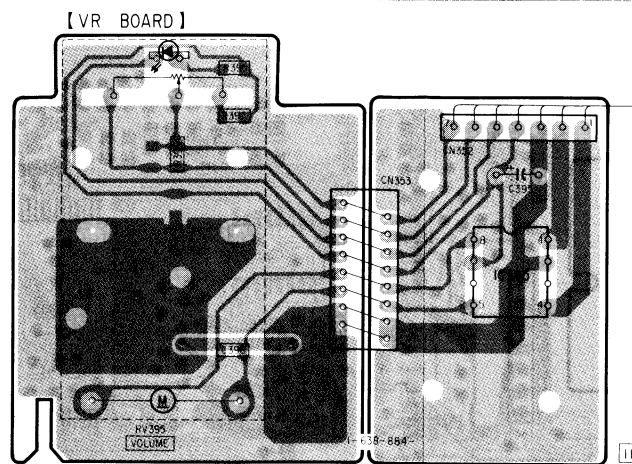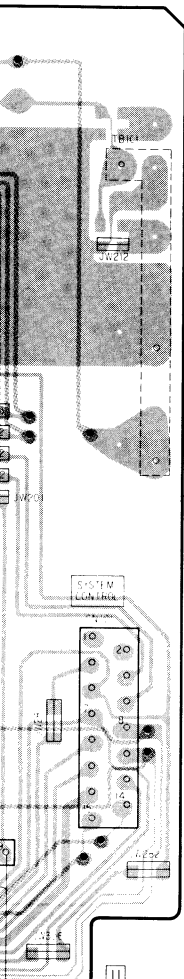

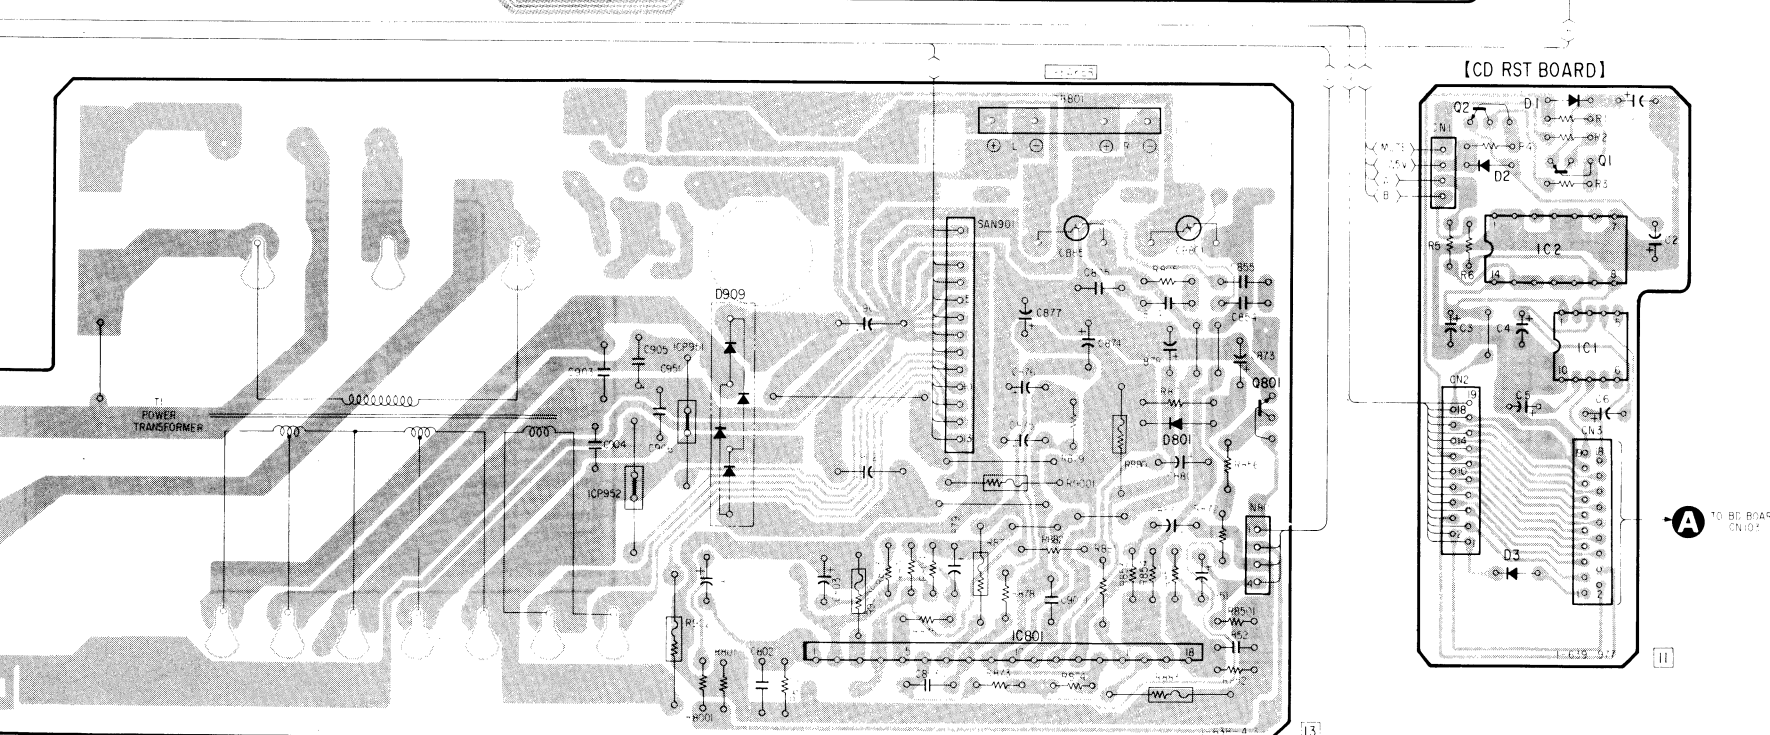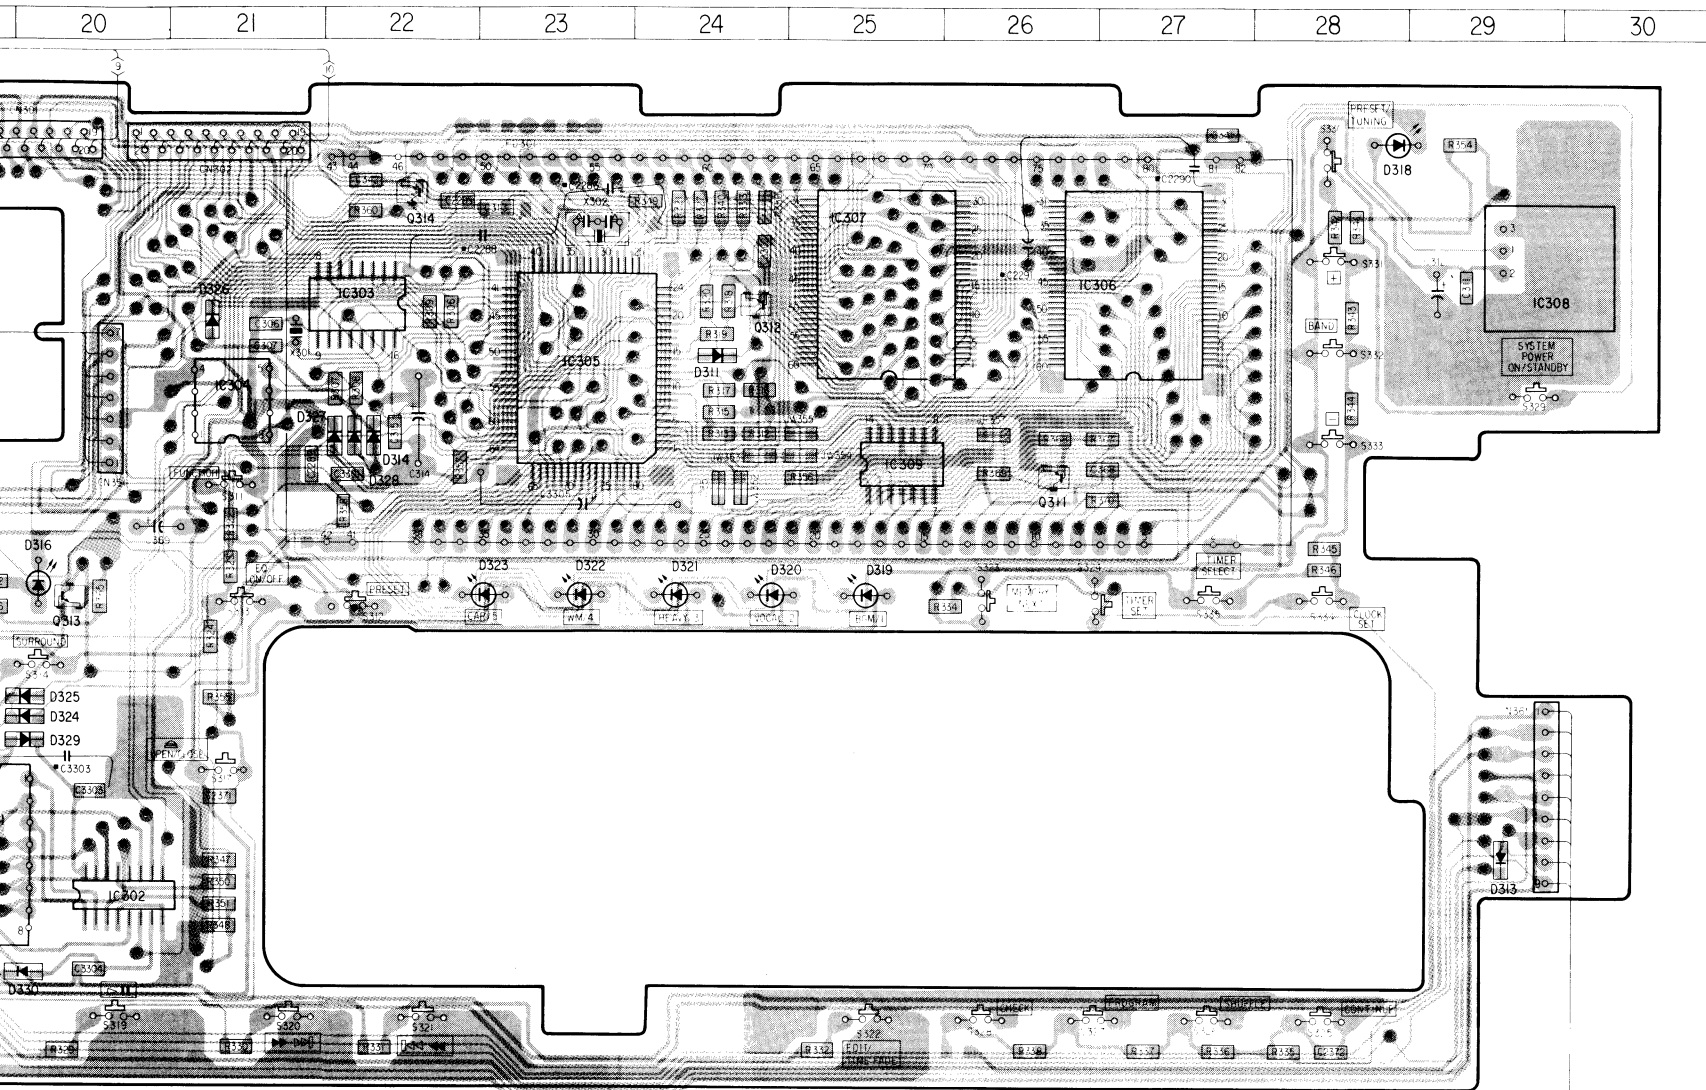


- Note:
- : parts extracted from the component side.
 - : parts extracted from the conductor side.
 - : Through hole.
 - ▨ : Pattern on the side which is seen.
 - ▩ : Pattern of the rear side.






FORMER TYPE : AEP, UK

4-5. PRINTED WIRING BOARDS — Audio Section (NEW TYPE)

• Semiconductor Location(NEW TYPE)

Ref. No.	Location	Ref. No.	Location
D1	D-11	IC301	F-19
D2	E-11	IC302	F-20
D3	C-3	IC303	B-22
D21	J-6	IC304	C-21
D51	K-3	IC305	C-23
D201	G-3	IC306	B-27
D202	D-7	IC307	B-25
D203	D-7	IC308	B-29
D205	C-10	IC309	C-25
D281	E-6	IC361	G-14
D282	E-5	IC362	G-16
D283	F-5	IC395	B-16
D284	E-8	IC801	K-26
D286	E-6		
D287	E-7	Q1 (TCB011)	I-5
D288	E-7	Q1 (MAIN)	E-11
D289	E-7	Q2 (TCB011)	I-4
D290	F-6	Q2 (MAIN)	E-11
D291	E-8	Q3 (TCB011)	I-5
D292	F-9	Q3 (MAIN)	B-4
D293	D-9	Q4 (TCB011)	K-7
D294	D-9	Q4 (MAIN)	B-5
D301	E-19	Q5	J-8
D302	F-19	Q6	K-7
D311	C-24	Q7	K-9
D312	D-19	Q21	J-6
D313	F-29	Q22	J-7
D314	C-22	Q23	J-7
D316	D-20	Q24	J-8
D317	D-18	Q25	J-8
D318	A-28	Q51	J-3
D319	D-25	Q52	J-3
D320	D-25	Q53	I-4
D321	D-24	Q201	B-6
D322	D-23	Q202	C-6
D323	D-23	Q203	D-6
D324	E-20	Q204	D-6
D325	E-20	Q205	D-7
D326	B-21	Q206	D-6
D327	C-21	Q281	F-5
D328	C-22	Q283	E-6
D329	E-20	Q284	F-7
D330	G-20	Q286	B-10
D331	D-19	Q287	D-5
D391	F-16	Q289	E-8
D801	J-27	Q290	F-9
D909	I-24	Q311	C-26
		Q312	B-24
IC1	D-2	Q313	D-20
IC21	J-6	Q314	B-22
IC51	J-5	Q801	J-28
IC101	J-16		
IC201	D-10		
IC202	E-10		
IC203	C-8		
IC204	C-9		
IC205	E-3		
IC206	C-7		
IC207	F-7		

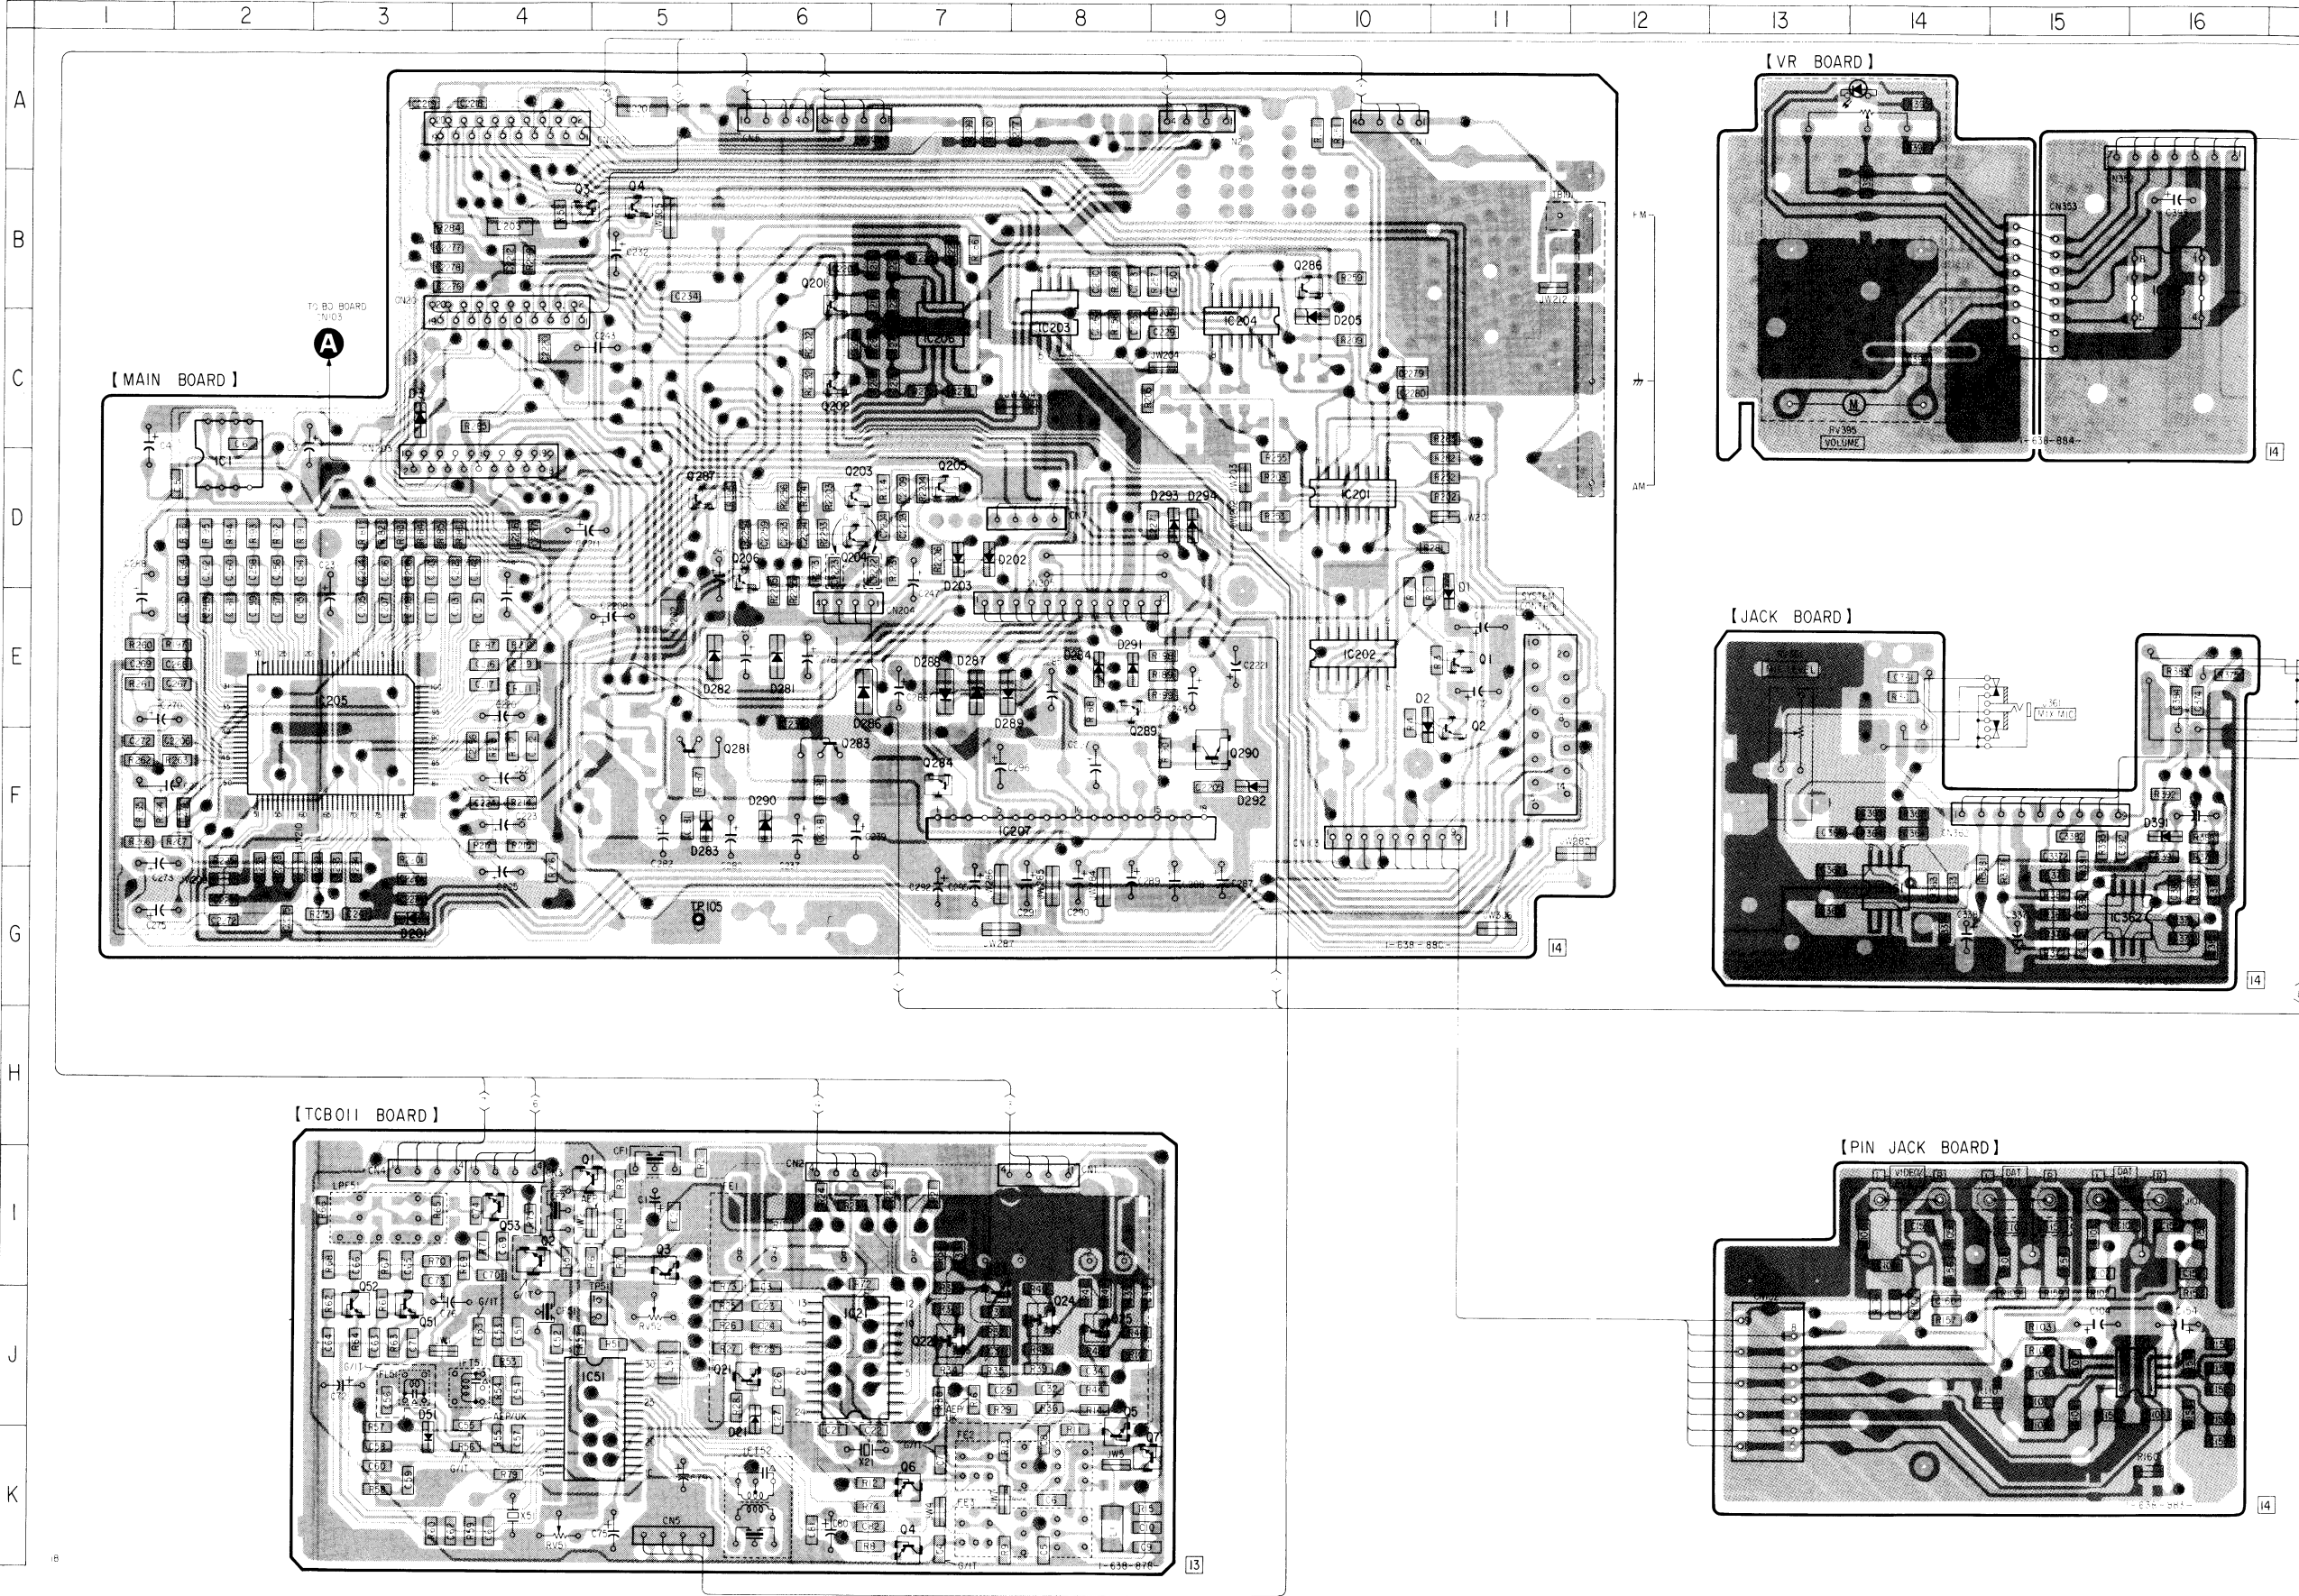

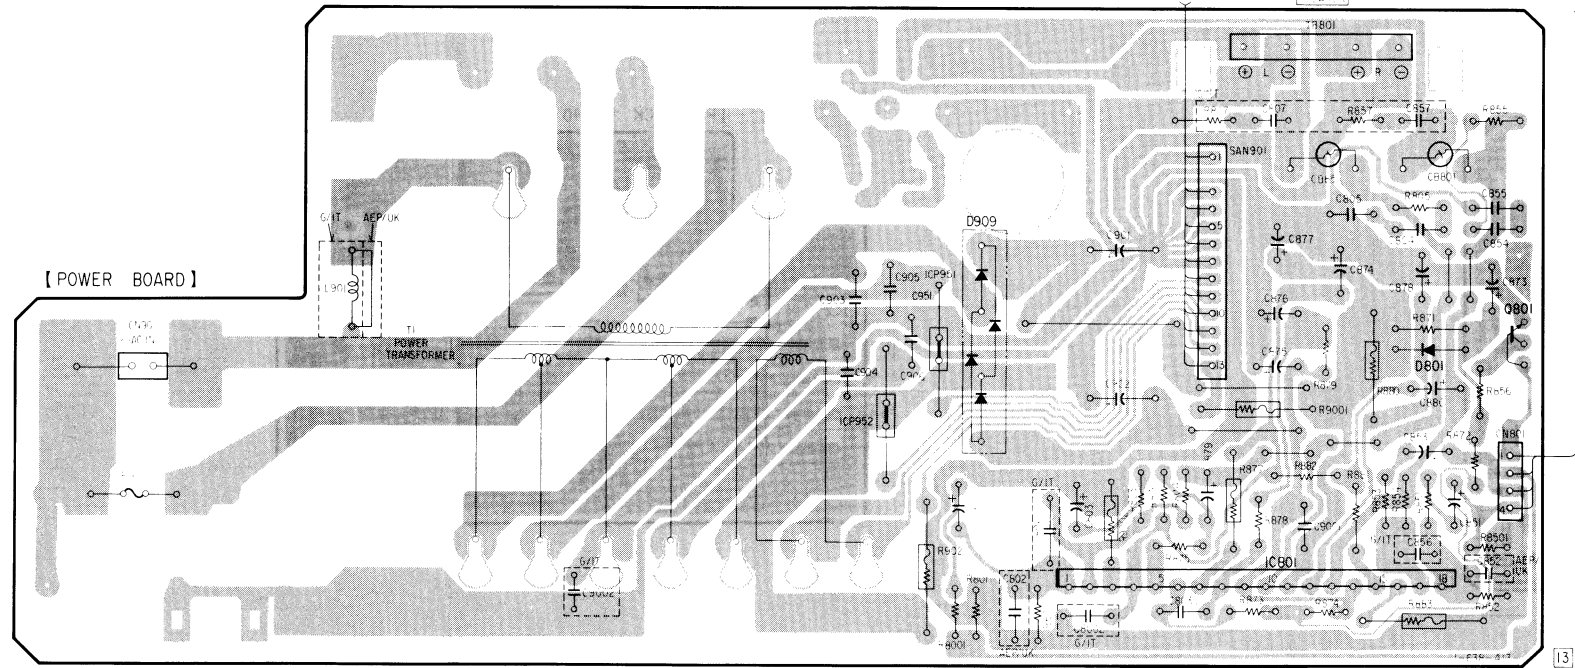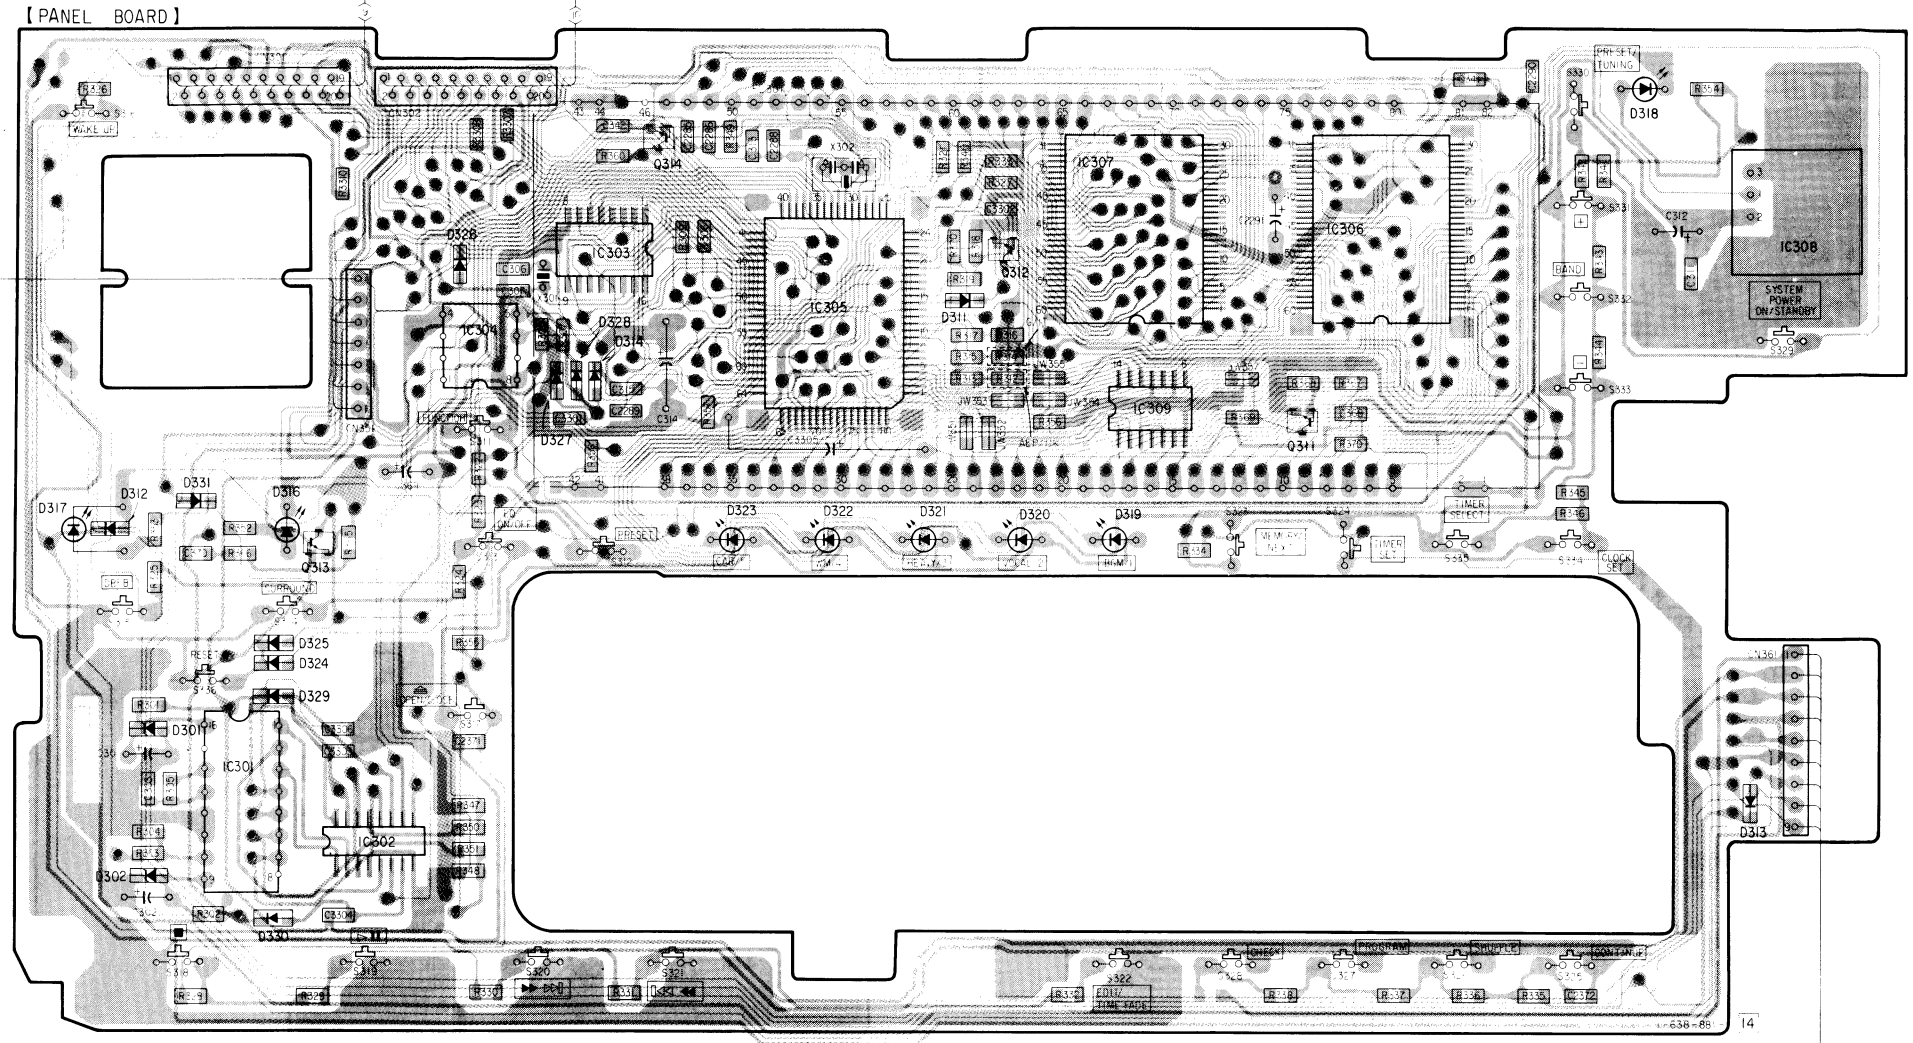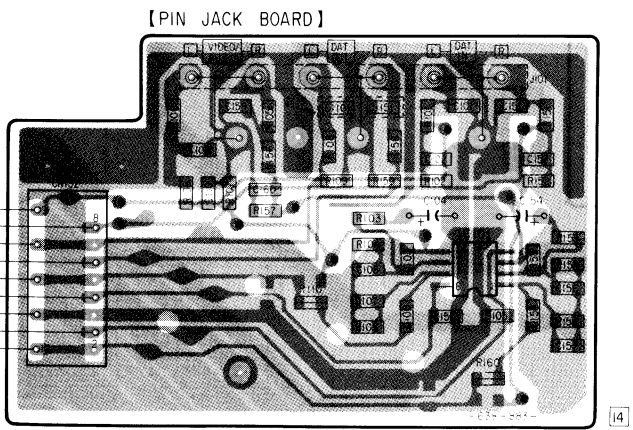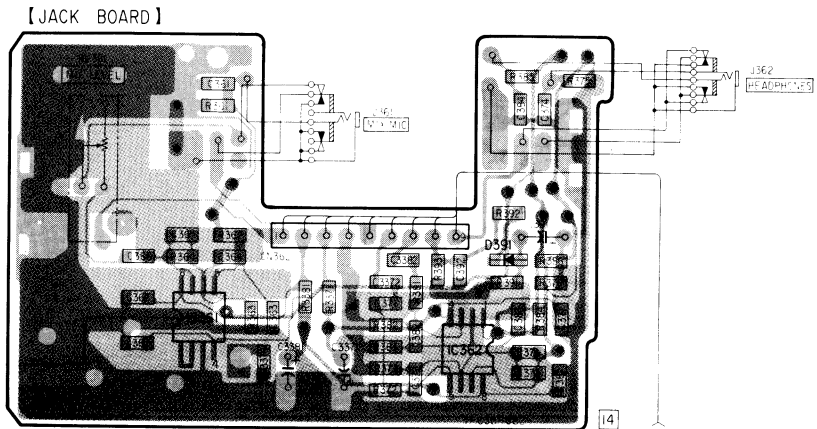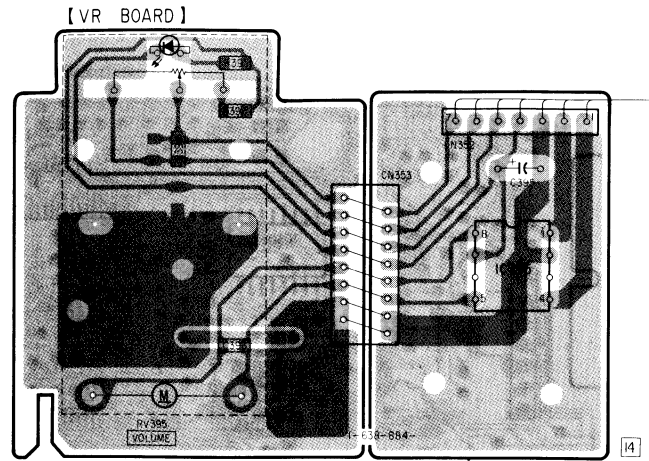


- Note:**
- All capacitors are in μF unless otherwise noted. pF : μF 50WV or less are not indicated except for electrolytics and tantalums.
 - All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
 - % : indicates tolerance.
 - $\triangle$: internal component.
 - $\square$: fusible resistor.

Note: The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.

- — : B+ Line
- - - - : B- Line
- $\square$: adjustment for repair.

4-6. SCHEMATIC DIAGRAM — Audio Section —

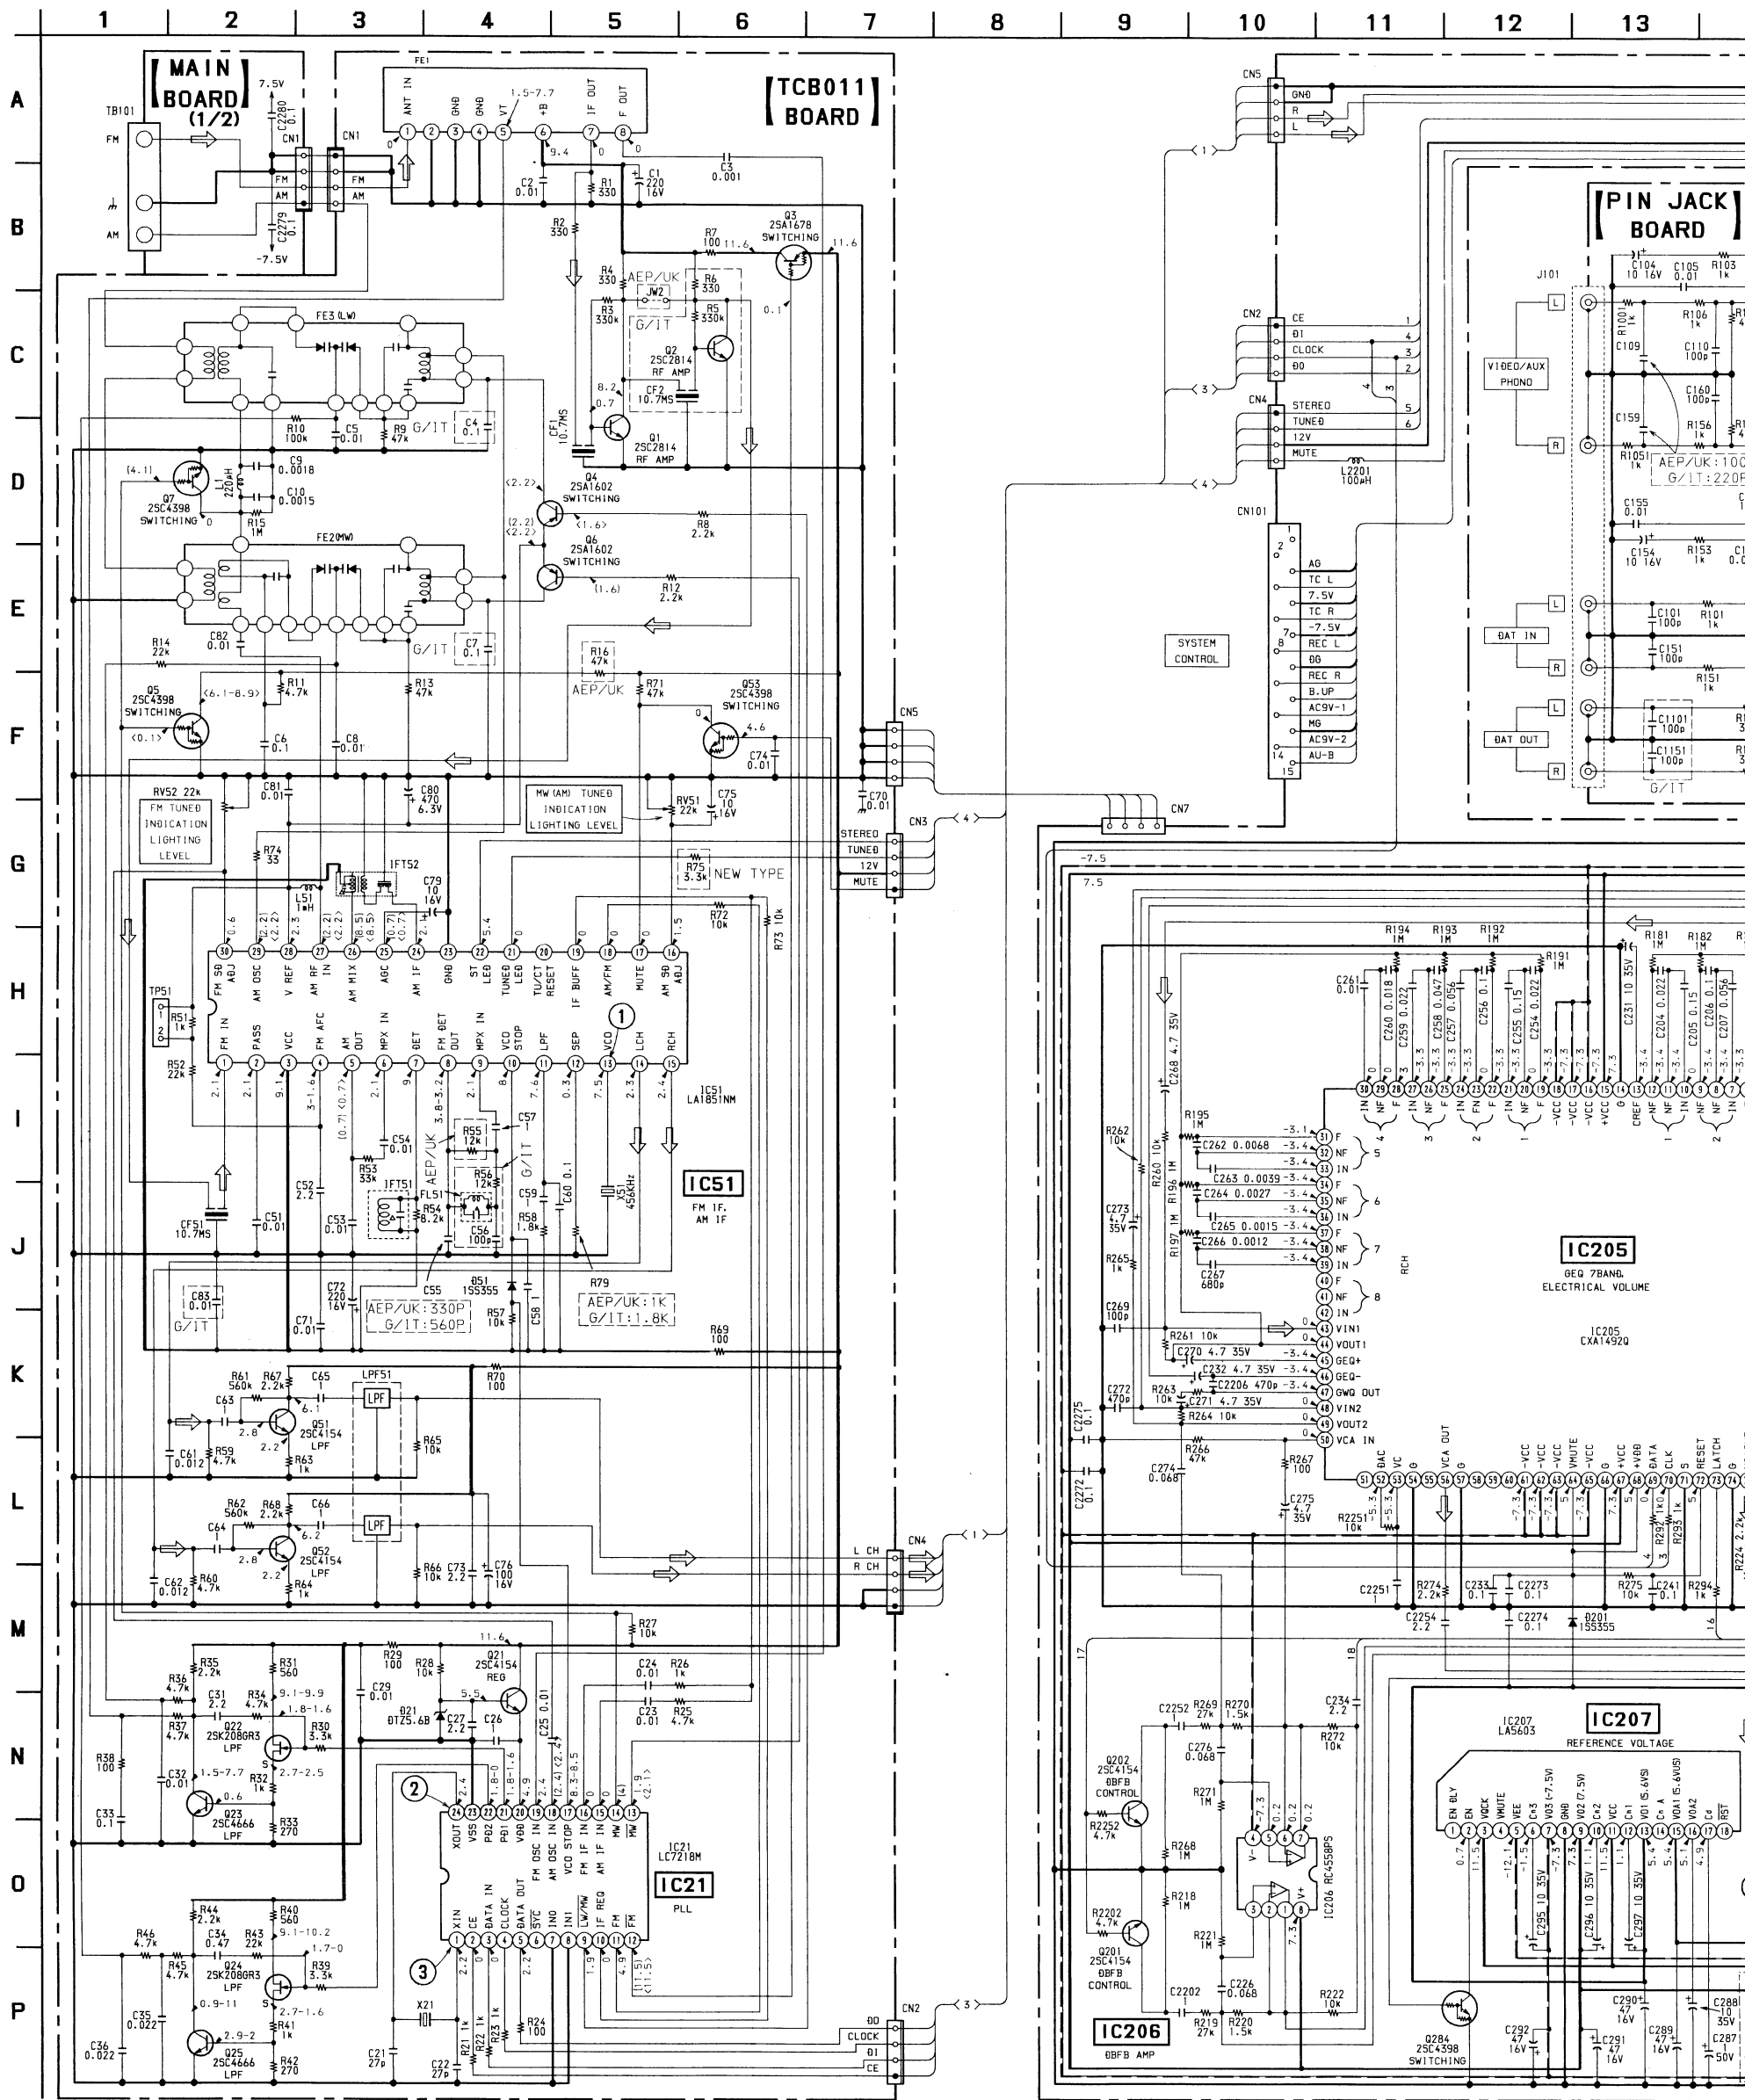


unless otherwise




 or dotted
y.
ed.



- : FM → : CD

FORMER TYPE : AEP, UK

IT : Italian

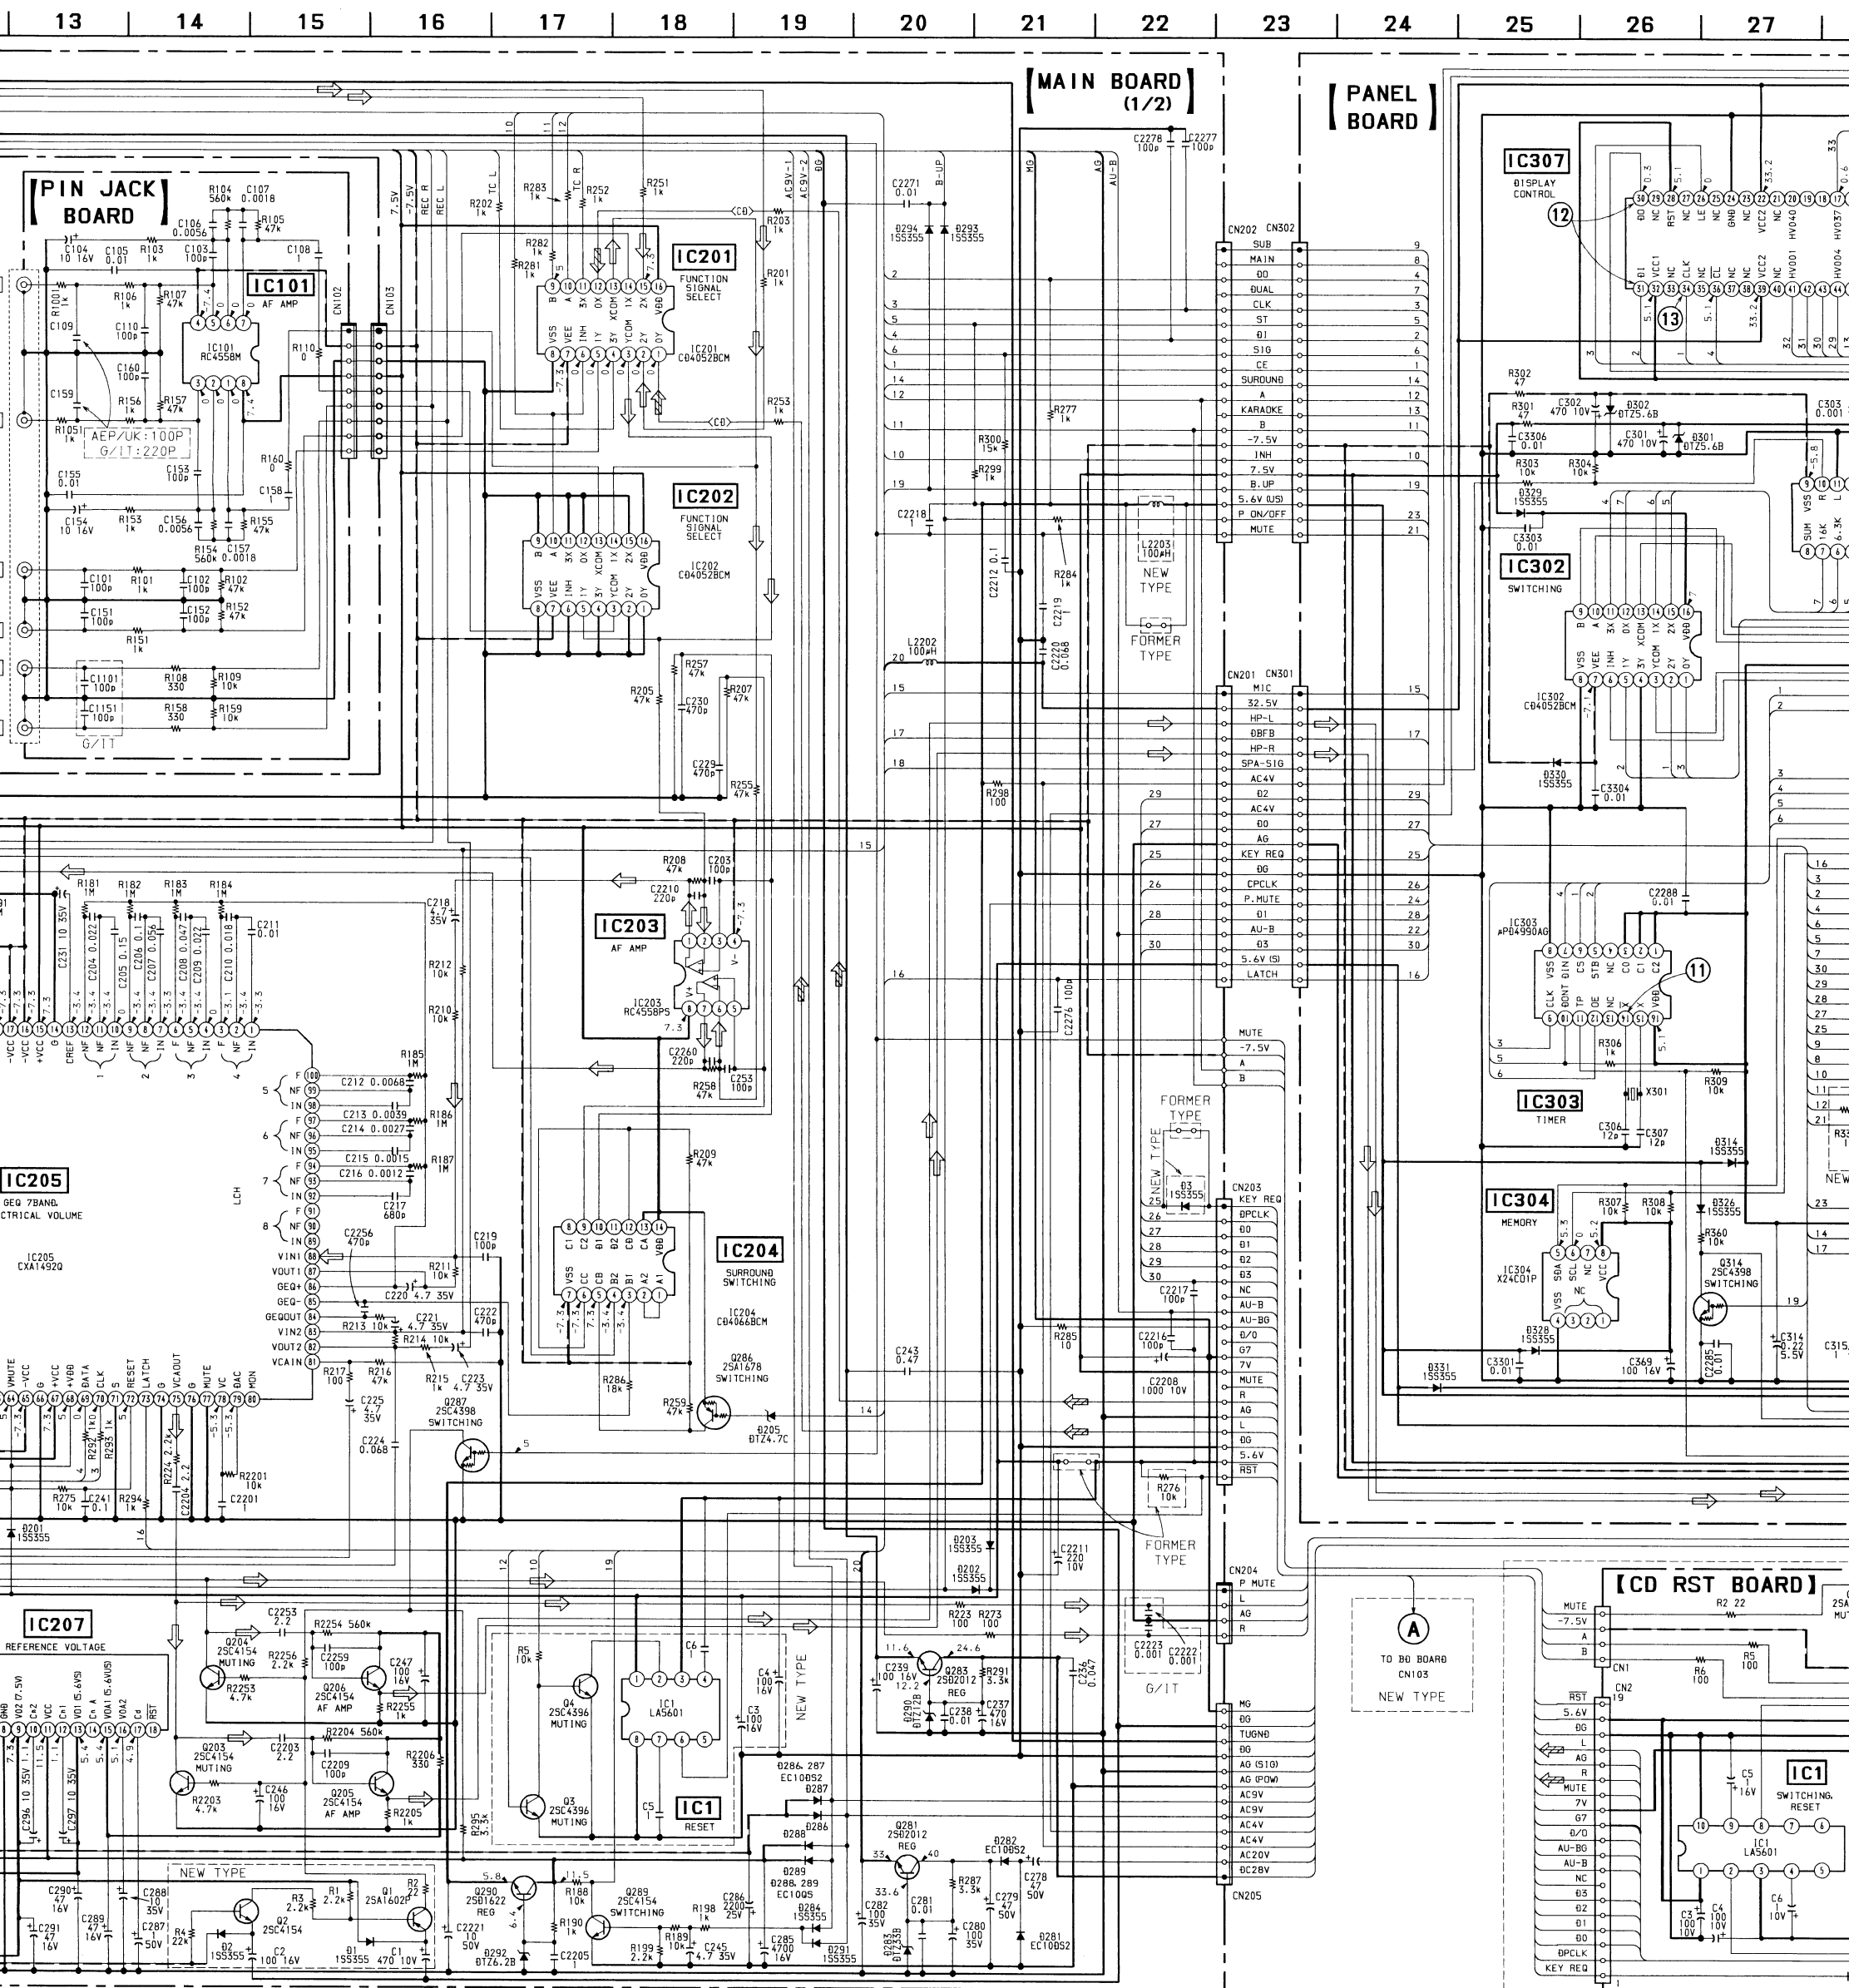

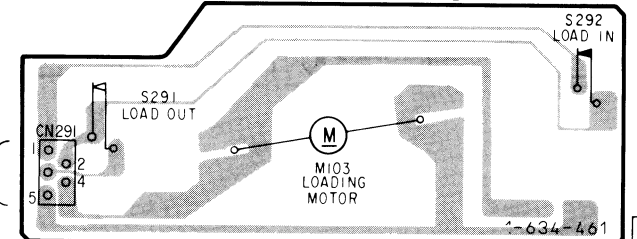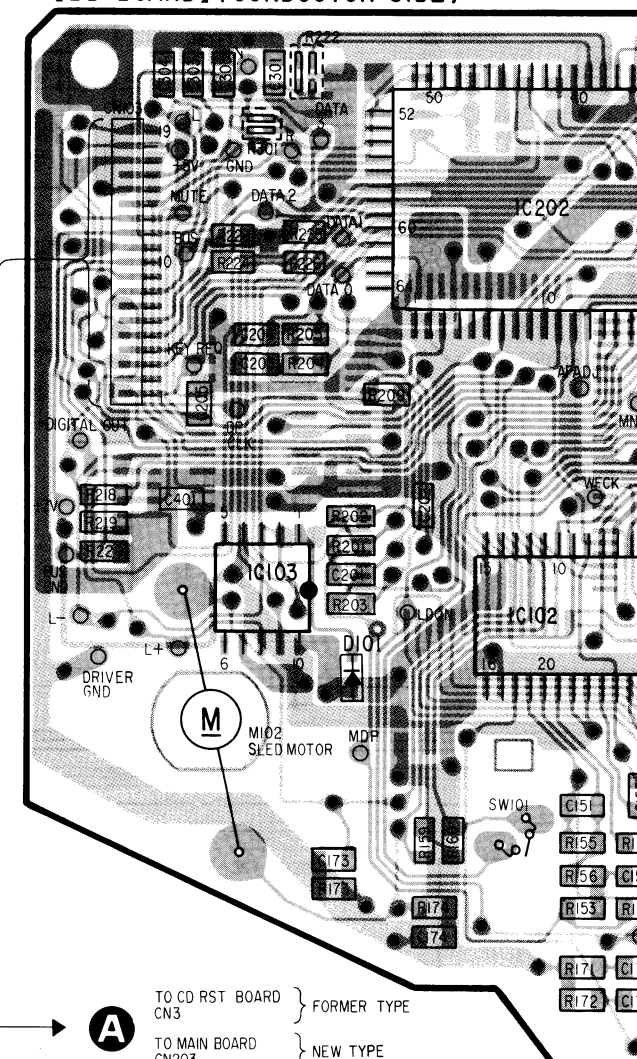


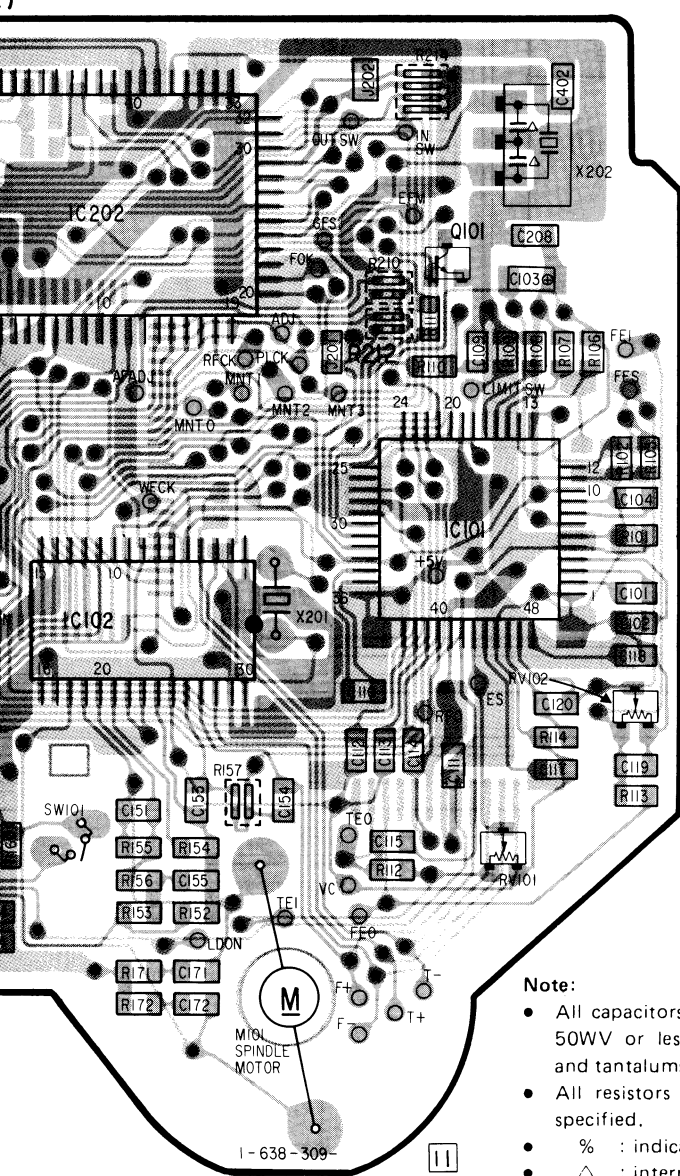[illegible][illegible]

Note:

- All capacitors are in μF unless otherwise noted. pF : μF 50VV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
- % : indicates tolerance.
- $\triangle$: internal component.

Note: The components identified by mark  or dotted line with mark are critical for safety. Replace only with part number specified.

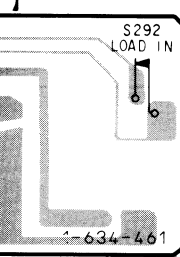

The block diagram illustrates the H.V. generation control system. Key components and their interconnections are as follows:

- START STOP LOGIC**: Receives **SDA** and **SC1** signals. It outputs a **START CYCLE** signal to the **H.V. GENERATION TIMING & CONTROL** block and a **LOAD** signal to the **WORD ADDRESS COUNTER**.
- CONTROL LOGIC**: Receives **Vcc** and **START CYCLE** signals. It outputs **INC** and **R/W** signals to the **WORD ADDRESS COUNTER**.
- WORD ADDRESS COUNTER**: Receives **LOAD** and **INC** signals. It outputs a **32-bit** signal to the **XDEC** block and a **5-bit** signal to the **YDEC** block.
- XDEC** (32-bit): Receives the 32-bit signal from the counter and outputs a **2-bit** signal to the **YDEC** block.
- YDEC** (32-bit): Receives the 2-bit signal from **XDEC** and the 5-bit signal from the counter. It outputs an **8-bit** signal to the **DATA REGISTER**.
- E² PROM (61 x 61)**: Receives the **START CYCLE** signal and outputs a **32-bit** signal to the **YDEC** block.
- DATA REGISTER**: Receives the 8-bit signal from **YDEC** and outputs a **PIN** signal to the **H.V. GENERATION TIMING & CONTROL** block.
- H.V. GENERATION TIMING & CONTROL**: Receives the **START CYCLE** and **PIN** signals. It outputs a **DEF** signal to the **DATA REGISTER**.
- Power and Control Signals**: **Vcc** is connected to the top of the system. **Vss** is connected to the bottom, with a battery symbol indicating a pull-up. **DEF** is a signal output from the **DATA REGISTER**.

The diagram illustrates the Philips 4300 camera control system, showing the interconnection of various modules and their control lines. The system is organized into two main horizontal sections.

Top Section (Control Logic and Timing):

- SEQUENCER:** The central control unit, receiving inputs from the DFCT DIFFERENTIAL AMP and the T. GAIN UP/DOWN switch, and outputting control signals to various modules.
- Comparators:**
 - DFCT AMP, DFCT HOLD, DFCT DIFFERENTIAL AMP, FOK COMPARATOR, FOK AMP, MIRR COMPARATOR, MIRR HOLD, T. GAIN UP/DOWN, F. GAIN DOWN/NORMAL, T. BRK SERVO ON/CHOP, F. PHASE COMPENSATION.
- Amplifiers and Buffers:**
 - FOK AMP, MIRR AMP, SLED AMP, TRACKING AMP, AUTO ASH BUFFER, AUTO ASH CONTROL AMP.
- Input/Output Lines:**
 - DATA, CLK, LOCK, DIRC, AVEE, SSTOP, ISET, FSET, SL-, SLO, SL+.

Bottom Section (Camera Mechanical and Optical Control):

- Window Comparator:** Receives input from the B.P.F. and outputs to the SEQUENCER.
- Focus and Gain Control:** Includes switches for FOCUS ON/OFF, FOCUS SEARCH UP/DOWN, FOCUS SEARCH DOWN/NORMAL, T. GAIN UP/DOWN, and F. GAIN DOWN/NORMAL.
- Tracking and Servo Control: Includes switches for T. BRK SERVO ON/CHOP, F. PHASE COMPENSATION, and TRACKING AMP.

The diagram is labeled with numerous component names and pin numbers, providing a comprehensive overview of the system's architecture.

The diagram shows a radio receiver circuit with 15 pins. The pins are labeled as follows:

- 1: FM IN
- 2: PASS
- 3: VCC
- 4: FM AFC
- 5: DET OUT
- 6: MPX IN
- 7: DET
- 8: DET OUT
- 9: MPX IN
- 10: VCC STOP
- 11: LPF
- 12: SEP
- 13: VCO
- 14: L-CH
- 15: R-CH

The circuit includes the following functional blocks and components:


- FM Section:** FM IN (1) → FM IF (2) → FM LEVEL DET (3) → AGC (4) → FM DET (5) → DET OUT (7, 8). The FM DET output is also connected to a P.D. (Phase Detector) block.
- AM Section:** AM IN (24) → AM IF (23) → AM DET (22) → LED DRIVE (21) → IF BUFF (19). The AM IF output is also connected to a VREF (28) block.
- Control and Tuning:**
 - FM OSC (1) → ALC (2) → AM OSC (27) → VREF (28) → AM RF (26) → AM MIX (25) → AGC (24).
 - STEREO LED (22) → TUNED LED (21) → TV/ST RESET (20) → IF BUFF (19) → AM/FM (18) → MUTE (17) → AM SD ADJ (16).
- Frequency Synthesis:**
 - P.D. (Phase Detector) → VCO (VCO STOP, 10) → LPF (11) → SEP (12) → VCO (13).
 - VCO (13) → ST-SW (14) → DECODER (15).
 - FF 19kHz <0° (19) → TRIG (20) → FF 19kHz <90° (21) → P.D. (22).
 - FF 38kHz (23) → VCO (24).
- Other Components:**
 - COMP (2) → LED DRIVE (21) → IF BUFF (19) → MUTE (17) → AM SD ADJ (16).
 - AM IF (23) → AM DET (22) → LED DRIVE (21) → IF BUFF (19) → MUTE (17) → AM SD ADJ (16).
 - AM IF (23) → AM DET (22) → LED DRIVE (21) → IF BUFF (19) → MUTE (17) → AM SD ADJ (16).

22




4-9. WAVEFORMS


① IC51 ⑬ pin

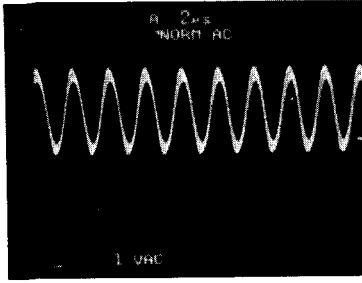


⑥ IC305 ④ pin

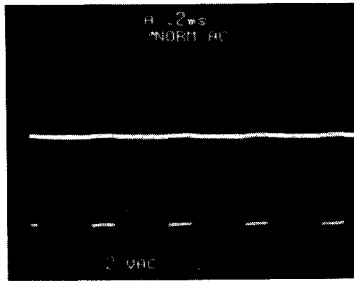


⑪ IC303 ⑭ pin

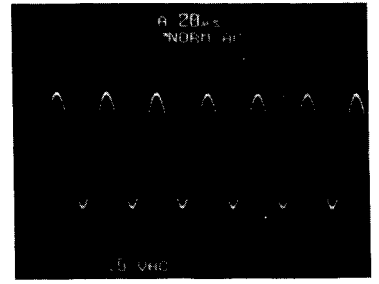


② IC21 ⑭ pin

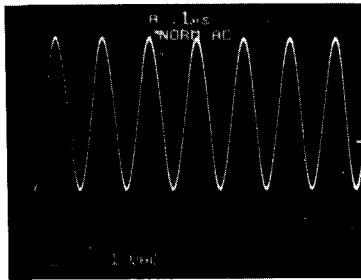


⑦ IC305 ⑬ pin

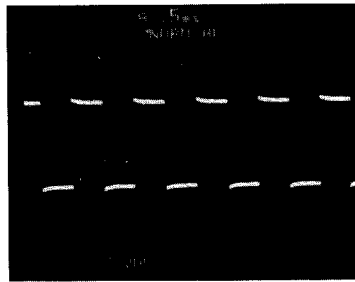


⑫ IC307 ③⑩ pin

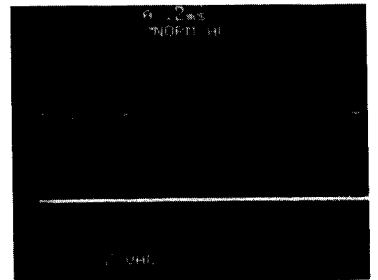


③ IC21 ① pin

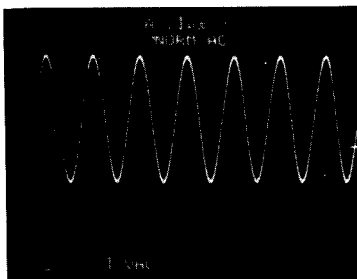


⑧ IC305 ③② pin

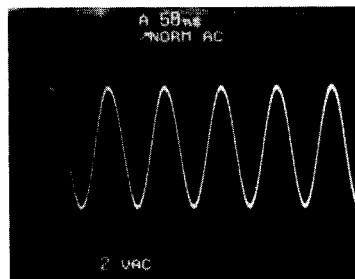


⑬ IC307 ③④ pin

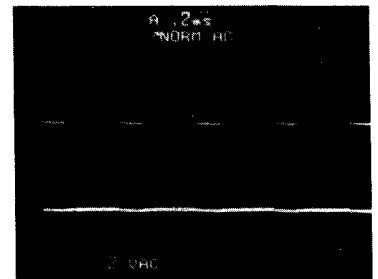


④ IC305 ① pin

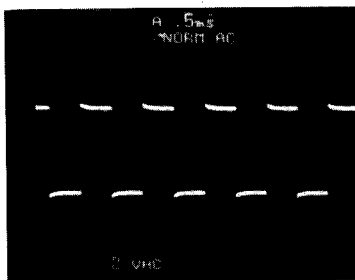


⑨ IC305 ③④ pin

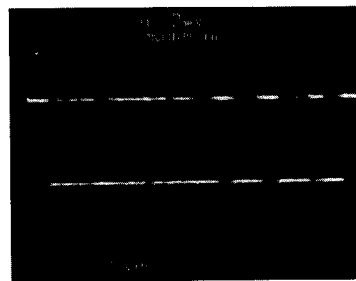

⑤ IC305 ③ pin

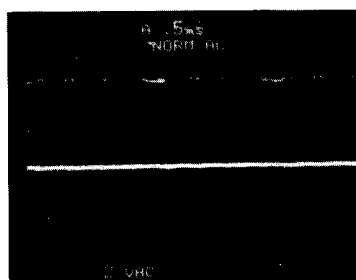

⑩ IC305 ③⑤ pin

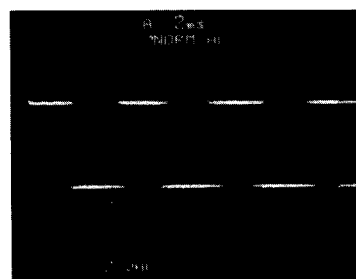

SECTION 5 EXPLODED VIEWS

NOTE:

- - X X, - X mean standardized parts, so they may have some differences from the original one.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- Color Indication of Appearance Parts
Example:

KNOB, BALANCE(WHITE)...(RED)

↑ ↑
Part's Color Cabinet's Color

- Hardware (#mark) list is given in the last of this parts list.

NEW TYPE : AEP, G, IT, UK


FORMER TYPE : AEP, UK

G : Germany

IT : Italian

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.


5-1. FRONT PANEL SECTION

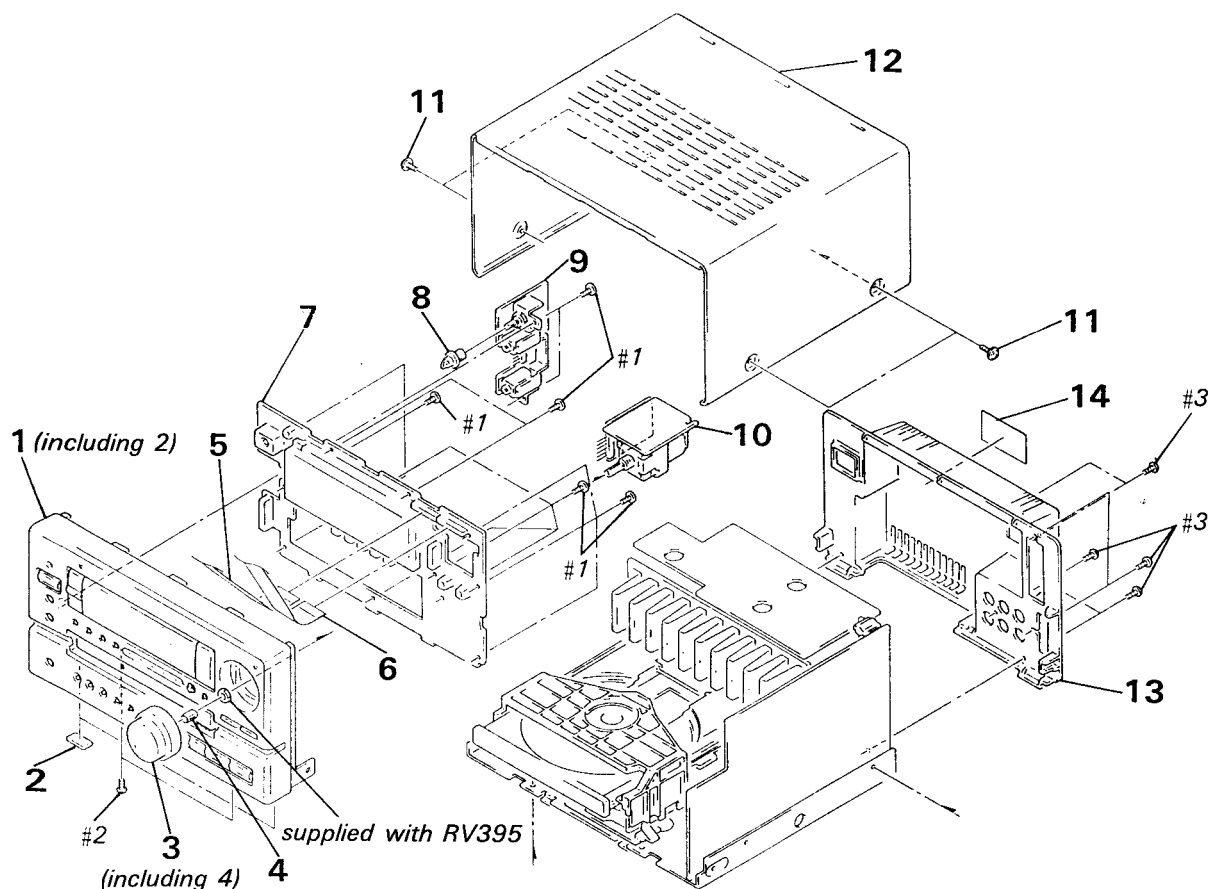

Ref. No.	Part No.	Description	Remark
1	X-4941-581-1	PANEL ASSY. FRONT	
2	4-930-336-01	FOOT (FELT)	
3	X-4941-489-1	KNOB (VOLUME) ASSY	
4	3-703-466-00	SPRING (6600)	
5	1-590-907-11	WIRE, FLAT TYPE (20 CORE)	
6	1-590-908-11	WIRE, FLAT TYPE (20 CORE)	
7	* A-4341-658-A	PANEL BOARD, COMPLETE (AEP, UK)	
7	* A-4341-707-A	PANEL BOARD, COMPLETE (IT)	
7	* A-4341-664-A	PANEL BOARD, COMPLETE (G)	

Ref. No.	Part No.	Description	Remark
8	4-932-882-11	KNOB (HP. VOL)	
9	* 1-638-882-11	JACK BOARD	
10	* 1-638-884-11	VR BOARD	
11	3-704-366-01	SCREW (CASE) (M3X8)	
12	* 4-944-213-01	CASE	
13	* 4-944-211-21	PANEL, BACK	
14	* 4-941-548-01	LABEL, CLASS 1	

5-2. CHASSIS SECTION

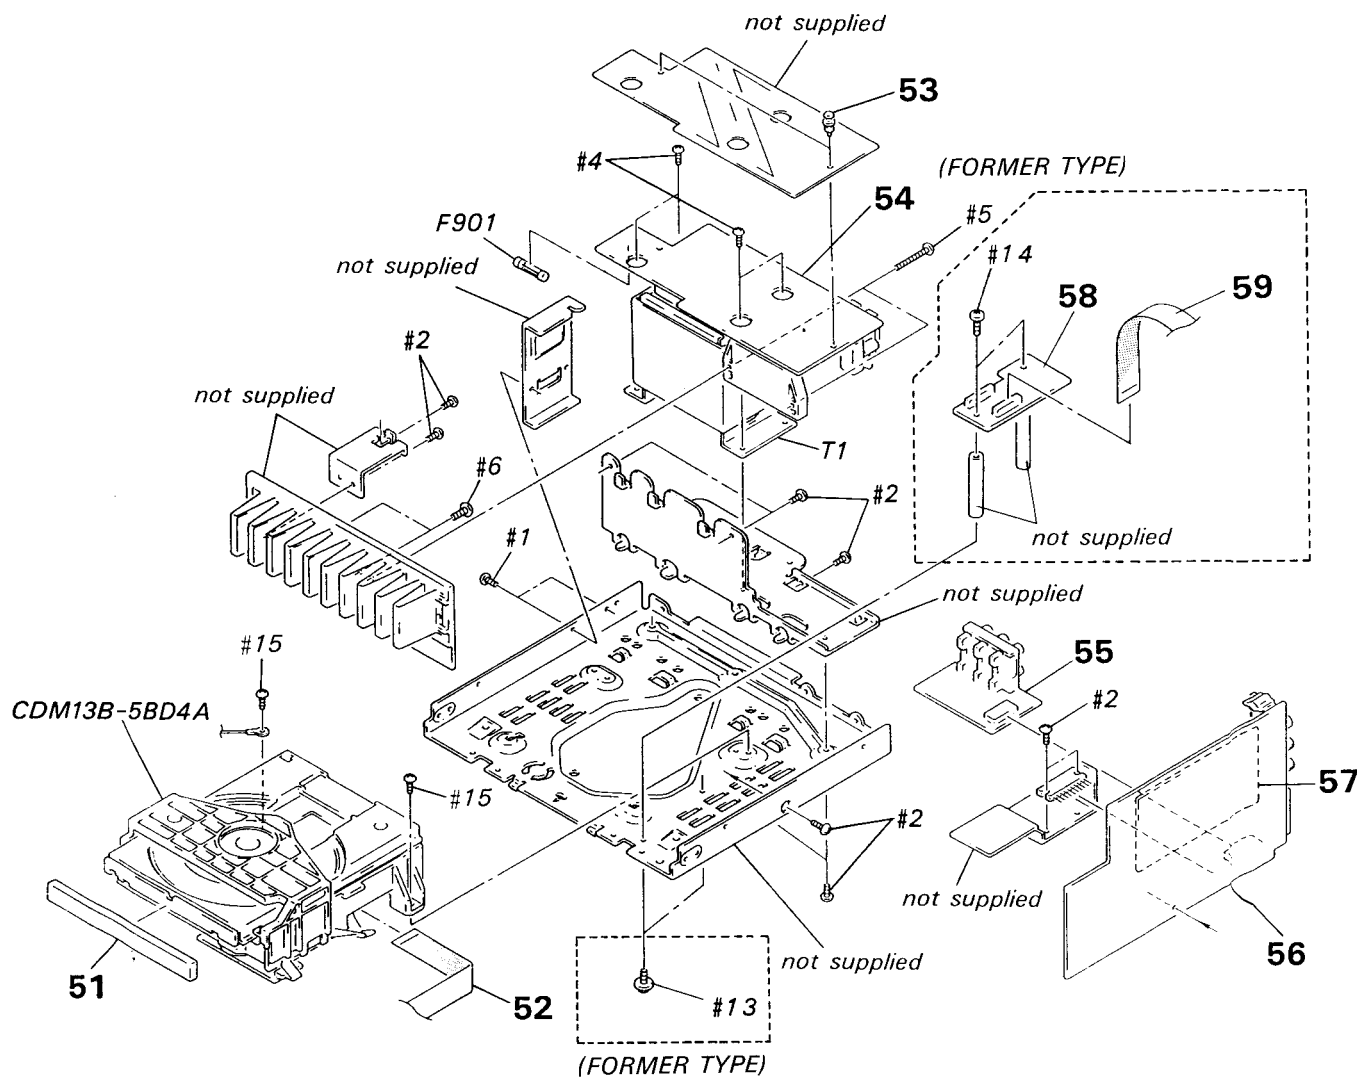


Ref.No.	Part No.	Description	Remark
51	4-944-199-01	PANEL, LOADING	
52	1-590-906-11	WIRE, FLAT TYPE (19 CORE)	
53	4-812-134-31	RIVET NYLON, 3.5	
54	* A-4341-652-A	POWER BOARD, COMPLETE (AEP, UK)	
54	* A-4341-653-A	POWER BOARD, COMPLETE (UK)	
54	* A-4341-661-A	POWER BOARD, COMPLETE (G)	
55	* 1-638-883-11	PIN JACK BOARD	

Ref.No.	Part No.	Description	Remark
56	* A-4341-657-A	MAIN BOARD, COMPLETE (AEP, UK)	
56	* A-4341-662-A	MAIN BOARD, COMPLETE (G, IT)	
57	* A-4303-343-A	TCB011 BOARD, COMPLETE (AEP, UK)	
57	* A-4303-344-A	TCB011 BOARD, COMPLETE (G, IT)	
58	* 1-639-977-11	CD RST BOARD (FORMER TYPE)	
59	1-690-035-11	WIRE, FLAT TYPE (19 CORE) (FORMER TYPE)	
F901	⚠ 1-532-078-00	FUSE, TIME-LAG T1A	
T1	⚠ 1-450-412-11	TRANSFORMER, POWER	

Note: The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.


5-3. CD MECHANISM SECTION-1 (CDM13B-5BD4A)

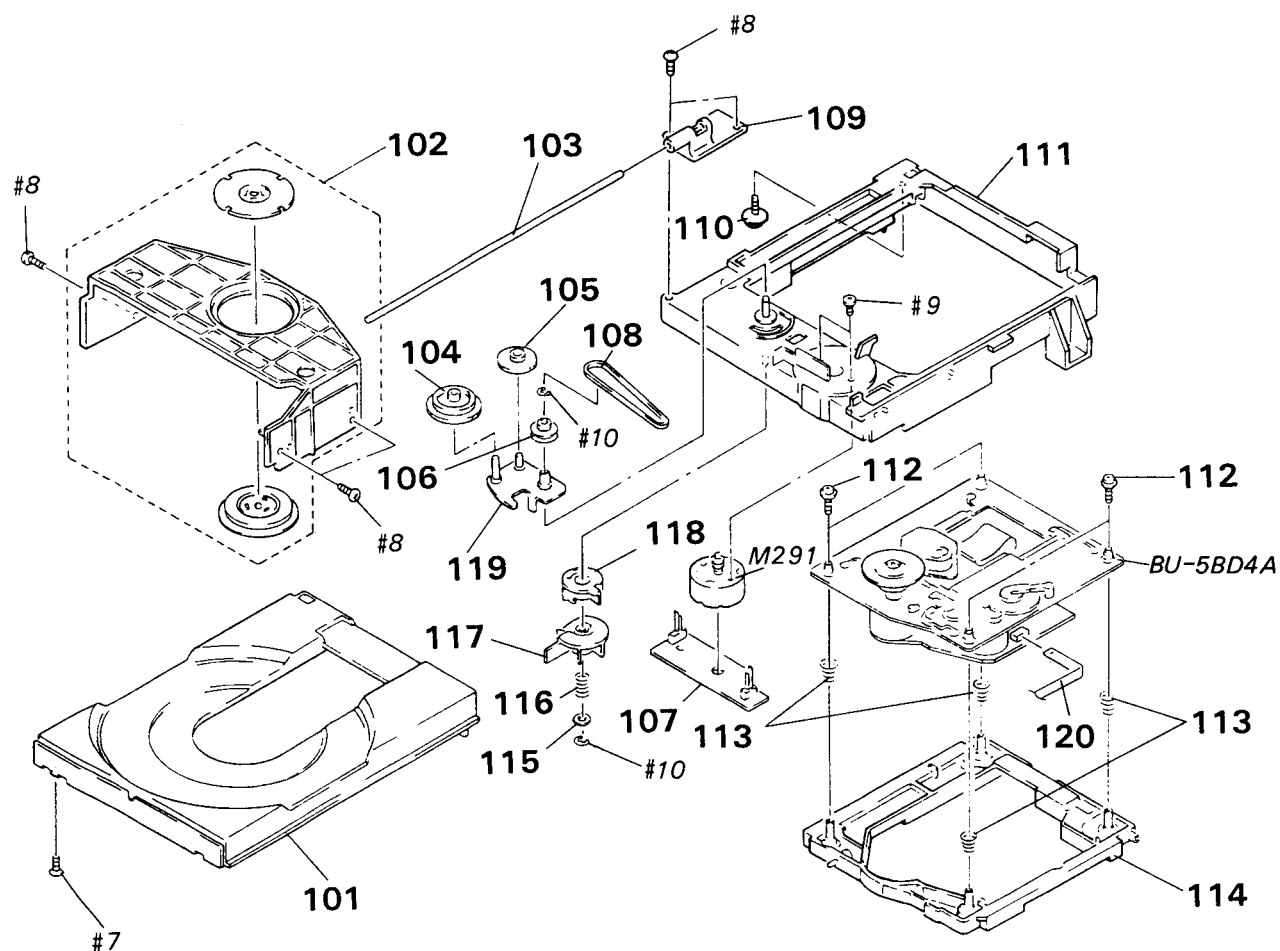

Ref. No.	Part No.	Description	Remark
101	4-944-012-01	TABLE, DISC	
102	A-4604-752-A	HOLDER (MG) ASSY	
103	4-929-764-01	SHAFT (TABLE GUIDE)	
104	4-927-620-11	GEAR (P)	
105	4-927-628-01	GEAR (C)	
106	4-929-724-01	PULLEY (B)	
107	* 1-638-308-11	LOADING BOARD	
108	4-927-649-01	BELT	
109	4-944-006-01	BEARING	
110	* 4-917-583-21	BRACKET, YOKE	
111	X-4941-462-1	CHASSIS (MD) ASSY	

Ref. No.	Part No.	Description	Remark
112	4-933-134-01	SCREW (+PTPWH M2.6X6)	
113	4-917-541-01	SPRING (B)	
114	4-929-747-01	HOLDER (BU)	
115	4-927-654-01	WASHER (LIMITER)	
116	3-659-338-00	SPRING, COMPRESSION	
117	4-929-729-01	CAM (B)	
118	4-929-727-01	CAM (A)	
119	X-4929-703-1	ARM ASSY, SWING	
120	1-590-530-11	WIRE, FLAT TYPE	
M291	A-4608-362-A	MOTOR (L) ASSY	

5-4. CD MECHANISM SECTION-2 (BU-5BD4A)

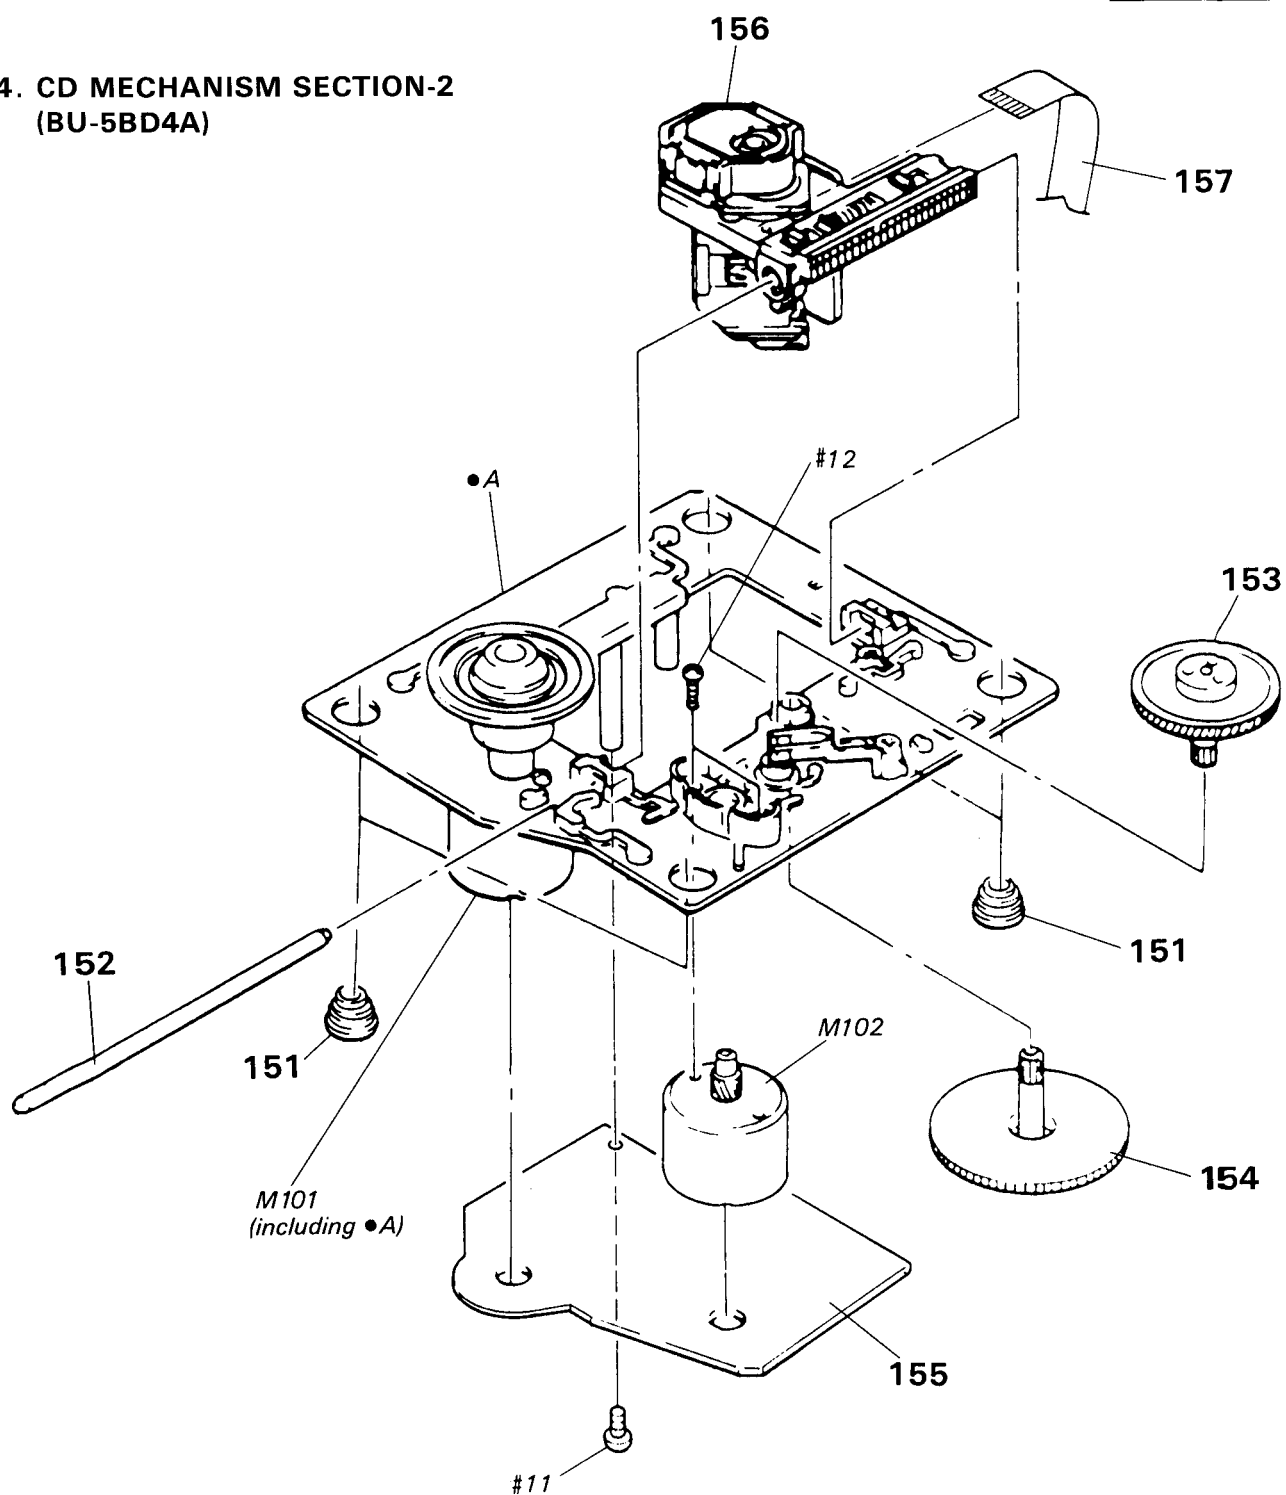

Ref. No.	Part No.	Description	Remark
151	4-933-126-01	INSULATOR (A)	
152	4-917-565-01	SHAFT, SLED	
153	4-917-567-01	GEAR (M)	
154	4-917-564-01	GEAR (P), FLATNESS	
155	* A-4617-936-A	BD BOARD, COMPLETE	

Ref. No.	Part No.	Description	Remark
156	△ 8-848-144-11	DEVICE, OPTICAL KSS-240A	
157	1-575-001-11	WIRE, FLAT TYPE (12 CORE)	
M101	X-4917-523-3	MOTOR ASSY (SPINDLE)	
M102	X-4917-504-1	MORTOR ASSY (SLED)	

Note: The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

SECTION 6

ELECTRICAL PARTS LIST

BD

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX, -X mean standardized parts, so they may have some differences from the original one.
- RESISTORS
All resistors are in ohms
METAL: Metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable

● SEMICONDUCTORS

In each case, u: μ , for example:
uA...: μ A..., uPA...: μ P A...,
uPB...: μ P B..., uPC...: μ P C...,
uPD...: μ P D...

● CAPACITORS

uF: μ F

● COILS

uH: μ H

NEW TYPE: AEP, G, IT, UK

FORMER TYPE: AEP, UK

G: Germany

IT: Italian

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
	* A-4617-936-A BD BOARD, COMPLETE						

	< CAPACITOR >						
C101	1-163-038-00	CERAMIC CHIP 0.1uF	25V	C202	1-163-145-00	CERAMIC CHIP 0.0015uF 5%	50V
C102	1-163-989-11	CERAMIC CHIP 0.033uF	10% 25V	C203	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C103	1-135-155-21	TANTALUM CHIP 4.7uF	10% 10V	C204	1-164-346-11	CERAMIC CHIP 1uF	16V
C104	1-163-038-00	CERAMIC CHIP 0.1uF	25V	C205	1-164-346-11	CERAMIC CHIP 1uF	16V
C105	1-126-607-11	ELECT CHIP 47uF	20% 4V	C206	1-163-101-00	CERAMIC CHIP 22PF	5% 50V
C106	1-126-607-11	ELECT CHIP 47uF	20% 4V	C207	1-163-101-00	CERAMIC CHIP 22PF	5% 50V
C107	1-126-607-11	ELECT CHIP 47uF	20% 4V	C208	1-164-346-11	CERAMIC CHIP 1uF	16V
C108	1-163-038-00	CERAMIC CHIP 0.1uF	25V	C209	1-164-346-11	CERAMIC CHIP 1uF	16V
C109	1-163-038-00	CERAMIC CHIP 0.1uF	25V	C210	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C110	1-163-989-11	CERAMIC CHIP 0.033uF	10% 25V	C301	1-164-346-11	CERAMIC CHIP 1uF	16V
C111	1-164-346-11	CERAMIC CHIP 1uF	16V	C302	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C112	1-164-232-11	CERAMIC CHIP 0.01uF	50V	C303	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C113	1-164-232-11	CERAMIC CHIP 0.01uF	50V	C304	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C114	1-164-695-11	CERAMIC CHIP 0.0022uF	5% 50V	C305	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C115	1-164-695-11	CERAMIC CHIP 0.0022uF	5% 50V	C306	1-163-145-00	CERAMIC CHIP 0.0015uF 5%	50V
C117	1-163-038-00	CERAMIC CHIP 0.1uF	25V	C307	1-163-145-00	CERAMIC CHIP 0.0015uF 5%	50V
C118	1-163-038-00	CERAMIC CHIP 0.1uF	25V	C308	1-164-346-11	CERAMIC CHIP 1uF	16V
C119	1-164-695-11	CERAMIC CHIP 0.0022uF	5% 50V	C309	1-164-346-11	CERAMIC CHIP 1uF	16V
C120	1-163-989-11	CERAMIC CHIP 0.033uF	10% 25V	C310	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
C151	1-163-019-00	CERAMIC CHIP 0.0068uF	10% 50V	C311	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
C152	1-164-346-11	CERAMIC CHIP 1uF	16V	C312	1-164-346-11	CERAMIC CHIP 1uF	16V
C153	1-163-135-00	CERAMIC CHIP 560PF	5% 50V	C401	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C154	1-164-695-11	CERAMIC CHIP 0.0022uF	5% 50V	C402	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C155	1-163-023-00	CERAMIC CHIP 0.015uF	5% 50V				
C171	1-163-038-00	CERAMIC CHIP 0.1uF	25V	< CONNECTOR >			
C172	1-163-038-00	CERAMIC CHIP 0.1uF	25V	CN101	1-580-858-11	SOCKET, CONNECTOR (SMT) 5P	
C173	1-163-038-00	CERAMIC CHIP 0.1uF	25V	CN102	1-580-866-11	SOCKET, CONNECTOR (SMT) 12P	
C174	1-163-038-00	CERAMIC CHIP 0.1uF	25V	CN103	1-580-872-41	SOCKET, CONNECTOR (SMT) 19P	
C201	1-163-809-11	CERAMIC CHIP 0.047uF	10% 25V	< DIODE >			
				D101	8-719-976-88	DIODE DTZ3.98	
				D201	8-719-988-62	DIODE 1SS355	

BD

CD

RST

Ref.No.	Part No.	Description	Remark
< IC >			
IC101	8-752-050-82 IC	CXA1372Q	
IC102	8-759-823-48 IC	LA6525M	
IC103	8-759-636-20 IC	M54641FP	
IC201	8-752-340-37 IC	CXD25050	
IC202	8-759-153-16 IC	uPD75116GF-760-3BE	
IC301	8-759-506-63 IC	PCM67U	
IC302	8-759-981-95 IC	RC4558S	
< CHIP JUMPER >			
J201	1-216-295-11 METAL CHIP	0	5% 1/10W
J202	1-216-295-11 METAL CHIP	0	5% 1/10W
< TRANSISTOR >			
Q101	8-729-805-45 TRANSISTOR	2SC3395	
Q201	8-729-602-21 TRANSISTOR	2SC4154-F	
< RESISTOR >			
R101	1-216-097-00 METAL CHIP	100K	5% 1/10W
R102	1-216-097-00 METAL CHIP	100K	5% 1/10W
R103	1-216-091-00 METAL CHIP	56K	5% 1/10W
R104	1-216-099-00 METAL CHIP	120K	5% 1/10W
R105	1-216-069-00 METAL CHIP	6.8K	5% 1/10W
R106	1-216-061-00 METAL CHIP	3.3K	5% 1/10W
R107	1-216-114-00 METAL GLAZE	510K	5% 1/10W
R108	1-216-105-00 METAL CHIP	220K	5% 1/10W
R109	1-216-061-00 METAL CHIP	3.3K	5% 1/10W
R110	1-216-049-00 METAL CHIP	1K	5% 1/10W
R111	1-216-049-00 METAL CHIP	1K	5% 1/10W
R112	1-216-083-00 METAL CHIP	27K	5% 1/10W
R113	1-216-071-00 METAL CHIP	8.2K	5% 1/10W
R114	1-216-105-00 METAL CHIP	220K	5% 1/10W
R152	1-216-073-00 METAL CHIP	10K	5% 1/10W
R153	1-216-085-00 METAL CHIP	33K	5% 1/10W
R154	1-216-085-00 METAL CHIP	33K	5% 1/10W
R155	1-216-093-00 METAL CHIP	68K	5% 1/10W
R156	1-216-081-00 METAL CHIP	22K	5% 1/10W
R157	1-236-427-11 NETWORK, RES	18K	
R159	1-216-079-00 METAL CHIP	18K	5% 1/10W
R160	1-216-049-00 METAL CHIP	1K	5% 1/10W
R171	1-216-001-00 METAL CHIP	10	5% 1/10W
R172	1-216-001-00 METAL CHIP	10	5% 1/10W
R173	1-216-001-00 METAL CHIP	10	5% 1/10W
R174	1-216-001-00 METAL CHIP	10	5% 1/10W
R201	1-216-061-00 METAL CHIP	3.3K	5% 1/10W
R202	1-216-073-00 METAL CHIP	10K	5% 1/10W
R203	1-216-061-00 METAL CHIP	3.3K	5% 1/10W
R204	1-216-049-00 METAL CHIP	1K	5% 1/10W

Ref.No.	Part No.	Description	Remark
R205	1-216-089-00 METAL CHIP	47K	5% 1/10W
R209	1-216-081-00 METAL CHIP	22K	5% 1/10W
R210	1-236-427-11 NETWORK, RES	18K	
R212	1-236-427-11 NETWORK, RES	18K	
R214	1-239-039-11 RESISTOR, NETWORK	22K	
R215	1-216-049-00 METAL CHIP	1K	5% 1/10W
R218	1-216-065-00 METAL CHIP	4.7K	5% 1/10W
R219	1-216-073-00 METAL CHIP	10K	5% 1/10W
R220	1-216-001-00 METAL CHIP	10	5% 1/10W
R222	1-236-427-11 NETWORK, RES	18K	
R223	1-216-081-00 METAL CHIP	22K	5% 1/10W
R224	1-216-081-00 METAL CHIP	22K	5% 1/10W
R225	1-216-081-00 METAL CHIP	22K	5% 1/10W
R226	1-216-081-00 METAL CHIP	22K	5% 1/10W
R301	1-236-413-11 NETWORK, RES	1.2K	
R303	1-216-055-00 METAL CHIP	1.8K	5% 1/10W
R304	1-216-055-00 METAL CHIP	1.8K	5% 1/10W
R305	1-216-097-00 METAL CHIP	100K	5% 1/10W
R306	1-216-097-00 METAL CHIP	100K	5% 1/10W
< VARIABLE RESISTOR >			
RV101	1-241-395-11 RES, ADJ, METAL GLAZE	10K	
RV102	1-241-395-11 RES, ADJ, METAL GLAZE	10K	
< SWITCH >			
SW101	1-572-085-11 SWITCH, LEAF (LIMIT)		
< CRYSTAL >			
X201	1-579-280-11 VIBRATOR, CRYSTAL	6.9344MHz	
X202	1-579-216-11 VIBRATOR, CERAMIC	4MHz	

* 1-639-977-11 CD RST BOARD (FORMER TYPE)			

< CAPACITOR >			
C1	1-126-925-11 ELECT	470uF	20% 10V
C2	1-126-933-11 ELECT	100uF	20% 10V
C3	1-126-933-11 ELECT	100uF	20% 10V
C4	1-126-933-11 ELECT	100uF	20% 10V
C5	1-126-933-11 ELECT	1uF	20% 10V
C6	1-126-933-11 ELECT	1uF	20% 10V
< CONNECTOR >			
CN1	* 1-564-706-11 CONNECTOR PIN	4P	
CN2	* 1-573-149-11 CONNECTR PIN		
CN3	* 1-573-149-11 CONNECTR PIN		

CD	RST	LOADING	MAIN	PANEL	JACK	PIN	JACK	VR
----	-----	---------	------	-------	------	-----	------	----

Ref. No.	Part No.	Description	Remark
----------	----------	-------------	--------

< DIODE >

D1	8-719-912-20	DIODE 1SS120	
D2	8-719-912-20	DIODE 1SS120	
D3	8-719-912-20	DIODE 1SS120	

< IC >

IC1	8-759-821-93	IC LA5601	
IC2	8-759-916-12	IC SN74HC00AN	

< TRANSISTOR >

Q1	8-729-620-02	TRANSISTOR 2SA1115-EF	
Q2	8-729-620-05	TRANSISTOR 2SA2603-EF	

< RESISTOR >

R1	1-249-421-11	CARBON 2.2K 5% 1/4W	
R2	1-249-397-11	CARBON 22 5% 1/4W	
R3	1-249-421-11	CARBON 2.2K 5% 1/4W	
R4	1-249-433-11	CARBON 22K 5% 1/4W	
R5	1-249-405-11	CARBON 100 5% 1/4W	
R6	1-249-405-11	CARBON 100 5% 1/4W	

* 1-638-308-11 LOADING BOARD

< CONNECTOR >

CN201	1-580-918-11	HOUSING, CONNECTOR 5P	
-------	--------------	-----------------------	--

< SWITCH >

S291	1-571-924-11	SWITCH, LEAF (LOAD OUT)	
S292	1-571-924-11	SWITCH, LEAF (LOAD IN)	

* A-4341-657-A MAIN BOARD, COMPLETE (AEP, UK)
* A-4341-662-A MAIN BOARD, COMPLETE (G, IT)

* A-4341-658-A PANEL BOARD, COMPLETE (AEP, UK)
* A-4341-664-A PANEL BOARD, COMPLETE (G)
* A-4341-707-A PANEL BOARD, COMPLETE (IT)

* 1-638-882-11 JACK BOARD

* 1-638-883-11 PIN JACK BOARD

Ref. No.	Part No.	Description	Remark
----------	----------	-------------	--------

* 1-638-884-11 VR BOARD

* 4-944-202-01 HOLDER (FL)
* 4-946-050-11 CUSHION (FL)
7-685-646-79 SCREW +BVTP 3X8 TYPE2 N-S

< CAPACITOR >

C1	1-126-925-11	ELECT 470uF 20% 10V (NEW TYPE)	
C2	1-126-933-11	ELECT 100uF 20% 16V (NEW TYPE)	
C3	1-126-933-11	ELECT 100uF 20% 16V (NEW TYPE)	
C4	1-126-933-11	ELECT 100uF 20% 16V (NEW TYPE)	
C5	1-164-346-11	CERAMIC CHIP 1uF 16V (NEW TYPE)	
C6	1-164-346-11	CERAMIC CHIP 1uF 16V (NEW TYPE)	
C101	1-163-117-00	CERAMIC CHIP 100PF 5% 50V	
C102	1-163-117-00	CERAMIC CHIP 100PF 5% 50V	
C103	1-163-117-00	CERAMIC CHIP 100PF 5% 50V	
C104	1-126-157-11	ELECT 10uF 20% 16V	
C105	1-164-232-11	CERAMIC CHIP 0.01uF 50V	
C106	1-163-018-00	CERAMIC CHIP 0.0056uF 5% 50V	
C107	1-163-012-00	CERAMIC CHIP 0.0018uF 10% 50V	
C108	1-164-346-11	CERAMIC CHIP 1uF 16V	
C109	1-163-117-00	CERAMIC CHIP 100PF 5% 50V (AEP, UK)	
C109	1-163-125-00	CERAMIC CHIP 220PF 5% 50V (G, IT)	
C110	1-163-117-00	CERAMIC CHIP 100PF 5% 50V	
C151	1-163-117-00	CERAMIC CHIP 100PF 5% 50V	
C152	1-163-117-00	CERAMIC CHIP 100PF 5% 50V	
C153	1-163-117-00	CERAMIC CHIP 100PF 5% 50V	
C154	1-126-157-11	ELECT 10uF 20% 16V	
C155	1-164-232-11	CERAMIC CHIP 0.01uF 50V	
C156	1-163-018-00	CERAMIC CHIP 0.0056uF 5% 50V	
C157	1-163-012-00	CERAMIC CHIP 0.0018uF 10% 50V	
C158	1-164-346-11	CERAMIC CHIP 1uF 16V	
C159	1-163-117-00	CERAMIC CHIP 100PF 5% 50V (AEP, UK)	
C159	1-163-125-00	CERAMIC CHIP 220PF 5% 50V (G, IT)	
C160	1-163-117-00	CERAMIC CHIP 100PF 5% 50V	
C203	1-163-117-00	CERAMIC CHIP 100PF 5% 50V	
C204	1-164-222-11	CERAMIC CHIP 0.22uF 2.5V	
C205	1-164-492-11	CERAMIC CHIP 0.15uF 10% 16V	
C206	1-163-038-00	CERAMIC CHIP 0.1uF 2.5V	
C207	1-164-343-11	CERAMIC CHIP 0.056uF 10% 2.5V	
C208	1-163-035-00	CERAMIC CHIP 0.047uF 50V	
C209	1-163-033-00	CERAMIC CHIP 0.022uF 50V	
C210	1-163-024-00	CERAMIC CHIP 0.018uF 10% 50V	
C211	1-164-232-11	CERAMIC CHIP 0.01uF 50V	

MAIN

PANEL

JACK

PIN JACK

VR

Ref. No.	Part No.	Description	Remark
C212	1-163-019-00	CERAMIC CHIP	0.0068uF 10% 50V
C213	1-163-016-00	CERAMIC CHIP	0.0039uF 10% 50V
C214	1-163-014-00	CERAMIC CHIP	0.0027uF 10% 50V
C215	1-163-011-11	CERAMIC CHIP	0.0015uF 10% 50V
C216	1-163-010-11	CERAMIC CHIP	0.0012uF 10% 50V
C217	1-163-137-00	CERAMIC CHIP	680PF 5% 50V
C218	1-126-163-11	ELECT	4.7uF 20% 50V
C219	1-163-117-00	CERAMIC CHIP	100PF 5% 50V
C220	1-126-163-11	ELECT	4.7uF 20% 50V
C221	1-126-163-11	ELECT	4.7uF 20% 50V
C222	1-163-005-11	CERAMIC CHIP	470PF 10% 50V
C223	1-126-163-11	ELECT	4.7uF 20% 50V
C224	1-163-833-00	CERAMIC CHIP	0.068uF 25V
C225	1-126-163-11	ELECT	4.7uF 20% 50V
C226	1-163-833-00	CERAMIC CHIP	0.068uF 25V
C229	1-163-005-11	CERAMIC CHIP	470PF 10% 50V
C230	1-163-005-11	CERAMIC CHIP	470PF 10% 50V
C231	1-126-096-11	ELECT	10uF 20% 35V
C232	1-126-163-11	ELECT	4.7uF 20% 50V
C233	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C234	1-164-505-11	CERAMIC CHIP	2.2uF 16V
C236	1-163-035-00	CERAMIC CHIP	0.047uF 50V
C237	1-126-935-11	ELECT	470uF 20% 16V
C238	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C239	1-126-933-11	ELECT	100uF 20% 16V
C241	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C243	1-136-173-00	FILM	0.47uF 5% 50V
C244	1-136-173-00	FILM	0.47uF 5% 50V
C245	1-126-163-11	ELECT	4.7uF 20% 50V
C246	1-126-933-11	ELECT	100uF 20% 16V
C247	1-126-933-11	ELECT	100uF 20% 16V
C253	1-163-117-00	CERAMIC CHIP	100PF 5% 50V
C254	1-164-222-11	CERAMIC CHIP	0.22uF 25V
C255	1-164-492-11	CERAMIC CHIP	0.15uF 10% 16V
C256	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C257	1-164-343-11	CERAMIC CHIP	0.056uF 10% 25V
C258	1-163-035-00	CERAMIC CHIP	0.047uF 50V
C259	1-163-033-00	CERAMIC CHIP	0.022uF 50V
C260	1-163-024-00	CERAMIC CHIP	0.018uF 10% 50V
C261	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C262	1-163-019-00	CERAMIC CHIP	0.0068uF 10% 50V
C263	1-163-016-00	CERAMIC CHIP	0.0039uF 10% 50V
C264	1-163-014-00	CERAMIC CHIP	0.0027uF 10% 50V
C265	1-163-011-11	CERAMIC CHIP	0.0015uF 10% 50V
C266	1-163-010-11	CERAMIC CHIP	0.0012uF 10% 50V
C267	1-163-137-00	CERAMIC CHIP	680PF 5% 50V
C268	1-126-163-11	ELECT	4.7uF 20% 50V
C269	1-163-117-00	CERAMIC CHIP	100PF 5% 50V
C270	1-126-163-11	ELECT	4.7uF 20% 50V

Ref. No.	Part No.	Description	Remark
C271	1-126-163-11	ELECT	4.7uF 20% 50V
C272	1-163-005-11	CERAMIC CHIP	470PF 10% 50V
C273	1-126-163-11	ELECT	4.7uF 20% 50V
C274	1-163-833-00	CERAMIC CHIP	0.068uF 25V
C275	1-126-163-11	ELECT	4.7uF 20% 50V
C276	1-163-833-00	CERAMIC CHIP	0.068uF 25V
C278	1-126-967-11	ELECT	47uF 20% 50V
C279	1-126-967-11	ELECT	47uF 20% 50V
C280	1-126-948-11	ELECT	100uF 20% 35V
C281	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C282	1-126-948-11	ELECT	100uF 20% 35V
C285	1-126-937-11	ELECT	4700uF 20% 16V
C286	1-126-943-11	ELECT	2200uF 20% 25V
C287	1-126-301-11	ELECT	1uF 20% 50V
C288	1-126-096-11	ELECT	10uF 20% 35V
C289	1-124-589-11	ELECT	47uF 20% 16V
C290	1-124-477-11	ELECT	47uF 20% 25V
C291	1-124-589-11	ELECT	47uF 20% 16V
C292	1-124-589-11	ELECT	47uF 20% 16V
C295	1-126-096-11	ELECT	10uF 20% 35V
C296	1-126-096-11	ELECT	10uF 20% 35V
C297	1-126-096-11	ELECT	10uF 20% 35V
C301	1-126-925-11	ELECT	470uF 20% 10V
C302	1-126-925-11	ELECT	470uF 20% 10V
C303	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V
C306	1-163-095-00	CERAMIC CHIP	12PF 5% 50V
C307	1-163-095-00	CERAMIC CHIP	12PF 5% 50V
C311	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C312	1-126-157-11	ELECT	10uF 20% 16V
C313	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C314	1-125-486-11	DUBLE LAYERS	0.22F 5.5V
C315	1-164-346-11	CERAMIC CHIP	1uF 16V
C341	1-164-005-11	CERAMIC CHIP	0.47uF 25V
C342	1-164-005-11	CERAMIC CHIP	0.47uF 25V
C361	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V
C362	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C363	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V
C364	1-163-117-00	CERAMIC CHIP	100PF 5% 50V
C365	1-163-109-00	CERAMIC CHIP	47PF 5% 50V
C366	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C367	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C368	1-164-346-11	CERAMIC CHIP	1uF 16V
C369	1-126-933-11	ELECT	100uF 20% 16V
C370	1-163-018-00	CERAMIC CHIP	0.0056uF 5% 50V
C371	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C372	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V
C373	1-163-117-00	CERAMIC CHIP	100PF 5% 50V
C374	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C381	1-163-038-00	CERAMIC CHIP	0.1uF 25V

MAIN

PANEL

JACK

PIN JACK

VR

Ref. No.	Part No.	Description	Remark
C382	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V
C383	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
C384	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C391	1-126-157-11	ELECT 10uF	20% 16V
C392	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C395	1-126-157-11	ELECT 10uF	20% 16V
C396	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C1101	1-163-117-11	CERAMIC CHIP 100PF	5% 50V (G, IT)
C1151	1-163-117-11	CERAMIC CHIP 100PF	5% 50V (G, IT)
C2201	1-164-346-11	CERAMIC CHIP 1uF	16V
C2202	1-164-346-11	CERAMIC CHIP 1uF	16V
C2203	1-164-505-11	CERAMIC CHIP 2.2uF	16V
C2204	1-164-505-11	CERAMIC CHIP 2.2uF	16V
C2205	1-164-346-11	CERAMIC CHIP 1uF	16V
C2206	1-163-133-00	CERAMIC CHIP 470PF	5% 50V
C2208	1-126-926-11	ELECT 1000uF	20% 10V
C2209	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
C2210	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
C2211	1-126-923-11	ELECT 220uF	20% 10V
C2212	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C2216	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
C2217	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
C2218	1-164-346-11	CERAMIC CHIP 1uF	16V
C2219	1-164-346-11	CERAMIC CHIP 1uF	16V
C2220	1-163-036-00	CERAMIC CHIP 0.068uF	50V
C2221	1-124-907-11	ELECT 10uF	20% 50V
C2222	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V (G, IT)
C2223	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V (G, IT)
C2251	1-164-346-11	CERAMIC CHIP 1uF	16V
C2252	1-164-346-11	CERAMIC CHIP 1uF	16V
C2253	1-164-505-11	CERAMIC CHIP 2.2uF	16V
C2254	1-164-505-11	CERAMIC CHIP 2.2uF	16V
C2256	1-163-133-00	CERAMIC CHIP 470PF	5% 50V
C2259	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
C2260	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
C2271	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C2272	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C2273	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C2274	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C2275	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C2276	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
C2277	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
C2278	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
C2279	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C2280	1-163-038-00	CERAMIC CHIP 0.1uF	25V

Ref. No.	Part No.	Description	Remark
C2285	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C2286	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C2288	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C2289	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C2290	1-164-005-11	CERAMIC CHIP 0.47uF	25V
C2291	1-126-947-91	ELECT 47uF	20% 35V
C2371	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C2372	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C3301	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C3302	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C3303	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C3304	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C3305	1-126-933-11	ELECT 100uF	20% 16V
C3306	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C3371	1-126-933-11	ELECT 100uF	20% 16V
C3372	1-164-505-11	CERAMIC CHIP 2.2uF	16V
C3376	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C3381	1-126-933-11	ELECT 100uF	20% 16V
C3382	1-164-505-11	CERAMIC CHIP 2.2uF	16V

< CONNECTOR >

CN1	* 1-573-107-11	CONNECTOR, PC BOARD (PLUG)
CN2	* 1-573-107-11	CONNECTOR, PC BOARD (PLUG)
CN4	* 1-573-107-11	CONNECTOR, PC BOARD (PLUG)
CN5	* 1-573-107-11	CONNECTOR, PC BOARD (PLUG)
CN7	* 1-573-107-11	CONNECTOR, PC BOARD (PLUG)
CN101	* 1-566-859-11	SOCKET, CONNECTOR 15P (SYSTEM CONTROL)
CN102	* 1-565-971-11	SOCKET, CONNECTOR (PC BOARD) 9P
CN103	* 1-565-968-11	PIN, CONNECTOR (PC BOARD) 9P
CN201	* 1-573-084-11	CONNECTOR, FPC (NON ZIF) 20P
CN202	* 1-573-084-11	CONNECTOR, FPC (NON ZIF) 20P
CN203	* 1-573-085-11	CONNECTOR, FPC (NON ZIF) 19P
CN204	* 1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P
CN205	* 1-564-714-11	PIN, CONNECTOR (SMALL TYPE) 12P
CN301	* 1-573-084-11	CONNECTOR, FPC (NON ZIF) 20P
CN302	* 1-573-084-11	CONNECTOR, FPC (NON ZIF) 20P

CN351	* 1-561-651-00	SOCKET, CONNECTOR 7P
CN352	1-569-132-11	PIN, CONNECTOR 7P
CN353	1-573-712-11	CONNECTOR, BOARD TO BOARD 8P
CN361	1-562-088-00	SOCKET, CONNECTOR 9P
CN362	1-560-943-00	PIN, CONNECTOR 9P

< DIODE >

D1	8-719-988-62	DIODE 1SS355 (NEW TYPE)
D2	8-719-988-62	DIODE 1SS355 (NEW TYPE)
D3	8-719-988-62	DIODE 1SS355 (NEW TYPE)
D201	8-719-988-62	DIODE 1SS355
D202	8-719-988-62	DIODE 1SS355
D203	8-719-988-62	DIODE 1SS355

MAIN

PANEL

JACK

PIN JACK

VR

Ref. No.	Part No.	Description	Remark
D205	8-719-976-96	DIODE DTZ4. 7C	
D281	8-719-210-33	DIODE EC10DS2	
D282	8-719-210-33	DIODE EC10DS2	
D283	8-719-977-81	DIODE DTZ33B	
D284	8-719-988-62	DIODE 1SS355	
D286	8-719-210-33	DIODE EC10DS2	
D287	8-719-210-33	DIODE EC10DS2	
D288	8-719-210-39	DIODE EC10DS-04	
D289	8-719-210-39	DIODE EC10DS-04	
D290	8-719-977-36	DIODE DTZ12B	
D291	8-719-988-62	DIODE 1SS355	
D292	8-719-977-07	DIODE DTZ6. 2B	
D293	8-719-988-62	DIODE 1SS355	
D294	8-719-988-62	DIODE 1SS355	
D301	8-719-977-03	DIODE DTZ5. 6B	
D302	8-719-977-03	DIODE DTZ5. 6B	
D311	8-719-988-62	DIODE 1SS355	
D312	8-719-988-62	DIODE 1SS355	
D313	8-719-988-62	DIODE 1SS355	
D314	8-719-988-62	DIODE 1SS355	
D316	8-719-301-39	DIODE SEL2210S	
D317	8-719-301-39	DIODE SEL2210S	
D318	8-719-301-39	DIODE SEL2210S	
D319	8-719-301-39	DIODE SEL2210S	
D320	8-719-301-39	DIODE SEL2210S	
D321	8-719-301-39	DIODE SEL2210S	
D322	8-719-301-39	DIODE SEL2210S	
D323	8-719-301-39	DIODE SEL2210S	
D324	8-719-988-62	DIODE 1SS355	
D325	8-719-988-62	DIODE 1SS355	
D326	8-719-988-62	DIODE 1SS355	
D327	8-719-988-62	DIODE 1SS355	
D328	8-719-988-62	DIODE 1SS355	
D329	8-719-988-62	DIODE 1SS355	
D330	8-719-988-62	DIODE 1SS355	
D331	8-719-988-62	DIODE 1SS355	
D391	8-719-988-62	DIODE 1SS355	
< FILTER >			
FL301	1-519-637-11	INDICATOR TUBE, FLUORESCENT	
< IC >			
IC1	8-759-821-93	IC LA5601 (NEW TYPE)	
IC101	8-759-981-95	IC RC4558S	
IC201	8-759-516-41	IC CD4052BCM	
IC202	8-759-516-41	IC CD4052BCM	
IC203	8-759-981-95	IC RC4558S	
IC204	8-759-516-47	IC CD4066BCM	

Ref. No.	Part No.	Description	Remark
IC205	8-759-636-57	IC CXA1492Q	
IC206	8-759-981-95	IC RC4558S	
IC207	8-759-823-46	IC LA5603	
IC301	8-759-991-11	IC XR1091DCP	
IC302	8-759-516-41	IC CD4052BCM	
IC303	8-759-140-57	IC uPD4990AG	
IC304	8-759-500-31	IC X24C01P	
IC305	8-759-154-53	IC uPD78134GF-032-3B9	
IC306	8-759-512-44	IC SN755703	
IC307	8-759-512-44	IC SN755703	
IC308	8-749-922-36	IC GP1U50XB	
IC309	8-759-927-29	IC SN74HCU04ANS	
IC361	8-759-981-95	IC RC4558S	
IC362	8-759-636-55	IC M5218AFP	
IC395	8-759-820-62	IC LB1639	
< JACK >			
J101	1-565-320-11	JACK, PIN 6P (VIDEO/AUX, DAT)	
J361	1-562-837-21	JACK (MIX MIC)	
J362	1-562-837-21	JACK (HEADPHONES)	
< CHIP JUMPER >			
JW201	1-216-295-00	METAL CHIP 0 5% 1/10W	
JW202	1-216-295-00	METAL CHIP 0 5% 1/10W	
JW203	1-216-295-00	METAL CHIP 0 5% 1/10W	
JW204	1-216-295-00	METAL CHIP 0 5% 1/10W	
JW209	1-216-295-00	METAL CHIP 0 5% 1/10W	
JW210	1-216-295-00	METAL CHIP 0 5% 1/10W	
JW212	1-216-295-00	METAL CHIP 0 5% 1/10W	
JW282	1-216-296-00	METAL CHIP 0 5% 1/8W	
JW284	1-216-296-00	METAL CHIP 0 5% 1/8W	
JW285	1-216-296-00	METAL CHIP 0 5% 1/8W	
JW286	1-216-296-00	METAL CHIP 0 5% 1/8W	
JW287	1-216-296-00	METAL CHIP 0 5% 1/8W	
JW304	1-216-296-00	METAL CHIP 0 5% 1/8W	
JW305	1-216-296-00	METAL CHIP 0 5% 1/8W	
JW306	1-216-296-00	METAL CHIP 0 5% 1/8W	
JW351	1-216-295-00	METAL CHIP 0 5% 1/10W	
JW352	1-216-295-00	METAL CHIP 0 5% 1/10W	
JW353	1-216-295-00	METAL CHIP 0 5% 1/10W	
JW354	1-216-295-00	METAL CHIP 0 5% 1/10W	
JW355	1-216-295-00	METAL CHIP 0 5% 1/10W	
JW357	1-216-295-00	METAL CHIP 0 5% 1/10W	
< COIL >			
L2201	1-410-393-11	INDUCTOR, CHIP 100uH	
L2202	1-408-789-21	INDUCTOR, CHIP 100uH	
L2203	1-410-393-11	INDUCTOR, CHIP 100uH	

MAIN

PANEL

JACK

PIN JACK

VR

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
< TRANSISTOR >							
Q1	8-729-602-36	TRANSISTOR 2SA1602 (NEW TYPE)		R160	1-216-295-00	METAL CHIP 0	5% 1/10W
Q2	8-729-602-21	TRANSISTOR 2SC4154-F (NEW TYPE)		R181	1-216-121-00	METAL CHIP 1M	5% 1/10W
Q3	8-729-810-19	TRANSISTOR 2SC4396 (NEW TYPE)		R182	1-216-121-00	METAL CHIP 1M	5% 1/10W
Q4	8-729-810-19	TRANSISTOR 2SC4396 (NEW TYPE)		R183	1-216-121-00	METAL CHIP 1M	5% 1/10W
Q201	8-729-602-21	TRANSISTOR 2SC4154-F		R184	1-216-121-00	METAL CHIP 1M	5% 1/10W
Q202	8-729-602-21	TRANSISTOR 2SC4154-F		R185	1-216-121-00	METAL CHIP 1M	5% 1/10W
Q203	8-729-602-21	TRANSISTOR 2SC4154-F		R186	1-216-121-00	METAL CHIP 1M	5% 1/10W
Q204	8-729-602-21	TRANSISTOR 2SC4154-F		R187	1-216-121-00	METAL CHIP 1M	5% 1/10W
Q205	8-729-602-21	TRANSISTOR 2SC4154-F		R188	1-216-073-00	METAL CHIP 10K	5% 1/10W
Q206	8-729-602-21	TRANSISTOR 2SC4154-F		R189	1-216-073-00	METAL CHIP 10K	5% 1/10W
Q281	8-729-209-15	TRANSISTOR 2SD2012		R190	1-216-049-00	METAL CHIP 1K	5% 1/10W
Q283	8-729-209-15	TRANSISTOR 2SD2012		R191	1-216-121-00	METAL CHIP 1M	5% 1/10W
Q284	8-729-810-28	TRANSISTOR 2SC4398		R192	1-216-121-00	METAL CHIP 1M	5% 1/10W
Q286	8-729-810-16	TRANSISTOR 2SA1678		R193	1-216-121-00	METAL CHIP 1M	5% 1/10W
Q287	8-729-810-28	TRANSISTOR 2SC4398		R194	1-216-121-00	METAL CHIP 1M	5% 1/10W
Q289	8-729-602-21	TRANSISTOR 2SC4154-F		R195	1-216-121-00	METAL CHIP 1M	5% 1/10W
Q290	8-729-808-01	TRANSISTOR 2SD1622-S		R196	1-216-121-00	METAL CHIP 1M	5% 1/10W
Q311	8-729-602-21	TRANSISTOR 2SC4154-F		R197	1-216-121-00	METAL CHIP 1M	5% 1/10W
Q312	8-729-602-21	TRANSISTOR 2SC4154-F		R198	1-216-049-00	METAL CHIP 1K	5% 1/10W
Q313	8-729-602-21	TRANSISTOR 2SC4154-F		R199	1-216-057-00	METAL CHIP 2.2K	5% 1/10W
Q314	8-729-810-28	TRANSISTOR 2SC4398		R201	1-216-049-00	METAL CHIP 1K	5% 1/10W
< RESISTOR >				R202	1-216-049-00	METAL CHIP 1K	5% 1/10W
R1	1-216-057-00	METAL CHIP 2.2K 5%	1/10W (NEW TYPE)	R203	1-216-049-00	METAL CHIP 1K	5% 1/10W
R2	1-216-009-00	METAL CHIP 22 5%	1/10W (NEW TYPE)	R205	1-216-089-00	METAL CHIP 47K	5% 1/10W
R3	1-216-057-00	METAL CHIP 2.2K 5%	1/10W (NEW TYPE)	R207	1-216-089-00	METAL CHIP 47K	5% 1/10W
R4	1-216-081-00	METAL CHIP 22K 5%	1/10W (NEW TYPE)	R208	1-216-089-00	METAL CHIP 47K	5% 1/10W
R5	1-216-073-00	METAL CHIP 10K 5%	1/10W (NEW TYPE)	R209	1-216-089-00	METAL CHIP 47K	5% 1/10W
R101	1-216-049-00	METAL CHIP 1K 5%	1/10W	R210	1-216-073-00	METAL CHIP 10K	5% 1/10W
R102	1-216-089-00	METAL CHIP 47K 5%	1/10W	R211	1-216-073-00	METAL CHIP 10K	5% 1/10W
R103	1-216-049-00	METAL CHIP 1K 5%	1/10W	R212	1-216-073-00	METAL CHIP 10K	5% 1/10W
R104	1-216-115-00	METAL CHIP 560K 5%	1/10W	R213	1-216-073-00	METAL CHIP 10K	5% 1/10W
R105	1-216-089-00	METAL CHIP 47K 5%	1/10W	R214	1-216-073-00	METAL CHIP 10K	5% 1/10W
R106	1-216-049-00	METAL CHIP 1K 5%	1/10W	R215	1-216-049-00	METAL CHIP 1K 5%	1/10W
R107	1-216-089-00	METAL CHIP 47K 5%	1/10W	R216	1-216-089-00	METAL CHIP 47K 5%	1/10W
R108	1-216-037-00	METAL CHIP 330 5%	1/10W	R217	1-216-025-00	METAL CHIP 100 5%	1/10W
R109	1-216-073-00	METAL CHIP 10K 5%	1/10W	R218	1-216-121-00	METAL CHIP 1M 5%	1/10W
R110	1-216-295-00	METAL CHIP 0 5%	1/10W	R219	1-216-083-00	METAL CHIP 27K 5%	1/10W
R151	1-216-049-00	METAL CHIP 1K 5%	1/10W	R220	1-216-053-00	METAL CHIP 1.5K 5%	1/10W
R152	1-216-089-00	METAL CHIP 47K 5%	1/10W	R221	1-216-121-00	METAL CHIP 1M 5%	1/10W
R153	1-216-049-00	METAL CHIP 1K 5%	1/10W	R222	1-216-073-00	METAL CHIP 10K 5%	1/10W
R154	1-216-115-00	METAL CHIP 560K 5%	1/10W	R223	1-216-025-00	METAL CHIP 100 5%	1/10W
R155	1-216-089-00	METAL CHIP 47K 5%	1/10W	R224	1-216-057-00	METAL CHIP 2.2K 5%	1/10W
R156	1-216-049-00	METAL CHIP 1K 5%	1/10W	R251	1-216-049-00	METAL CHIP 1K 5%	1/10W
R157	1-216-089-00	METAL CHIP 47K 5%	1/10W	R252	1-216-049-00	METAL CHIP 1K 5%	1/10W
R158	1-216-037-00	METAL CHIP 330 5%	1/10W	R253	1-216-049-00	METAL CHIP 1K 5%	1/10W
R159	1-216-073-00	METAL CHIP 10K 5%	1/10W	R255	1-216-089-00	METAL CHIP 47K 5%	1/10W
				R257	1-216-089-00	METAL CHIP 47K 5%	1/10W
				R258	1-216-089-00	METAL CHIP 47K 5%	1/10W
				R259	1-216-089-00	METAL CHIP 47K 5%	1/10W

MAIN

PANEL

JACK

PIN JACK

VR

Ref. No.	Part No.	Description	Remark		
R260	1-216-073-00	METAL CHIP	10K	5%	1/10W
R261	1-216-073-00	METAL CHIP	10K	5%	1/10W
R262	1-216-073-00	METAL CHIP	10K	5%	1/10W
R263	1-216-073-00	METAL CHIP	10K	5%	1/10W
R264	1-216-073-00	METAL CHIP	10K	5%	1/10W
R265	1-216-049-00	METAL CHIP	1K	5%	1/10W
R266	1-216-089-00	METAL CHIP	47K	5%	1/10W
R267	1-216-025-00	METAL CHIP	100	5%	1/10W
R268	1-216-121-00	METAL CHIP	1M	5%	1/10W
R269	1-216-083-00	METAL CHIP	27K	5%	1/10W
R270	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R271	1-216-121-00	METAL CHIP	1M	5%	1/10W
R272	1-216-073-00	METAL CHIP	10K	5%	1/10W
R273	1-216-025-00	METAL CHIP	100	5%	1/10W
R274	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R275	1-216-073-00	METAL CHIP	10K	5%	1/10W
R276	1-216-073-00	METAL CHIP	10K	5%	1/10W (FORMER TYPE)
R277	1-216-049-00	METAL CHIP	1K	5%	1/10W
R281	1-216-049-00	METAL CHIP	1K	5%	1/10W
R282	1-216-049-00	METAL CHIP	1K	5%	1/10W
R283	1-216-049-00	METAL CHIP	1K	5%	1/10W
R284	1-216-049-00	METAL CHIP	1K	5%	1/10W
R285	1-216-001-00	METAL CHIP	10	5%	1/10W
R286	1-216-079-00	METAL CHIP	18K	5%	1/10W
R287	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R291	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R292	1-216-049-00	METAL CHIP	1K	5%	1/10W
R293	1-216-049-00	METAL CHIP	1K	5%	1/10W
R294	1-216-049-00	METAL CHIP	1K	5%	1/10W
R295	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R298	1-216-025-00	METAL CHIP	100	5%	1/10W
R299	1-216-049-00	METAL CHIP	1K	5%	1/10W
R300	1-216-077-00	METAL CHIP	15K	5%	1/10W
R301	1-216-017-00	METAL CHIP	47	5%	1/10W
R302	1-216-017-00	METAL CHIP	47	5%	1/10W
R303	1-216-073-00	METAL CHIP	10K	5%	1/10W
R304	1-216-073-00	METAL CHIP	10K	5%	1/10W
R305	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R306	1-216-049-00	METAL CHIP	1K	5%	1/10W
R307	1-216-073-00	METAL CHIP	10K	5%	1/10W
R308	1-216-073-00	METAL CHIP	10K	5%	1/10W
R309	1-216-073-00	METAL CHIP	10K	5%	1/10W
R312	1-216-073-00	METAL CHIP	10K	5%	1/10W (AEP, UK)
R313	1-216-097-00	METAL CHIP	100K	5%	1/10W
R314	1-216-073-00	METAL CHIP	10K	5%	1/10W (G, IT)
R315	1-216-097-00	METAL CHIP	100K	5%	1/10W
R316	1-216-073-00	METAL CHIP	10K	5%	1/10W

Ref. No.	Part No.	Description	Remark		
R317	1-216-097-00	METAL CHIP	100K	5%	1/10W
R318	1-216-073-00	METAL CHIP	10K	5%	1/10W
R319	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R320	1-216-073-00	METAL CHIP	10K	5%	1/10W
R321	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R322	1-216-041-00	METAL CHIP	470	5%	1/10W
R323	1-216-045-00	METAL CHIP	680	5%	1/10W
R324	1-216-049-00	METAL CHIP	1K	5%	1/10W
R325	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R326	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R327	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R328	1-216-041-00	METAL CHIP	470	5%	1/10W
R329	1-216-045-00	METAL CHIP	680	5%	1/10W
R330	1-216-049-00	METAL CHIP	1K	5%	1/10W
R331	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R332	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R333	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R334	1-216-041-00	METAL CHIP	470	5%	1/10W
R335	1-216-045-00	METAL CHIP	680	5%	1/10W
R336	1-216-049-00	METAL CHIP	1K	5%	1/10W
R337	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R338	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R340	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R341	1-216-041-00	METAL CHIP	470	5%	1/10W
R342	1-216-045-00	METAL CHIP	680	5%	1/10W
R343	1-216-049-00	METAL CHIP	1K	5%	1/10W
R344	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R345	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R346	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R347	1-216-097-00	METAL CHIP	100K	5%	1/10W
R348	1-216-097-00	METAL CHIP	100K	5%	1/10W
R349	1-216-097-00	METAL CHIP	100K	5%	1/10W
R350	1-216-049-00	METAL CHIP	1K	5%	1/10W
R351	1-216-049-00	METAL CHIP	1K	5%	1/10W
R352	1-216-037-00	METAL CHIP	330	5%	1/10W
R353	1-216-037-00	METAL CHIP	330	5%	1/10W
R354	1-216-029-00	METAL CHIP	150	5%	1/10W
R355	1-216-037-00	METAL CHIP	330	5%	1/10W
R356	1-216-089-00	METAL CHIP	47K	5%	1/10W
R357	1-216-073-00	METAL CHIP	10K	5%	1/10W
R358	1-216-073-00	METAL CHIP	10K	5%	1/10W
R360	1-216-073-00	METAL CHIP	10K	5%	1/10W
R361	1-216-073-00	METAL CHIP	10K	5%	1/10W
R362	1-216-037-00	METAL CHIP	330	5%	1/10W
R363	1-216-031-00	METAL CHIP	180	5%	1/10W
R364	1-216-097-00	METAL CHIP	100K	5%	1/10W
R365	1-216-081-00	METAL CHIP	22K	5%	1/10W
R366	1-216-089-00	METAL CHIP	47K	5%	1/10W
R367	1-216-089-00	METAL CHIP	47K	5%	1/10W

MAIN

PANEL

JACK

PIN JACK

VR

POWER

Ref. No.	Part No.	Description	Remark		
R368	1-216-081-00	METAL CHIP	22K	5%	1/10W
R369	1-216-049-00	METAL CHIP	1K	5%	1/10W
R370	1-216-049-00	METAL CHIP	1K	5%	1/10W
R371	1-216-049-00	METAL CHIP	1K	5%	1/10W
R372	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R373	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R374	1-216-079-00	METAL CHIP	18K	5%	1/10W
R375	1-216-017-00	METAL CHIP	47	5%	1/10W
R376	1-216-073-00	METAL CHIP	10K	5%	1/10W
R381	1-216-049-00	METAL CHIP	1K	5%	1/10W
R382	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R383	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R384	1-216-079-00	METAL CHIP	18K	5%	1/10W
R385	1-216-017-00	METAL CHIP	47	5%	1/10W
R386	1-216-073-00	METAL CHIP	10K	5%	1/10W
R391	1-216-073-00	METAL CHIP	10K	5%	1/10W
R392	1-216-097-00	METAL CHIP	100K	5%	1/10W
R393	1-216-121-00	METAL CHIP	1M	5%	1/10W
R395	1-216-035-00	METAL CHIP	270	5%	1/10W
R396	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R397	1-216-037-00	METAL CHIP	330	5%	1/10W
R1001	1-216-049-00	METAL CHIP	1K	5%	1/10W
R1051	1-216-049-00	METAL CHIP	1K	5%	1/10W
R2201	1-216-073-00	METAL CHIP	10K	5%	1/10W
R2202	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R2203	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R2204	1-216-115-00	METAL CHIP	560K	5%	1/10W
R2205	1-216-049-00	METAL CHIP	1K	5%	1/10W
R2206	1-216-037-00	METAL CHIP	330	5%	1/10W
R2251	1-216-073-00	METAL CHIP	10K	5%	1/10W
R2252	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R2253	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R2254	1-216-115-00	METAL CHIP	560K	5%	1/10W
R2255	1-216-049-00	METAL CHIP	1K	5%	1/10W
R2256	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R3307	1-216-049-00	METAL CHIP	1K	5%	1/10W
R3308	1-216-049-00	METAL CHIP	1K	5%	1/10W
R3310	1-216-049-00	METAL CHIP	1K	5%	1/10W
R3371	1-216-025-00	METAL CHIP	100	5%	1/10W
R3381	1-216-025-00	METAL CHIP	100	5%	1/10W

< VARIABLE RESISTOR >

RV361	1-241-140-11	RES. VAR. CARBON 10K (MIC LEVEL)
RV395	1-241-418-11	RES. VAR. CARBON 10K (VOLUME)

< SWITCH >

S311	1-572-184-11	SWITCH, KEYBOARD (FUNCTION)
S312	1-572-184-11	SWITCH, KEYBOARD (RESET)

Ref. No.	Part No.	Description	Remark
S313	1-572-184-11	SWITCH, KEYBOARD (EQ ON/OFF)	
S314	1-572-184-11	SWITCH, KEYBOARD (SURROUND)	
S315	1-572-184-11	SWITCH, KEYBOARD (DBFB)	
S316	1-572-184-11	SWITCH, KEYBOARD (WAKE UP)	
S317	1-572-184-11	SWITCH, KEYBOARD (OPEN/CLOSE)	
S318	1-572-184-11	SWITCH, KEYBOARD (■)	
S319	1-572-184-11	SWITCH, KEYBOARD (▷ ▢ ▢)	
S320	1-572-184-11	SWITCH, KEYBOARD (▶▶ ◀◀)	
S321	1-572-184-11	SWITCH, KEYBOARD (◀◀ ▶▶)	
S322	1-572-184-11	SWITCH, KEYBOARD (EDIT/TIME FADE)	
S323	1-572-184-11	SWITCH, KEYBOARD (NEXT/MEMORY)	
S324	1-572-184-11	SWITCH, KEYBOARD (TIMER SET)	
S325	1-572-184-11	SWITCH, KEYBOARD (CONTINUE)	
S326	1-572-184-11	SWITCH, KEYBOARD (SHUFFLE)	
S327	1-572-184-11	SWITCH, KEYBOARD (PROGRAM)	
S328	1-572-184-11	SWITCH, KEYBOARD (CHECK)	
S329	1-572-184-11	SWITCH, KEYBOARD (SYSTEM POWER ON/OFF)	
S330	1-572-184-11	SWITCH, KEYBOARD (RESET/TUNING)	
S331	1-572-184-11	SWITCH, KEYBOARD (+)	
S332	1-572-184-11	SWITCH, KEYBOARD (BAND)	
S333	1-572-184-11	SWITCH, KEYBOARD (-)	
S334	1-572-184-11	SWITCH, KEYBOARD (CLOCK SET)	
S335	1-572-184-11	SWITCH, KEYBOARD (TIMER SET)	
S336	1-572-184-11	SWITCH, KEYBOARD (RESET)	

< TERMINAL BOARD >

TB101	* 1-537-138-31	TERMINAL BOARD (ANT)
-------	----------------	----------------------

< CLAMP >

TP105	* 3-683-631-01	CLAMP
-------	----------------	-------

< CRYSTAL >

X301	1-527-997-21	VIBRATOR, CRYSTAL
X302	Y 1-577-364-11	VIBRATOR, CERAMIC 12MHz

- * A-4341-652-A POWER BOARD, COMPLETE (AEP. IT)
- * A-4341-661-A POWER BOARD, COMPLETE (G)
- * A-4341-653-A POWER BOARD, COMPLETE (UK)

- * 1-533-213-31 HOLDER, FUSE

< CAPACITOR >

C801	1-124-907-11	ELECT	10uF	20%	50V
C802	1-162-294-31	CERAMIC	0.001uF	10%	50V
C803	1-126-233-11	ELECT	22uF	20%	50V

(AEP. UK)

POWER

Ref. No.	Part No.	Description	Remark
C804	1-164-159-11	CERAMIC 0.1uF	50V
C805	1-164-159-11	CERAMIC 0.1uF	50V
C806	1-102-114-00	CERAMIC 470PF 10%	50V (G, IT)
C807	1-164-159-11	CERAMIC 0.1uF	50V (G, IT)
C851	1-124-907-11	ELECT 10uF 20%	50V
C852	1-162-294-31	CERAMIC 0.001uF 10%	50V (AEP, UK)
C853	1-126-233-11	ELECT 22uF 20%	50V
C854	1-164-159-11	CERAMIC 0.1uF	50V
C855	1-164-159-11	CERAMIC 0.1uF	50V
C856	1-102-114-00	CERAMIC 470PF 10%	50V (G, IT)
C857	1-164-159-11	CERAMIC 0.1uF	50V (G, IT)
C873	1-126-233-11	ELECT 22uF 20%	50V
C874	1-124-910-11	ELECT 47uF 20%	50V
C875	1-124-907-11	ELECT 10uF 20%	50V
C876	1-124-907-11	ELECT 10uF 20%	50V
C877	1-124-907-11	ELECT 10uF 20%	50V
C878	1-124-910-11	ELECT 47uF 20%	50V
C879	1-124-910-11	ELECT 47uF 20%	50V
C880	1-124-910-11	ELECT 47uF 20%	50V
C901	1-124-618-11	ELECT 2200uF 20%	35V
C902	1-124-618-11	ELECT 2200uF 20%	35V
C903	1-136-850-11	FILM 0.1uF 10%	63V
C904	1-136-850-11	FILM 0.1uF 10%	63V
C905	1-164-159-11	CERAMIC 0.1uF	50V
C906	1-164-159-11	CERAMIC 0.1uF	50V
C8002	1-162-294-31	CERAMIC 0.001uF 10%	50V (G, IT)
C8030	1-164-159-11	CERAMIC 0.1uF	50V
C9001	1-136-850-11	FILM 0.1uF 10%	63V
C9002	1-101-004-00	CERAMIC 0.01uF 10%	50V (G, IT)
< BREAKER >			
CB801	1-532-564-00	BREAKER, CIRCUIT 2.2A	
CB851	1-532-564-00	BREAKER, CIRCUIT 2.2A	
< CONNECTOR >			
CN801	* 1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P	
CN901	△ 1-526-931-11	INLET, AC	
< DIODE >			
D801	8-719-912-20	DIODE 1SS120	
D909	8-719-312-09	DIODE RBA-402	

Ref. No.	Part No.	Description	Remark
		< IC >	
IC801	8-749-920-13	IC STK4132MK2	
		< IC LINK >	
ICP951	△ 1-532-846-21	LINK, IC	
ICP952	△ 1-532-846-21	LINK, IC	
		< COIL >	
L901	△ 1-410-397-21	FERRITE BEED INDUCTOR	(G, IT)
		< TRANSISTOR >	
Q801	8-729-900-80	TRANSISTOR DTC114ES	
		< RESISTOR >	
R801	1-249-417-11	CARBON 1K 5%	1/4W
R802	1-249-438-11	CARBON 56K 5%	1/4W
R803	1-249-418-11	CARBON 1.2K 5%	1/4W
R804	1-249-438-11	CARBON 56K 5%	1/4W
R805	1-249-389-11	CARBON 4.7 5%	1/4W
R807	1-249-389-11	CARBON 4.7 5%	1/4W (G, IT)
R851	1-249-417-11	CARBON 1K 5%	1/4W
R852	1-249-438-11	CARBON 56K 5%	1/4W
R853	1-249-418-11	CARBON 1.2K 5%	1/4W
R854	1-249-438-11	CARBON 56K 5%	1/4W
R855	1-249-389-11	CARBON 4.7 5%	1/4W
R856	1-249-417-11	CARBON 1K 5%	1/4W
R857	1-249-389-11	CARBON 4.7 5%	1/4W (G, IT)
R871	1-249-440-11	CARBON 82K 5%	1/4W
R872	1-249-437-11	CARBON 47K 5%	1/4W
R873	1-249-429-11	CARBON 10K 5%	1/4W
R874	1-247-883-00	CARBON 150K 5%	1/4W
R875	1-249-421-11	CARBON 2.2K 5%	1/4W
R876	1-249-421-11	CARBON 2.2K 5%	1/4W
R877	△ 1-212-881-11	FUSIBLE 100 5%	1/4W F
R878	1-249-417-11	CARBON 1K 5%	1/4W
R879	1-249-417-11	CARBON 1K 5%	1/4W
R880	△ 1-212-881-11	FUSIBLE 100 5%	1/4W F
R881	1-249-421-11	CARBON 2.2K 5%	1/4W
R882	1-249-421-11	CARBON 2.2K 5%	1/4W
R883	△ 1-212-881-11	FUSIBLE 100 5%	1/4W F
R902	△ 1-212-942-00	FUSIBLE 2.2 5%	1/2W F
R8001	1-249-438-11	CARBON 56K 5%	1/4W
R8501	1-249-438-11	CARBON 56K 5%	1/4W
R9001	△ 1-212-942-00	FUSIBLE 2.2 5%	1/2W F

Note: The components identified by mark
 △ or dotted line with mark △ are
 critical for safety.
 Replace only with part number
 specified.

POWER

TCB011

Ref. No.	Part No.	Description	Remark
R9002	△ 1-212-881-11	FUSIBLE	100 5% 1/4W F

< TERMINAL BOARD >

TB801	* 1-537-240-21	TERMINAL BOARD (CHECKER PIN) (AEP, IT, UK)	
TB801	* 1-537-156-21	TERMINAL BOARD (SPEAKER) (G)	

* A-4303-343-A TCB011 BOARD, COMPLETE (AEP, UK)

* A-4303-344-A TCB011 BOARD, COMPLETE (G, IT)

< CAPACITOR >

C1	1-124-120-11	ELECT	220uF	20%	25V
C2	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C3	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C4	1-163-038-00	CERAMIC CHIP	0.1uF		25V (G, IT)
C5	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C6	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C7	1-163-038-00	CERAMIC CHIP	0.1uF		25V (G, IT)
C8	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C9	1-163-012-00	CERAMIC CHIP	0.0018uF		50V
C10	1-163-011-11	CERAMIC CHIP	0.0015uF	10%	50V
C21	1-163-103-00	CERAMIC CHIP	27PF	5%	50V
C22	1-163-103-00	CERAMIC CHIP	27PF	5%	50V
C23	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C24	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C25	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C26	1-164-346-11	CERAMIC CHIP	1.0uF		16V
C27	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C29	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C31	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C32	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C33	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C34	1-164-005-11	CERAMIC CHIP	0.47uF		25V
C35	1-163-033-00	CERAMIC CHIP	0.022uF		50V
C36	1-163-033-00	CERAMIC CHIP	0.022uF		50V
C51	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C52	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C53	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C54	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C55	1-163-105-00	CERAMIC CHIP	33PF	5%	50V (AEP, UK)
C55	1-163-135-00	CERAMIC CHIP	560PF	5%	50V (G, IT)
C56	1-163-117-00	CERAMIC CHIP	100PF	5%	50V (G, IT)
C57	1-164-346-11	CERAMIC CHIP	1.0uF		16V

Ref. No.	Part No.	Description	Remark
C58	1-164-346-11	CERAMIC CHIP	1.0uF 16V
C59	1-164-346-11	CERAMIC CHIP	1.0uF 16V
C60	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C61	1-163-022-00	CERAMIC CHIP	0.012uF 10% 50V
C62	1-163-022-00	CERAMIC CHIP	0.012uF 10% 50V
C63	1-164-346-11	CERAMIC CHIP	1.0uF 16V
C64	1-164-346-11	CERAMIC CHIP	1.0uF 16V
C65	1-164-346-11	CERAMIC CHIP	1.0uF 16V
C66	1-164-346-11	CERAMIC CHIP	1.0uF 16V
C69	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C70	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C71	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C72	1-124-120-11	ELECT	220uF 20% 25V
C73	1-164-505-11	CERAMIC CHIP	2.2uF 16V
C74	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C75	1-126-157-11	ELECT	10uF 20% 16V
C76	1-126-101-11	ELECT	100uF 20% 16V
C79	1-126-157-11	ELECT	10uF 20% 16V
C80	1-124-472-11	ELECT	470uF 20% 10V
C81	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C82	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C83	1-164-232-11	CERAMIC CHIP	0.01uF 50V (G, IT)

< FILTER >

CF1	1-567-389-11	FILTER, CERAMIC	
CF2	1-567-389-11	FILTER, CERAMIC (G, IT)	
CF51	1-567-389-11	FILTER, CERAMIC	

< CONNECTOR >

CN1	1-573-105-11	CONNECTOR, PC BOARD (RECEPTACLE)	
CN2	1-573-105-11	CONNECTOR, PC BOARD (RECEPTACLE)	
CN3	1-573-105-11	CONNECTOR, PC BOARD (RECEPTACLE)	
CN4	1-573-105-11	CONNECTOR, PC BOARD (RECEPTACLE)	
CN5	1-573-105-11	CONNECTOR, PC BOARD (RECEPTACLE)	

< DIODE >

D21	8-719-977-03	DIODE	DTZ5.6B
D51	8-719-988-62	DIODE	1SS355

< FRONT END >

FE1	1-463-957-11	FRONT END (FM 4 GANG) (G, IT)	
FE1	1-465-673-11	FRONT END (2 BAND) (AEP, UK)	
FE2	1-239-030-11	ENCAPSULATED COMPONENT (MW)	
FE3	1-239-049-11	ENCAPSULATED COMPONENT (LW)	

Note: The components identified by mark
△ or dotted line with mark △ are
critical for safety.
Replace only with part number
specified.

Ref. No.	Part No.	Description	Remark
		< FILTER >	
FL51	1-239-029-11	ENCAPSULATED COMPONENT (G, IT)	
		< IC >	
IC21	8-759-821-43	IC LC7218M-TP	
IC51	8-759-823-68	IC LA1851NM-TP1	
		< TRANSFORMER >	
IFT51	1-404-954-11	TRANSFORMER, DISCRIMINATOR	
IFT52	1-404-713-11	TRANSFORMER, IF	
		< CHIP JUMPER >	
JW1	1-216-295-00	METAL CHIP 0 5% 1/10W	
JW2	1-216-295-00	METAL CHIP 0 5% 1/10W (AEP, UK)	
JW4	1-216-295-00	METAL CHIP 0 5% 1/10W	
JW5	1-216-295-00	METAL CHIP 0 5% 1/10W	
JW7	1-216-295-00	METAL CHIP 0 5% 1/10W	
		< COIL >	
L1	1-408-793-21	INDUCTOR, CHIP 220uH	
L51	1-408-798-00	CHIP INDUCTOR 1mH	
		< LPF >	
LPF51	1-235-221-00	FILTER, LOW PASS	
		< TRANSISTOR >	
Q1	8-729-804-72	TRANSISTOR 2SC2814-F4	
Q2	8-729-804-72	TRANSISTOR 2SC2814-F4 (G, IT)	
Q3	8-729-810-16	TRANSISTOR 2SA1678	
Q4	8-729-602-36	TRANSISTOR 2SA1602	
Q5	8-729-810-28	TRANSISTOR 2SC4398	
Q6	8-729-602-36	TRANSISTOR 2SA1602	
Q7	8-729-810-28	TRANSISTOR 2SC4398	
Q21	8-729-602-21	TRANSISTOR 2SC4154-F	
Q22	8-729-232-71	TRANSISTOR 2SK208GR3	
Q23	8-729-232-59	TRANSISTOR 2SC4666B	
Q24	8-729-232-71	TRANSISTOR 2SK208GR3	
Q25	8-729-232-59	TRANSISTOR 2SC4666B	
Q51	8-729-602-21	TRANSISTOR 2SC4154-F	
Q52	8-729-602-21	TRANSISTOR 2SC4154-F	
Q53	8-729-810-28	TRANSISTOR 2SC4398	
		< RESISTOR >	
R1	1-216-037-00	METAL CHIP 330 5% 1/10W	

Ref. No.	Part No.	Description	Remark
R2	1-216-037-00	METAL CHIP 330 5% 1/10W	
R3	1-216-109-00	METAL CHIP 330K 5% 1/10W	
R4	1-216-037-00	METAL CHIP 330 5% 1/10W	
R5	1-216-109-00	METAL CHIP 330K 5% 1/10W (G, IT)	
R6	1-216-037-00	METAL CHIP 330 5% 1/10W (G, IT)	
R7	1-216-025-00	METAL CHIP 100 5% 1/10W	
R8	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R9	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R10	1-216-097-00	METAL CHIP 100K 5% 1/10W	
R11	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R12	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R13	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R14	1-216-081-00	METAL CHIP 22K 5% 1/10W	
R15	1-216-121-00	METAL CHIP 1M 5% 1/10W	
R16	1-216-089-00	METAL CHIP 47K 5% 1/10W (AEP, UK)	
R21	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R22	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R23	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R24	1-216-025-00	METAL CHIP 100 5% 1/10W	
R25	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R26	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R27	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R28	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R29	1-216-025-00	METAL CHIP 100 5% 1/10W	
R30	1-216-061-00	METAL CHIP 3.3K 5% 1/10W	
R31	1-216-043-00	METAL CHIP 560 5% 1/10W	
R32	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R33	1-216-035-00	METAL CHIP 270 5% 1/10W	
R34	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R35	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R36	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R37	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R38	1-216-025-00	METAL CHIP 100 5% 1/10W	
R39	1-216-061-00	METAL CHIP 3.3K 5% 1/10W	
R40	1-216-043-00	METAL CHIP 560 5% 1/10W	
R41	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R42	1-216-035-00	METAL CHIP 270 5% 1/10W	
R43	1-216-081-00	METAL CHIP 22K 5% 1/10W	
R44	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R45	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R46	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R51	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R52	1-216-081-00	METAL CHIP 22K 5% 1/10W	
R53	1-216-085-00	METAL CHIP 33K 5% 1/10W	
R54	1-216-071-00	METAL CHIP 8.2K 5% 1/10W	

Ref. No.	Part No.	Description	Remark
R55	1-216-075-00	METAL CHIP	12K 5% 1/10W (AEP, UK)
R56	1-216-075-00	METAL CHIP	12K 5% 1/10W (G, IT)
R57	1-216-073-00	METAL CHIP	10K 5% 1/10W
R58	1-216-066-00	METAL CHIP	5.1K 5% 1/10W
R59	1-216-065-00	METAL CHIP	4.7K 5% 1/10W
R60	1-216-065-00	METAL CHIP	4.7K 5% 1/10W
R61	1-216-115-00	METAL CHIP	560K 5% 1/10W
R62	1-216-115-00	METAL CHIP	560K 5% 1/10W
R63	1-216-049-00	METAL CHIP	1K 5% 1/10W
R64	1-216-049-00	METAL CHIP	1K 5% 1/10W
R65	1-216-073-00	METAL CHIP	10K 5% 1/10W
R66	1-216-073-00	METAL CHIP	10K 5% 1/10W
R67	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
R68	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
R69	1-216-025-00	METAL CHIP	100 5% 1/10W
R70	1-216-025-00	METAL CHIP	100 5% 1/10W
R71	1-216-089-00	METAL CHIP	47K 5% 1/10W
R72	1-216-073-00	METAL CHIP	10K 5% 1/10W
R73	1-216-073-00	METAL CHIP	10K 5% 1/10W
R74	1-216-013-00	METAL CHIP	33 5% 1/10W
R75	1-216-061-00	METAL CHIP	3.3K 5% 1/10W
R79	1-216-049-00	METAL CHIP	1K 5% 1/10W (AEP, UK)
R79	1-216-055-00	METAL CHIP	1.8K 5% 1/10W (G, IT)
< VARIABLE RESISTOR >			
RV51	1-238-601-11	RES. ADJ. CARBON 22K	
RV52	1-238-601-11	RES. ADJ. CARBON 22K	
< CONNECTOR >			
TP51	* 1-564-336-00	PIN. CONNECTOR 2P (AEP, UK)	
TP51	* 1-568-449-11	HOUSING. CONNECTOR (PC BOARD) 3P (G, IT)	
< CRYSTAL >			
X21	1-577-126-11	VIBRATOR. CRYSTAL	
X51	1-577-075-11	OSCILLATOR. CERAMIC 456kHz	

Note: The components identified by mark
 Δ or dotted line with mark Δ are
critical for safety.
Replace only with part number
specified.

Ref. No.	Part No.	Description	Remark
		MISCELLANEOUS *****	
5	1-590-907-11	WIRE. FLAT TYPE (20 CORE)	
6	1-590-908-11	WIRE. FLAT TYPE (20 CORE)	
52	1-590-906-11	WIRE. FLAT TYPE (19 CORE)	
59	1-690-035-11	WIRE. FLAT TYPE (19 CORE)	
120	1-590-530-11	WIRE. FLAT TYPE	
156	Δ 8-848-144-11	DEVICE. OPTICAL KSS-240A	
157	1-575-001-11	WIRE. FLAT TYPE (12 CORE)	
F901	Δ 1-532-078-00	FUSE. TIME-LAG T1A	
M101	X-4917-523-3	MOTOR ASSY (SPINDLE)	
M102	X-4917-504-1	MOTOR ASSY (SLED)	
M291	A-4608-362-A	MOTOR (L) ASSY	
T1	Δ 1-450-412-11	TRANSFORMER. POWER	

HARDWARE LIST

# 1	7-621-255-25	SCREW +PTT 2X4 (S)
# 2	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S
# 3	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S
# 4	7-682-547-04	SCREW +BVTT 3X6 (S)
# 5	7-685-650-79	SCREW +BVTP 3X16 TYPE2 IT-3
# 6	7-685-659-79	SCREW +BVTP 4X8 TYPE2 IT-3
# 7	7-685-234-19	SCREW +KTP 2.6X8 TYPE2NON-SLIT
# 8	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S
# 9	7-621-775-10	SCREW +B 2.6X4
# 10	7-624-105-04	STOP RING 2.3. TYPE -E
# 11	7-685-134-19	SCREW +BTP 2.6X8 TYPE2 N-S
# 12	7-621-255-15	SCREW +P 2X3
# 13	7-682-947-01	SCREW +PSW 3X6 (FORMER TYPE)
# 14	7-682-547-09	SCREW +B 3X6 (FORMER TYPE)
# 15	7-685-872-01	SCREW +BVTT 3X8